

HISTORY INFORMATION FOR THE FOLLOWING MANUAL:

SERVICE MANUAL

FIX2 CHASSIS

<u>MODEL NAME</u>	<u>REMOTE COMMANDER</u>	<u>DESTINATION</u>
KDL-52XBR4	RM-YD017	US/CND
KDL-52XBR5	RM-YD017	US/CND

ORIGINAL MANUAL ISSUE DATE: 8/2007

 :UPDATED ITEM

<u>REVISION DATE</u>	<u>SUBJECT</u>
8/2007	No revisions or updates are applicable at this time.
8/2007	Removed CN202 from AU Board Schematic and PWB (no fan in these models). Replaced pages 26 to 32.
9/2007	Updated Self Check illustration. Replaced page 11. Added PNs for LCD Panels and FB1 Boards for S/N 8,100,001 to 8,499,999 and 8,600,001 on up. Replaced page 78 & 80.
10/2007	Updated schematic diagrams to correct connector pins #s that were up side down. Replaced pages 26, 33, 36, 39, 41, 57, 68 & 71.
11/2007	Corrected P/N for FB1 Board on Exploded View. Replaced page 78. Added SN Ranges for FB1 Boards on Electrical Parts List. Replaced page 98.
1/2008	Added PNs for Balancer Boards for LCD panel. Replaced page 80.

LCD DIGITAL COLOR TELEVISION

SONY®

SERVICE MANUAL

FIX2 CHASSIS

<u>MODEL NAME</u>	<u>REMOTE COMMANDER</u>	<u>DESTINATION</u>
KDL-52XBR4	RM-YD017	US/CND
KDL-52XBR5	RM-YD017	US/CND



KDL-52XBR5



RM-YD017

LCD DIGITAL COLOR TELEVISION

SONY®

TABLE OF CONTENTS

SECTION TITLE	PAGE	SECTION TITLE	PAGE
Specifications	4	DF4 Board Schematic Diagram	33
Warnings and Cautions	6	DF5 Board Schematic Diagram	36
Safety-Related Component Warning	7	FB1 Board Schematic Diagram (1 of 17)	39
Safety Check-Out	9	FB1 Board Schematic Diagram (2 of 17)	40
Self-Diagnostic Function	10	FB1 Board Schematic Diagram (3 of 17)	41
SECTION 1: DISASSEMBLY	12	FB1 Board Schematic Diagram (4 of 17)	42
1-1. Rear Cover Removal	12	FB1 Board Schematic Diagram (5 of 17)	43
1-2. Arm (Bracket) and Stand Removal	12	FB1 Board Schematic Diagram (6 of 17)	44
1-3. Speaker Removal	13	FB1 Board Schematic Diagram (7 of 17)	45
1-4. HW2 Board Removal	13	FB1 Board Schematic Diagram (8 of 17)	46
1-5. H1 Board and H3 Board Removal	14	FB1 Board Schematic Diagram (9 of 17)	47
1-6. UB1 Board Removal	14	FB1 Board Schematic Diagram (10 of 17)	48
1-7. FB1 Board, AU Board, and H5 Board (For KDL-52XBR5 Only) Removal	15	FB1 Board Schematic Diagram (11 of 17)	49
1-8. TUU2 Board Removal	15	FB1 Board Schematic Diagram (12 of 17)	50
1-9. GF2 Board, and DF4 Board and DF5 Board Removal	16	FB1 Board Schematic Diagram (13 of 17)	51
1-10. H4 Board and AC Inlet Removal	16	FB1 Board Schematic Diagram (14 of 17)	52
1-11. Stay Removal	17	FB1 Board Schematic Diagram (15 of 17)	53
1-12. LCD Panel Removal	17	FB1 Board Schematic Diagram (16 of 17)	54
1-13. MT Inverter Board(s) Removal	18	FB1 Board Schematic Diagram (17 of 17)	55
SECTION 2: SERVICE ADJUSTMENTS	19	GF2 Board Schematic Diagram	57
2-1. Remote Adjustment Buttons and Indicators	19	H1 Board Schematic Diagram	59
2-2. Accessing Service Adjustments	19	H3 Board Schematic Diagram	61
2-3. Updating Model Information after Replacing the FB1 Board	21	H4 Board Schematic Diagram	63
SECTION 3: DIAGRAMS	22	H5 Board Schematic Diagram (KDL-52XBR5 ONLY)	65
3-1. Circuit Boards Location	22	HW2 Board Schematic Diagram (1 of 2)	67
3-2. Printed Wiring Boards and Schematic Diagrams Information	22	HW2 Board Schematic Diagram (2 of 2)	68
3-3. Block Diagram	24	TUU2 Board Schematic Diagram (1 of 2)	71
3-3-1. Connector Diagram	25	TUU2 Board Schematic Diagram (2 of 2)	72
3-4. Schematics and Supporting Information	26	3-5. Semiconductors	75
AU Board Schematic Diagram (1 of 6)	26	SECTION 4: EXPLODED VIEWS	76
AU Board Schematic Diagram (2 of 6)	27	4-1. Rear Cover Assembly and Stand Assembly	76
AU Board Schematic Diagram (3 of 6)	28	4-2. Speakers	77
AU Board Schematic Diagram (4 of 6)	29	4-3. Chassis	78
AU Board Schematic Diagram (5 of 6)	30	4-4. Connectors	79
AU Board Schematic Diagram (6 of 6)	31	4-5. Bezel Assembly and LCD Panel	80
		SECTION 5: ELECTRICAL PARTS LIST	81
		APPENDIX A: ENCRYPTION KEY COMPONENTS	A-1

SPECIFICATIONS

Power Requirements 120V-240V AC, 50/60Hz

Power Consumption (W)

In Use (Max) 320W

In Standby Less than 0.4W

VIDEO (IN) 1/2/3:

S Video (4-Pin Mini DIN (VIDEO 1 Only))

Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative

C: 0.286 Vp-p (Burst signal), 75 ohms

Video

1.0 Vp-p, 75ohms unbalanced, sync negative

Audio

500 mVrms (100% modulation)

Impedance: 47 kilohms

COMPONENT IN 1/2:

Y_PP_R (Component Video)

Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative

P_B: 0.7 Vp-p, 75 ohms

P_R: 0.7 Vp-p, 75 ohms

Signal format: 480i, 480p, 720p, 1080i, 1080p

AUDIO

500 mVrms (100% modulation)

Impedance: 47 kilohms

HDMI IN 1/2/3:

HDMI: Video: 480i, 480p, 720p, 1080i, 1080p, 1080/24p

Audio: Two channel linear PCM 32, 44.1 and 48 kHz, 16, 20 and 24 bits, Dolby Digital

AUDIO (for HDMI IN 1):

500 mVrms (100% modulation) (Fixed)

Impedance: 47 kilohms

AUDIO OUT:

500 mVrms (100% modulation) (Fixed)

1 Vrms at the maximum volume setting (Variable)

DIGITAL OUT (OPTICAL):

Optical Digital Audio Output (PCM/Dolby digital)

PC IN:

D-sub 15-pin, analog RGB, 0.7 Vp-p, 75 ohms, positive

PC AUDIO INPUT:

Stereo mini jack, 500 mVrms 1(100% modulation)

Impedance: 47 kilohms

HEADPHONES:

Stereo mini jack

Impedance: ≥16 ohms

REMOTE:

RS232C, D-sub 9-pin (KDL-52XBR5 Only)

Trademark Information



As an ENERGY STAR® Partner, Sony Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

ENERGY STAR® is a U.S. registered mark.

Blu-ray Disc is a trademark.



“BRAVIA” and BRAVIA, BRAVIA ENGINE EX, “XMB” and “XrossMediaBar”, S-Force, BRAVIA Theatre Sync, R, DM^x, BRAVIA Internet Video Link Ready and “PS3” are trademarks or registered marks of Sony Corporation and/or Sony Computer Entertainment Inc.



This TV is manufactured under license from Dolby Laboratories. “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.



This TV incorporates High-Definition Multimedia Interface (HDMI™) technology. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Design and specifications are subject to change without notice.

	KDL-52XBR4	KDL-52XBR5
Speakers		
Output	11W + 11W	
Full Range	(4) 2 X 4 ¹ / ₄ inches (4) 50 X 105 mm	
Tweeter	(2) 1 ⁵ / ₈ inches (2) 40 mm	
Dimensions (W x H x D)		
with stand	55 ³ / ₄ x 35 ¹ / ₈ x 15 ¹ / ₈ inches 1415 x 890 x 384 mm	
without stand	55 ³ / ₄ x 32 ⁵ / ₈ x 4 ⁷ / ₈ inches 1415 x 827 x 123 mm	55 ³ / ₄ x 32 ⁵ / ₈ x 5 inches 1415 x 827 x 125 mm
wall-mount hole pattern	400 x 300 mm	
Mass		
with stand	108 lbs. 49 kg	
without stand	93 lbs. 42 kg	

All measurements are approximations.

Television system

NTSC American TV Standard
ATSC (8VSB terrestrial) ATSC compliant 8VSB
QAM on cable ANSI/SCTE 07 2000

Channel coverage

Analog
2-69 Terrestrial
1-125 Cable
Digital
2-69 Terrestrial
1-135 Cable

Antenna

75-ohm external terminal for VHF/UHF

Panel System

LCD (Liquid Crystal Display) Panel

Display Resolution (horizontal x vertical):

1,920 dots x 1,080 lines

Screen Size (measured diagonally)

KDL-52XBR4/52XBR5 - ~52 inches

Supplied Accessories

Remote Commander RM-YD017
Two Size AA (R6) Batteries
75-ohm coaxial cable
AC Power Cord
HD15-HD15 Cable
Support Belt (Lock Assy, Rudder) Securing Screw,
and Wood Screw
(See Bag Assy, Rudder Lock in the Accessories and Packing
section of the Electrical Parts List in this manual.)
Cable Holder (1 attached to the TV)
Operating Instructions
Quick Setup Guide
Warranty Card

Optional Accessories

Headphones Plug Adaptor
Connecting Cables
Wall-Mount Bracket
SU-WL500

WARNINGS AND CAUTIONS

CAUTION


These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

CARRYING THE TV


KDL-52XBR4/52XBR5

To avoid dropping the TV and causing serious injury, be sure to follow these guidelines:

- ☐ Before carrying the TV, disconnect all cables.
- ☐ Carrying the large size TV requires two or more people.
- ☐ When you carry the TV, place your hand as illustrated and hold it securely. Do not put stress on the LCD panel.

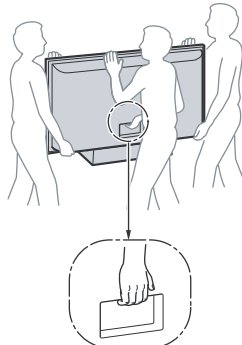

- ☐ When lifting or moving the TV, hold it firmly from the bottom. Place your palm directly under the panel.

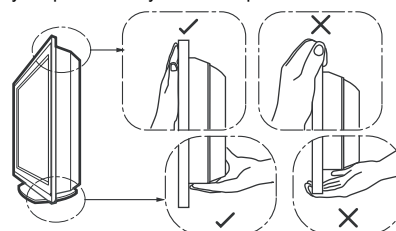

- ☐ When carrying, do not subject the TV to shocks or vibration, or excessive force.

WARNING!!

An isolation transformer should be used during any service to avoid possible shock hazard, because of live chassis. The chassis of this receiver is directly connected to the ac power line.



SAFETY-RELATED COMPONENT WARNING!!

Components identified by shading and ⚠ mark on the schematic diagrams, exploded views, and in the parts list are critical for safe operation. Replace these components with Sony parts whose part numbers appear as shown in this manual or in supplements published by Sony. Circuit adjustments that are critical for safe operation are identified in this manual. Follow these procedures whenever critical components are replaced or improper operation is suspected.

ATTENTION!!


Ces instructions de service sont à l'usage du personnel de service qualifié seulement. Pour prévenir le risque de choc électrique, ne pas faire l'entretien autre que celui contenu dans le Mode d'emploi à moins que vous soyez qualifié faire ainsi.

POUR TRANSPORTER LE TÉLÉVISEUR


KDL-52XBR4/52XBR5

Assurez-vous de suivre ces consignes pour éviter de laisser tomber le téléviseur et de provoquer des blessures graves :

- ☐ Avant de transporter le téléviseur, débranchez tous les câbles.
- ☐ Le transport du téléviseur doit être effectué par au moins deux personnes.
- ☐ Lorsque vous le transportez, placez vos mains tel que cela est illustré et tenez solidement l'appareil. N'appliquez pas de pression sur l'écran ACL.

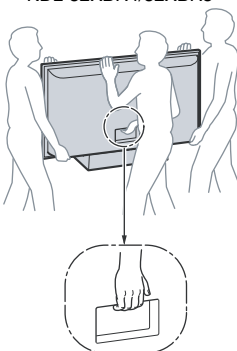

- ☐ Lorsque vous levez ou déplacez le téléviseur, assurez-vous de tenir solidement de la base. Placez la paume des mains directement sous le panneau.

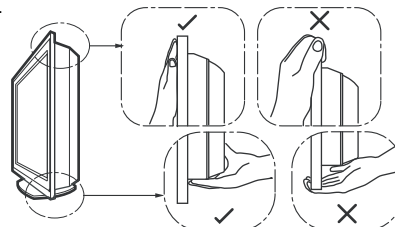

- ☐ Lorsque vous transportez le téléviseur, ne le soumettez pas à des chocs ou vibrations, ni à une force excessive.

Afin d'éviter tout risque d'électrocution provenant d'un châssis sous tension, un transformateur d'isolement doit être utilisé lors de tout dépannage. Le châssis de ce récepteur est directement raccordé à l'alimentation du secteur.



ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!

Les composants identifiés par une trame et par une marque ⚠ sur les schémas de principe, les vues explosées et les listes de pièces sont d'une importance critique pour la sécurité du fonctionnement. Ne les remplacer que par des composants Sony dont le numéro de pièce est indiqué dans le présent manuel ou dans des suppléments publiés par Sony. Les réglages de circuit dont l'importance est critique pour la sécurité du fonctionnement sont identifiés dans le présent manuel. Suivre ces procédures lors de chaque remplacement de composants critiques, ou lorsqu'un mauvais fonctionnement suspecte.

SAFETY-RELATED COMPONENT WARNING

There are critical components used in LCD color TVs that are important for safety. These components are identified with shading and \triangle mark on the schematic diagrams and the electrical parts list. It is essential that these critical parts be replaced only with the part number specified in the electrical parts list to prevent electric shock, fire, or other hazard.

NOTE: Do not modify the original design without obtaining written permission from the manufacturer or you will void the original parts and labor guarantee.

USE CAUTION WHEN HANDLING THE LCD PANEL


When repairing the LCD panel, be sure you are grounded by using a wrist band.

When installing the LCD panel on a wall, the LCD panel must be secured using the 4 mounting holes on the rear cover.

To avoid damaging the LCD panel:


- do not press on the panel or frame edge to avoid the risk of electric shock.
- do not scratch or press on the panel with any sharp objects.
- do not leave the module in high temperatures or in areas of high humidity for an extended period of time.
- do not expose the LCD panel to direct sunlight.
- avoid contact with water. It may cause a short circuit within the module.
- disconnect the AC adapter when replacing the backlight (CCFL) or inverter circuit.
(High voltage occurs at the inverter circuit at 650Vrms.)
- always clean the LCD panel with a soft cloth material.
- use care when handling the wires or connectors of the inverter circuit. Damaging the wires may cause a short.
- protect the panel from ESD to avoid damaging the electronic circuit (C-MOS).

LEAKAGE CURRENT HOT CHECK CIRCUIT

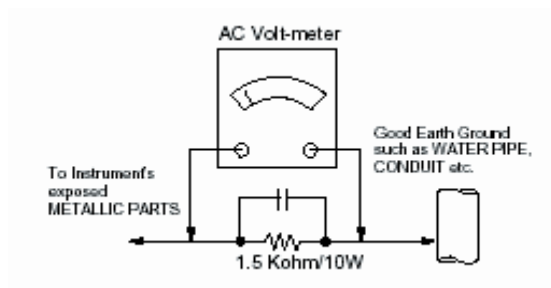

example 1

The circuit boards used in these models have been processed using Lead Free Solder. The boards are identified by the LF logo located close to the board designation e.g. H1 etc [see example]. The servicing of these boards requires special precautions to be taken as outlined below.

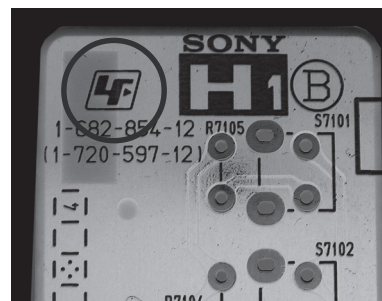

It is strongly recommended to use Lead Free Solder material in order to guarantee optimal quality of new solder joints. Lead Free Solder is available under the following part numbers :

Part number	Diameter	Remarks
7-640-005-19	0.3mm	0.25Kg
7-640-005-20	0.4mm	0.50Kg
7-640-005-21	0.5mm	0.50Kg
7-640-005-22	0.6mm	0.25Kg
7-640-005-23	0.8mm	1.00Kg
7-640-005-24	1.0mm	1.00Kg
7-640-005-25	1.2mm	1.00Kg
7-640-005-26	1.6mm	1.00Kg

Due to the higher melting point of Lead Free Solder the soldering iron tip temperature needs to be set to 370 degrees centigrade. This requires soldering equipment capable of accurate temperature control coupled with a good heat recovery characteristics.

For more information on the use of Lead Free Solder, please refer to <http://www.sony-training.com>

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or touching high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instructions.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low voltage scale. The Simpson's 250 and Sanwa SH-63TRD are examples of passive VOMs that are suitable. Nearly all battery-operated digital multimeters that have a 2 VAC range are suitable (see Figure A).

How to Find a Good Earth Ground

A cold-water pipe is a guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms.

If a cold-water pipe is not accessible, connect a 60- to 100-watt trouble- light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side on the line; the lamp should light at normal brilliance if the screw is at ground potential (see Figure B).

Leakage Test

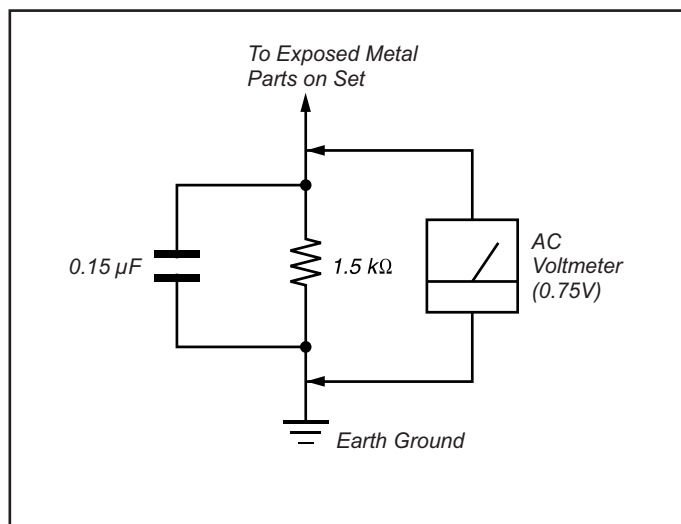


Figure A. Using an AC voltmeter to check AC leakage.


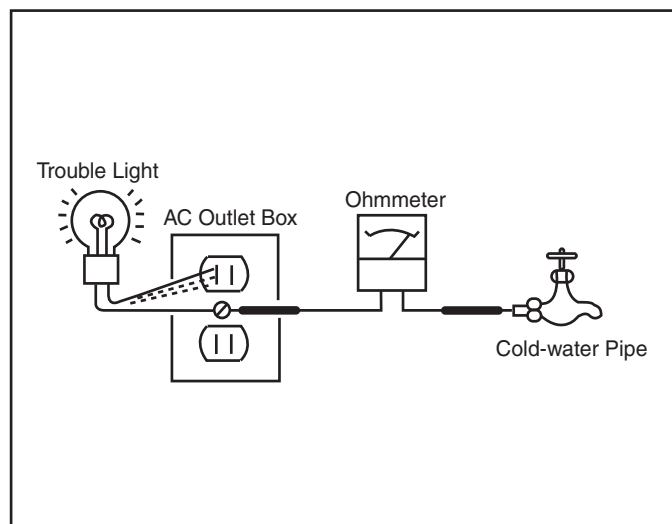


Figure B. Checking for earth ground.

SELF-DIAGNOSTIC FUNCTION

Self Diagnosis
Supported model

Control Buttons

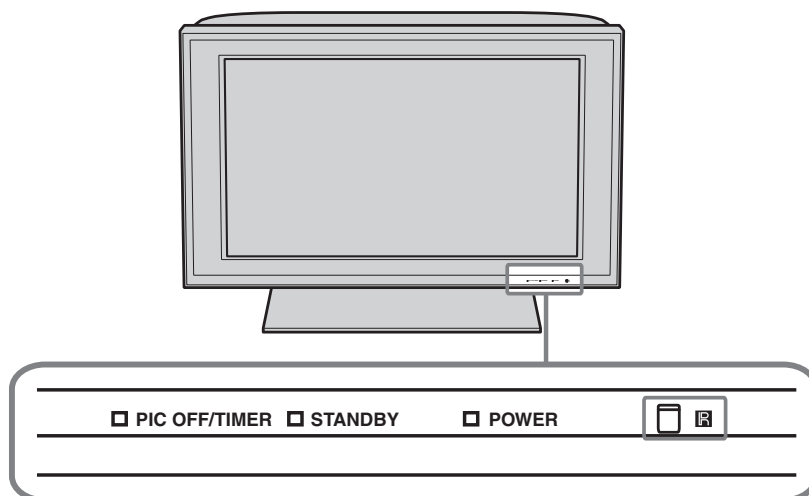


Description of LED Indicators

LED	LED Type	Description
POWER LED	Green LED	* Light when the TV set is on
STANDBY LED	Red LED	* Lights up in red when TV is in PC standby mode. * If LED blinks continuously, this may indicate that the TV needs servicing.
PIC OFF/ TIMER LED	Green or Orange LED	* Lights up in green when Picture Off is activated * Lights up in orange when the timer is set When timer is set, the LED remains lit even when the TV is turned off.

The units in this manual contain a self-diagnostic function. If an error occurs, the STANDBY LED automatically begins to flash. The number of times the LED flashes translates to a probable source of the problem. A definition of the STANDBY LED flash indicators is listed in the instruction manual for the user's knowledge and reference. If an error symptom is difficult to reproduce use the Remote Commander to display the record that is stored at the internal NVM to specify the cause.

- One flash is not used for self-diagnosis.

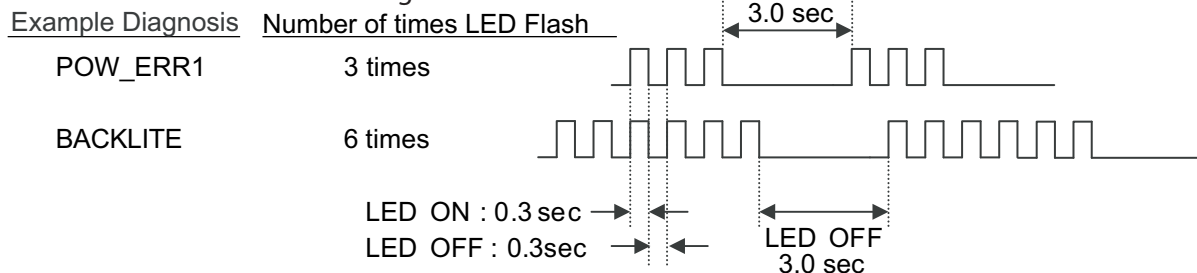

Diagnostic Indicators

When an error occurs, the STANDBY LED flashes a set number of times to indicate the possible cause of the problem. If there is more than one error, the LED will identify the first of the problem areas. If the errors occur simultaneously, the one that corresponds to the fewest flashes is identified first. (Results for all of the following diagnostic items are displayed on screen. No error has occurred if the screen displays a "00")


- TV must be in standby mode. (Power off).
- Press the following buttons on the Remote Commander within a second of each other:

[DISPLAY] → Channel [5] → Volume [4] → [TV POWER].

The Self Check list displays.

↑ This differs from accessing Service Adjustments.

Information Indicator displays time of last 3 events
(Not used in FIX2 models)

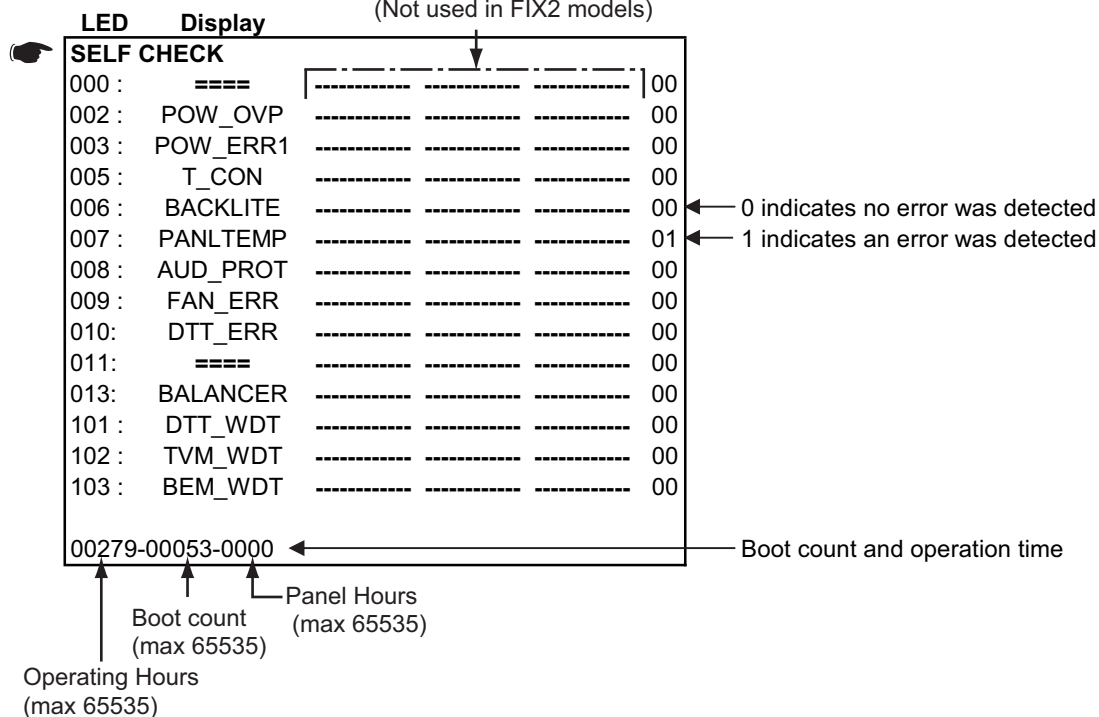

Contents

====
Power OVP
Power Error
T-CON Error
Backlight Error
Panel Temp Error
Audio Protector
Not Used in these models

====
Panel Error
WDT- Watch Dog Timers
(Watch Dog Timers
are used to track
micro processors,
not to record errors.)

Resetting the Diagnostic Indicators


After completing the repair of the set, reset the Self Check screen to set all the display results to "00".

- TV must be in standby mode. (Power off).
- Press [DISPLAY] → Channel [5] → Volume [4] → [TV POWER].
- Press Channel [8], then press Channel [0]. To exit press [TV POWER].

SECTION 1: DISASSEMBLY


1-1. REAR COVER REMOVAL

- ① Remove 2 screws from HOTEL Bracket
+BVTP 3X12 TYPE2 IT-3 (KDL-52XBR5 Only)
- ② Remove 2 screws from Terminals,
+BVTP 3X12 TYPE2 IT-3
- ③ Remove 2 screws from Rear Cover arm positions,
+PSW M5X12
- ④ Remove 19 screws from Rear Cover, +BVTP2 4X16

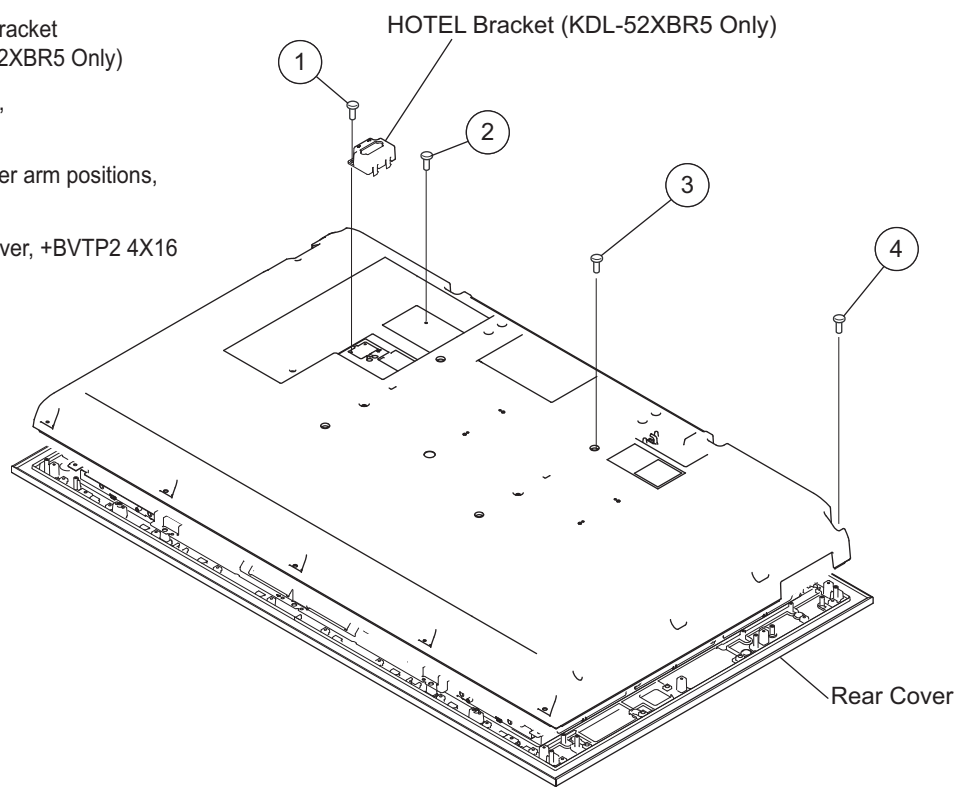


1-2. ARM (BRACKET) AND STAND REMOVAL

- ① Remove 4 screws from top of Arms (Bracket), +PSW M5X8
- ② Remove 4 screws from bottom of Arms (Bracket), +PSW M5X8
- ③ Remove 4 screws from Stand Holders and Stand, +PSW M5X12
- ④ Remove 4 screws, +BVST 4X8

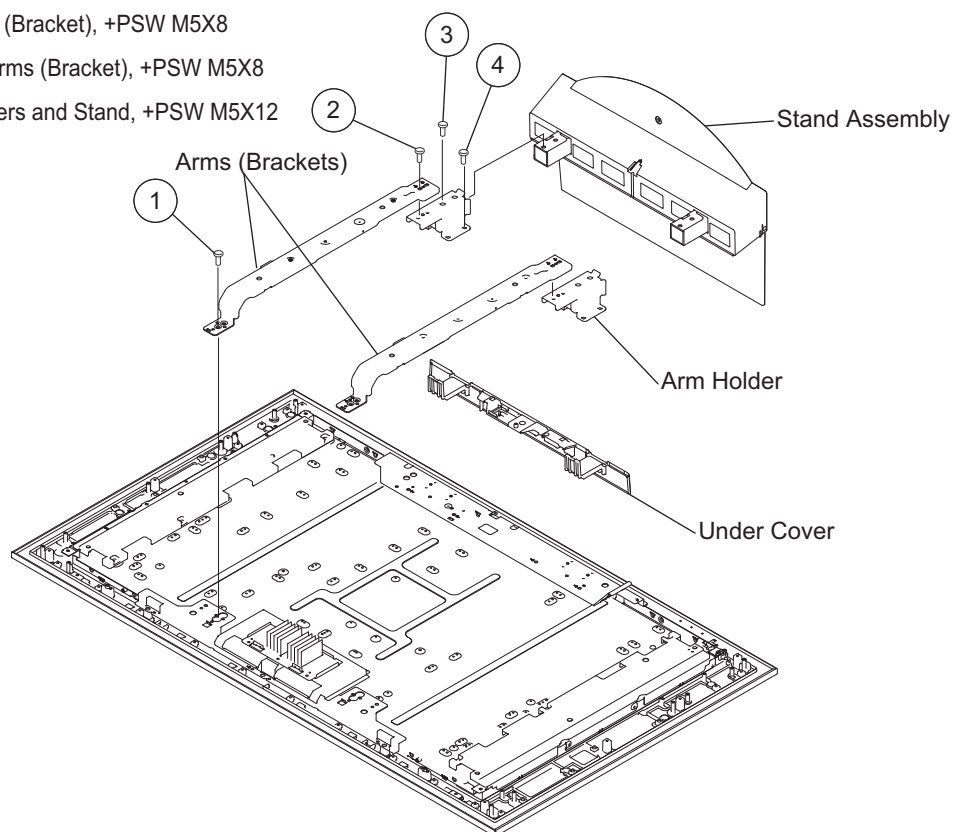


1-3. SPEAKER REMOVAL

- ① Remove 2 screws, +BWTP2 4X16
- ② Remove 2 screws, +PSW M3X5

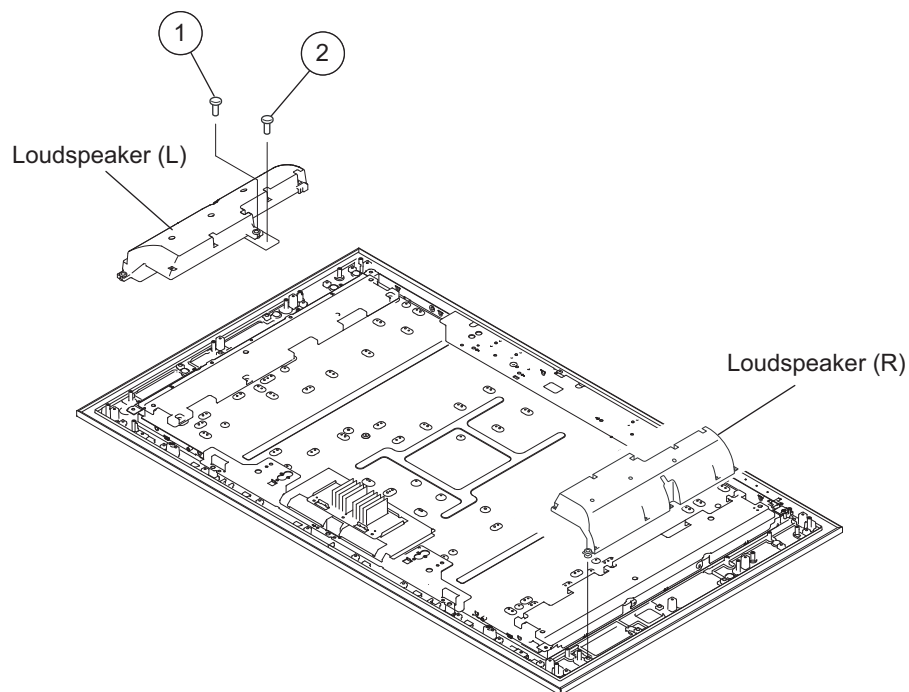


1-4. HW2 BOARD REMOVAL

- ① Remove 2 screws, +BVTP 3X12 TYPE2 IT-3
- ② Disconnect two connectors
- ③ Remove one screw, +PSW M3X5

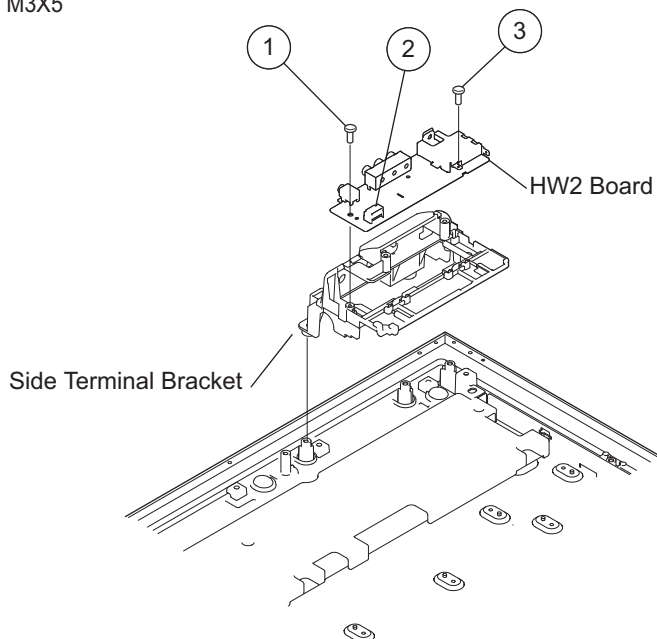


1-5. H1 BOARD AND H3 BOARD REMOVAL

- ① Disconnect one connector.
- ② Release hooks and remove H3 Board.
- ③ Remove one screw, +BVTP2 4X16
- ④ Disconnect one connector.
- ⑤ Release hooks and remove H1 Board.

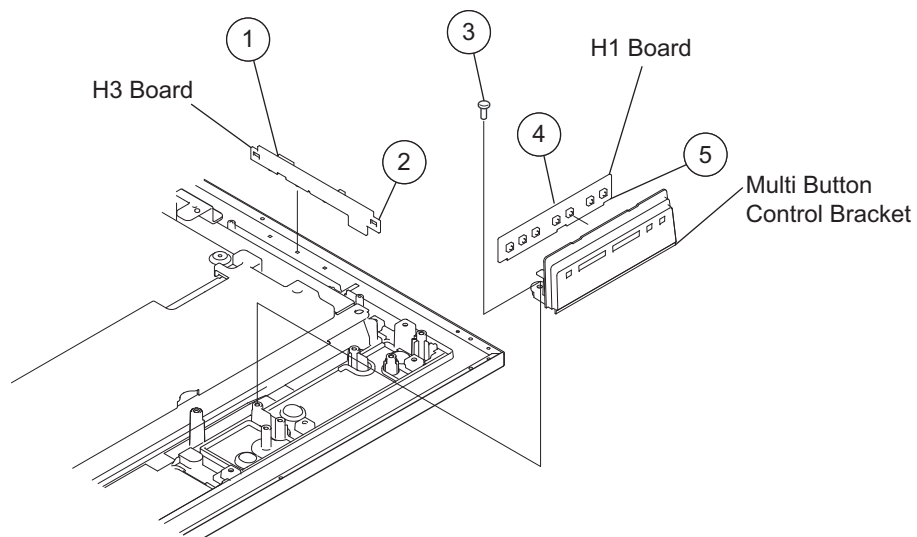


1-6. UB1 BOARD REMOVAL

- ① Remove 4 screws, +PSW 3X8
- ② Remove one screw, +PSW 3X8
- ③ Disconnect 2 connectors.

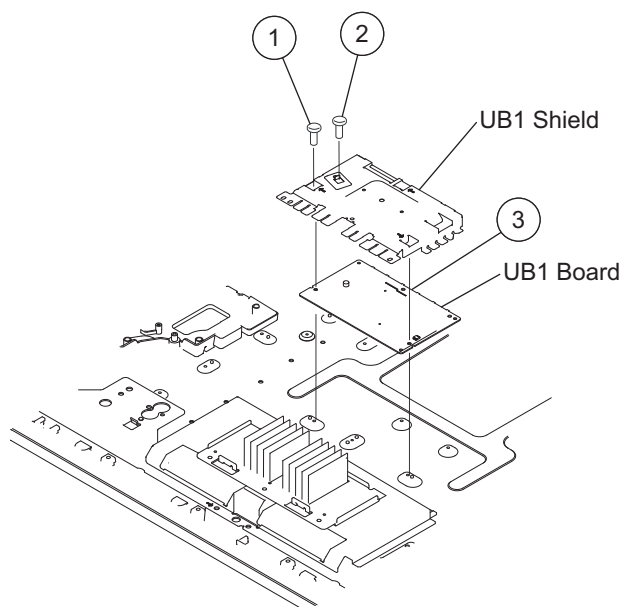


1-7. FB1 BOARD, AU BOARD, AND H5 BOARD (FOR KDL-52XBR5 ONLY) REMOVAL

- ① Slide out Card Bracket
- ② Remove 2 screws, +PSW M3X5
- ③ Remove 2 screws, HEX
- ④ Remove 4 screws, +BVST 3X8
- ⑤ Remove 7 screws, +BVST 3X8
- ⑥ Disconnect 7 connectors
- ⑦ Remove H5 Board
(For KDL-52XBR5 Only)
- ⑧ Disconnect 8 connectors
- ⑨ Remove 9 screws, +BVST 3X8
- ⑩ Remove 8 screws, +PSW M3X5

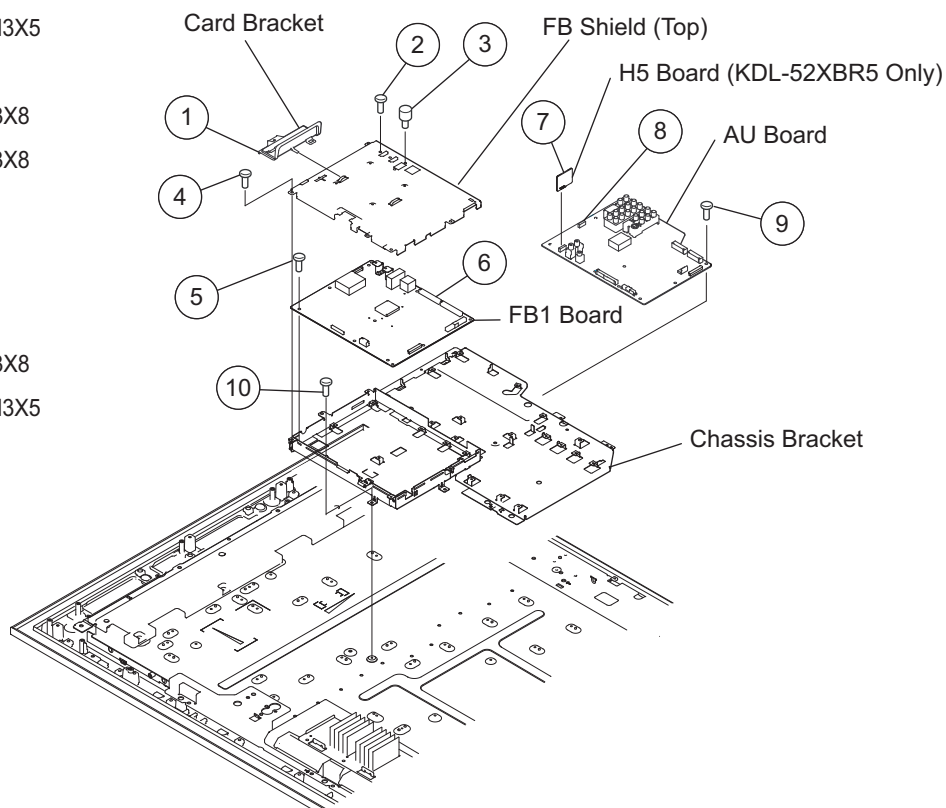


1-8. TUU2 BOARD REMOVAL

- ① Remove 2 screws, +BVST 3X8
- ② Remove one Hex. Nut from Tuner
- ③ Remove Tuner Bracket
- ④ Disconnect one connector
- ⑤ Remove 5 screws, +BVST 3X8
- ⑥ Remove 4 screws, +BVST 3X8
- ⑦ Remove one screw, +BVST 4X8

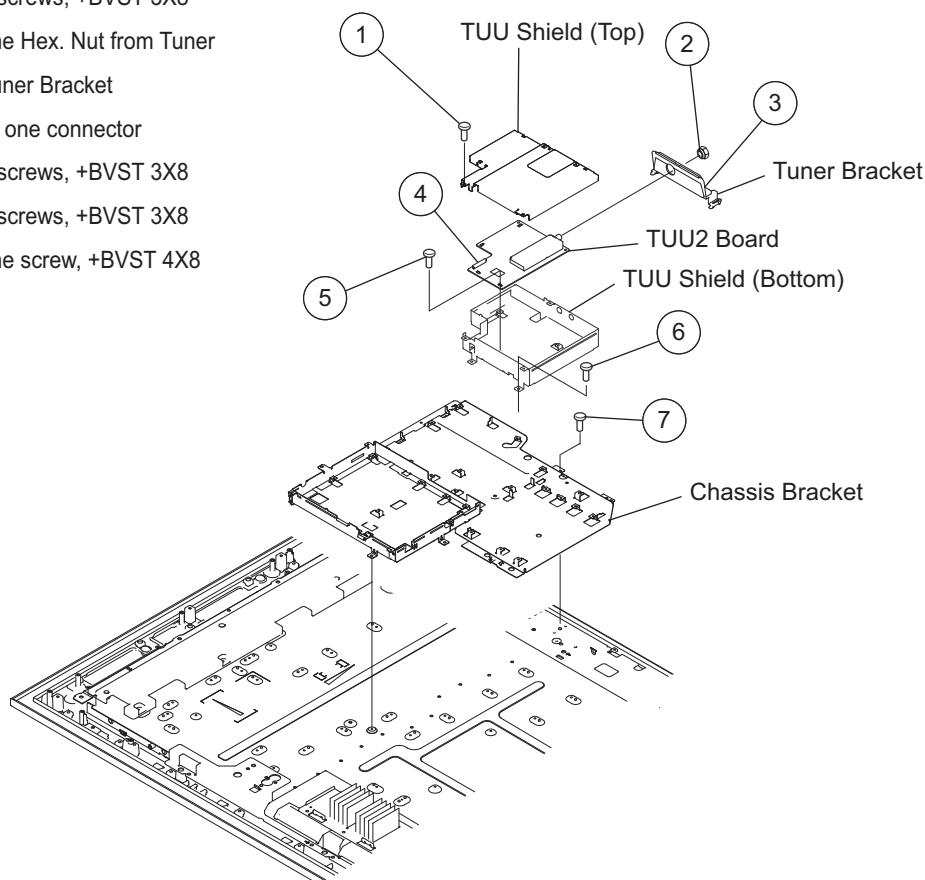


1-9. GF2 BOARD, AND DF4 BOARD AND DF5 BOARD REMOVAL

- ① Remove 5 screws, +PSW 3SG
- ② Disconnect 3 connectors
- ③ Disconnect 5 connectors
- ④ Remove 4 screws, +PSW 3SG
- ⑤ Disconnect 8 connectors
- ⑥ Remove 4 screws, +PSW 3SG

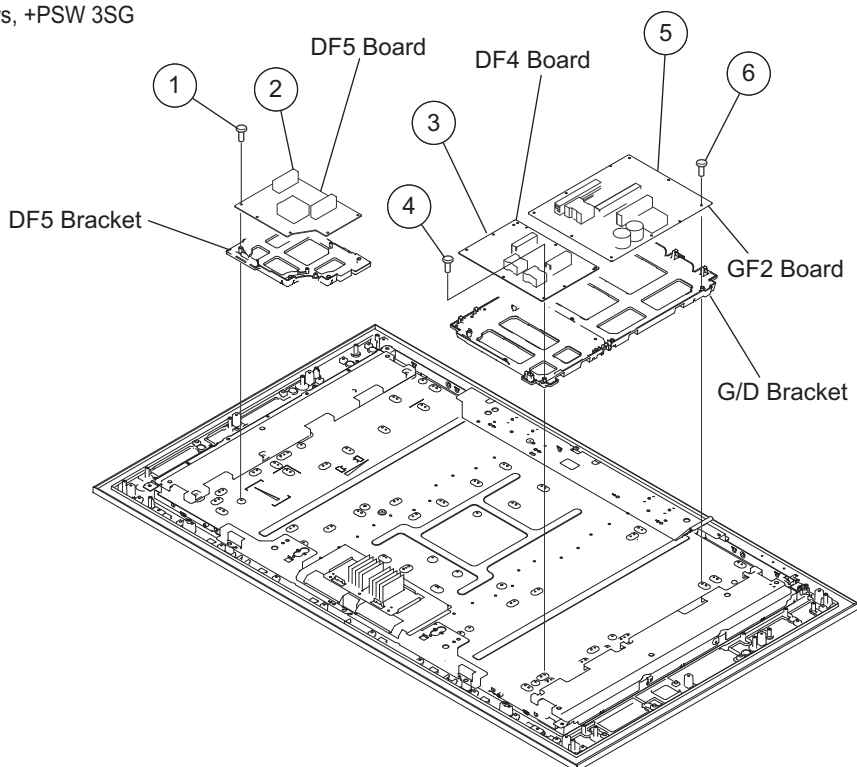


1-10. H4 BOARD AND AC INLET REMOVAL

- ① Disconnect one connector.
- ② Release hooks and remove H4 Board.
- ③ Remove 2 screws, +KTT 3X10 (S type)

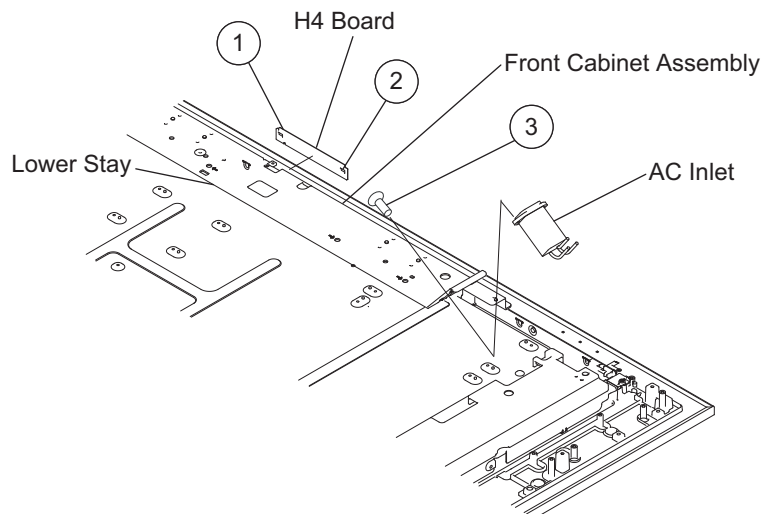


1-11. STAY REMOVAL

- ① Remove 3 Screws, +BVTP2 4X16
- ② Remove 2 Screws, +PSW M3X5
- ③ Remove 4 screws, +PSW M5X8

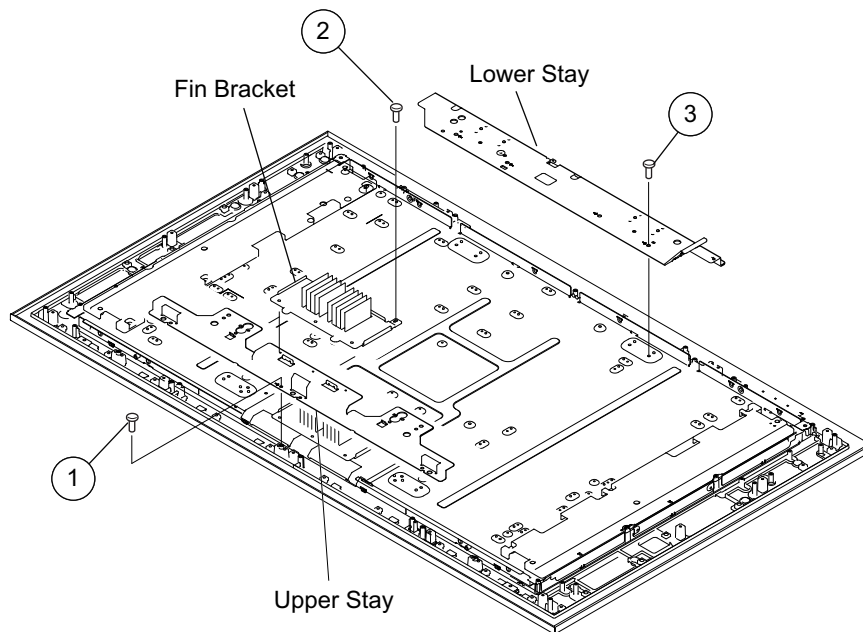

1-12. LCD PANEL REMOVAL

- ① Remove 4 screws, +BSW M5X12

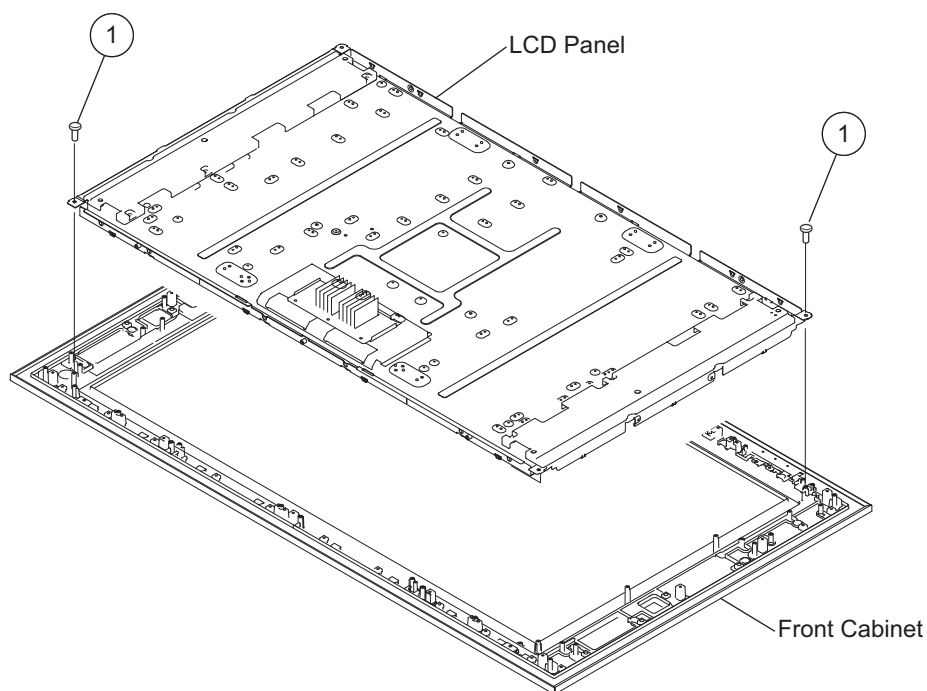


1-13. MT INVERTER BOARD(S) REMOVAL

CAUTION:

Be sure to identify the inverter cover screws before proceeding. **DO NOT** remove the screws securing the plastic strip holding the lamp sockets.

- ① Remove screws securing the inverter cover.
- ② Disconnect the 2 connectors from the board you are removing that connects the upper inverter board to the lower inverter board.
- ③ To remove the lower board, disconnect 1 connector.
To remove the upper board, disconnect 2 connectors.


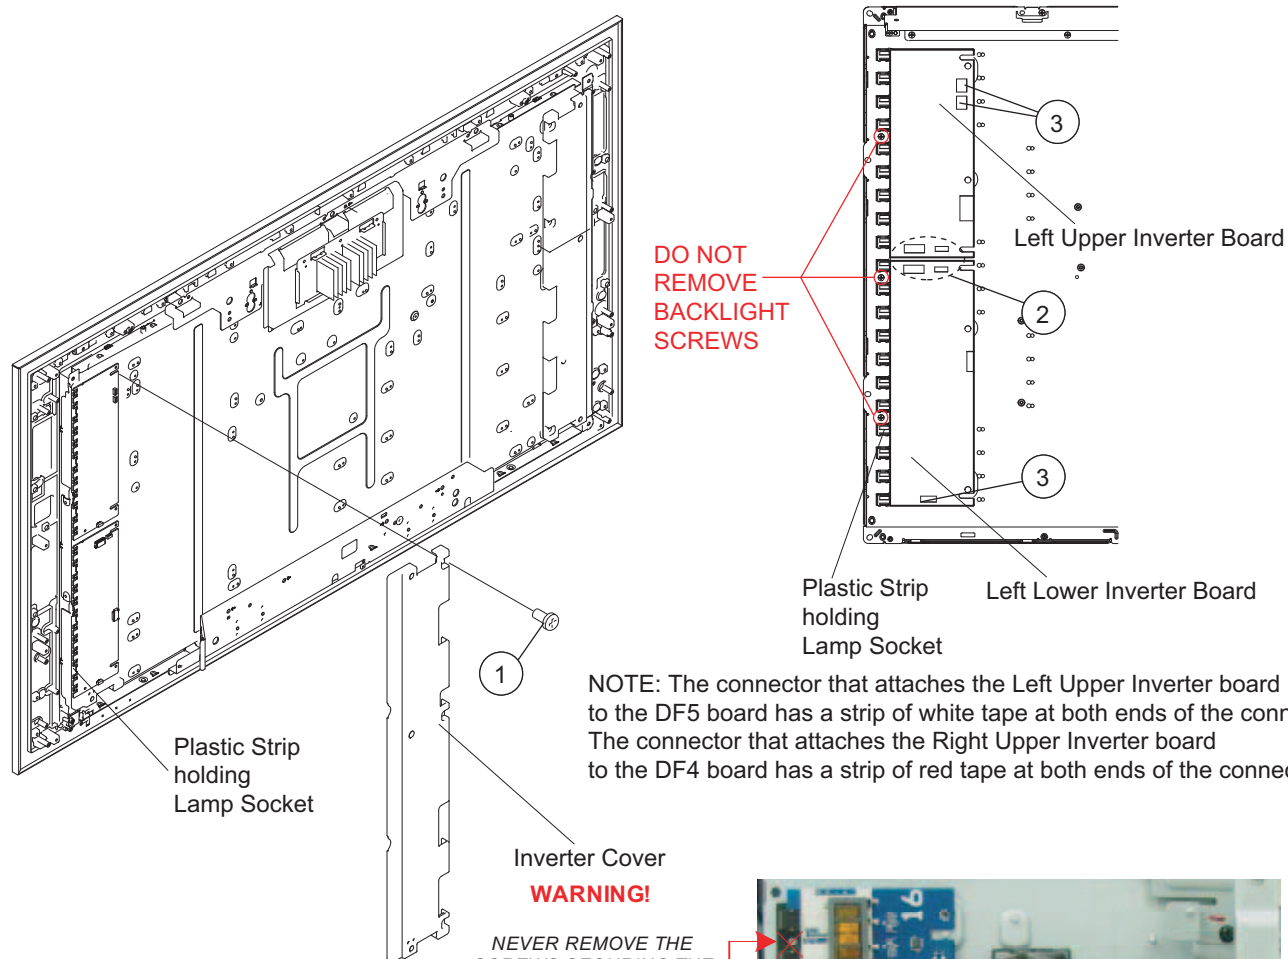


INVERTER BOARD REMOVAL

Only remove the screws securing the inverter cover which may be metal or plastic. The remaining plastic strip contains sockets for the fluorescent backlights and should never be loosened. The backlights will pop out of the sockets and/or break the backlight requiring a LCD panel replacement. The example shown is a 32" model but applies to all models.


WARNING!

NEVER REMOVE THE SCREWS SECURING THE PLASTIC STRIP HOLDING THE LAMP SOCKETS. DAMAGE TO THE BACKLIGHT TUBES WILL OCCUR!

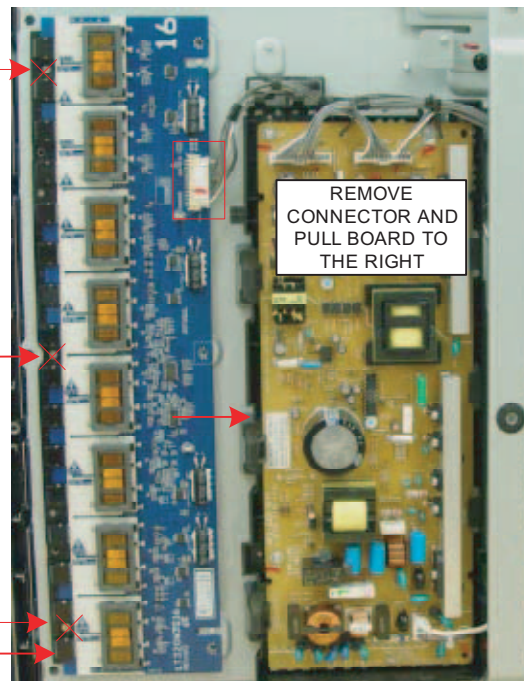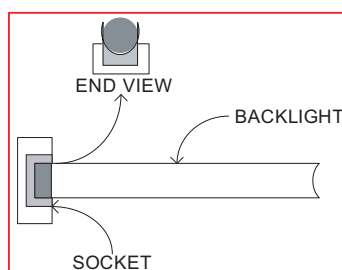

SECTION 2: SERVICE ADJUSTMENTS


2-1. REMOTE ADJUSTMENT BUTTONS AND INDICATORS

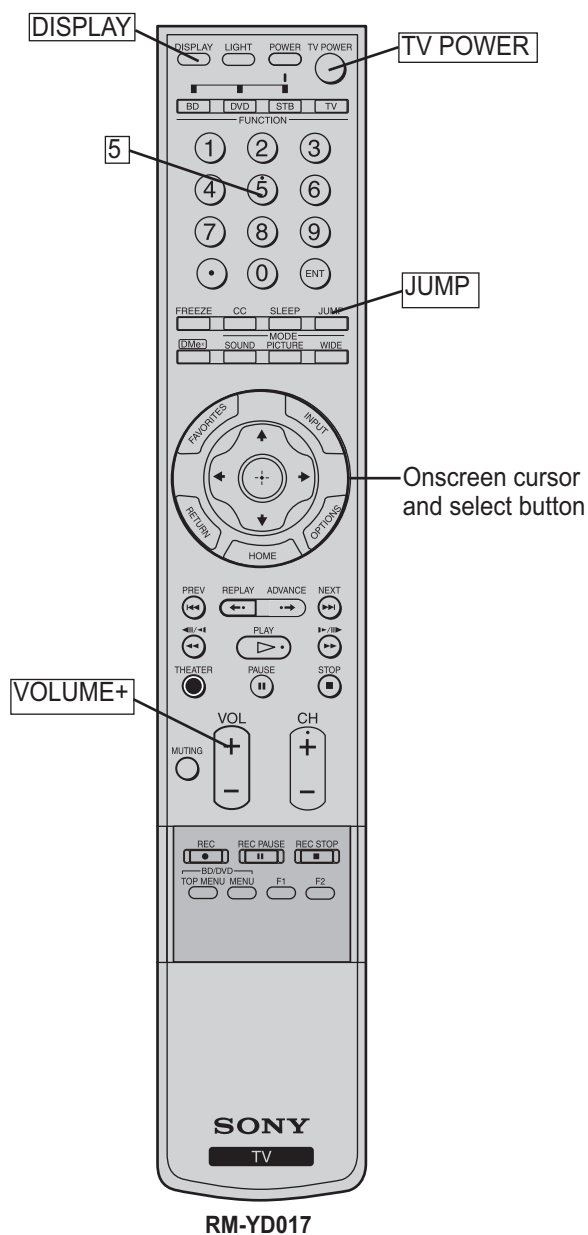

2-2. ACCESSING SERVICE ADJUSTMENTS

To adjust various set features, use the Remote Commander to put the set into service mode to display the service menus.

1. TV must be in standby mode. (Power off).
2. Press the following buttons on the Remote Commander within a second of each other:
[DISPLAY] → Channel 5 → Volume + → [TV POWER].
 The first service menu (TV) displays.
3. To display the service menu that contains the category you want to adjust, press **[JUMP]** on the Remote Commander.

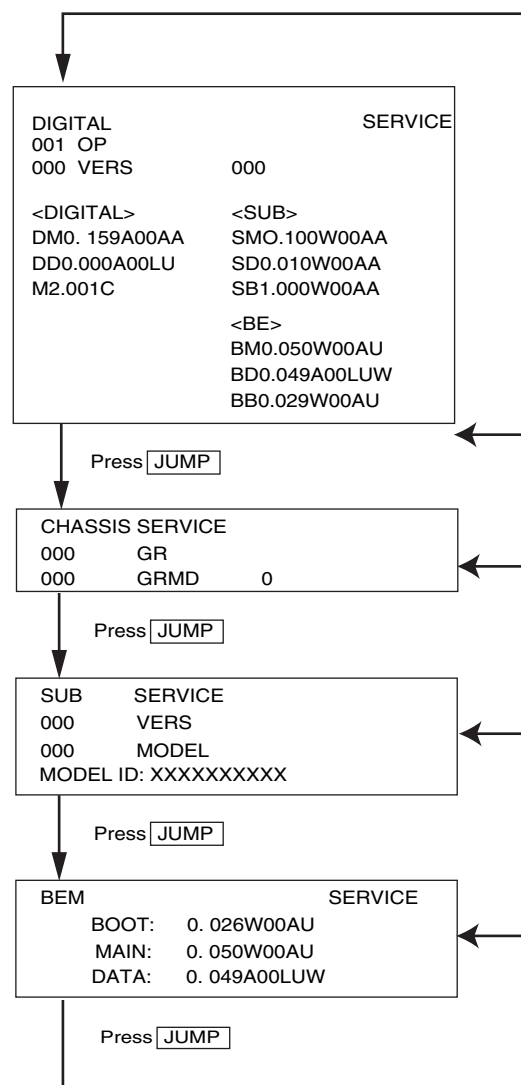

The screen displays the first category in the selected service menu.

4. To change the **category**, press **2** or **5** on the Remote Commander.

Note: Pressing **2** or **5** only changes the categories within the service menu displayed.


To change a category on one of the other service menus, press the **JUMP** button until the correct service menu is displayed.

5. To change the **adjustment item**, press **1** or **4** on the Remote Commander.

6. To change the **data value**, press **3** or **6** on the Remote Commander.

7. To write into memory, press **MUTING** then **0** on the Remote Commander.

8. To exit service mode, turn the power off.

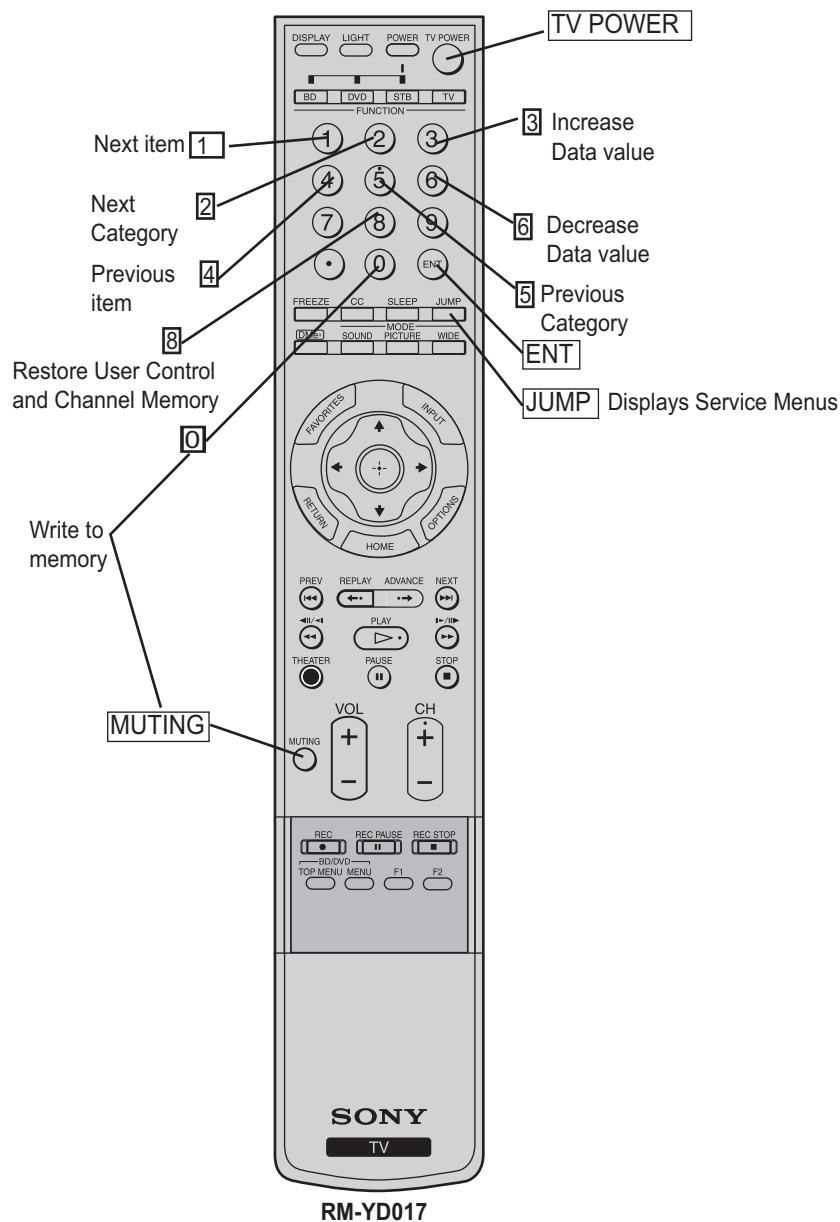

2-3. UPDATING MODEL INFORMATION
AFTER REPLACING THE FB1 BOARD

Complete the following steps to reset the model information to the correct size after replacing the FB1 Board.

1. Access the Service Menu by pressing the following buttons on the Remote Commander within a second:

DISPLAY → Channel 5 → Volume + → TV POWER.
The service menu displays.

2. Press the JUMP button until the BEM micro service menu displays.

BEM	SERVICE
BOOT:	0. 026W00AU
MAIN:	0. 050W00AU
DATA:	0. 049A00LUW

3. Press 2 until the 0001 MODEL_INFO category displays.


BEM	SERVICE
0001	MODEL_INFO
0001	PANEL_SIZE 0
DIFF	1

Update according to panel size

4. Press 3 to increase the value to 2.
5. To write to memory, press MUTING then 0 on the Remote Commander.
8. To exit service mode, turn the power off.

SECTION 3: DIAGRAMS

3-1. CIRCUIT BOARDS LOCATION

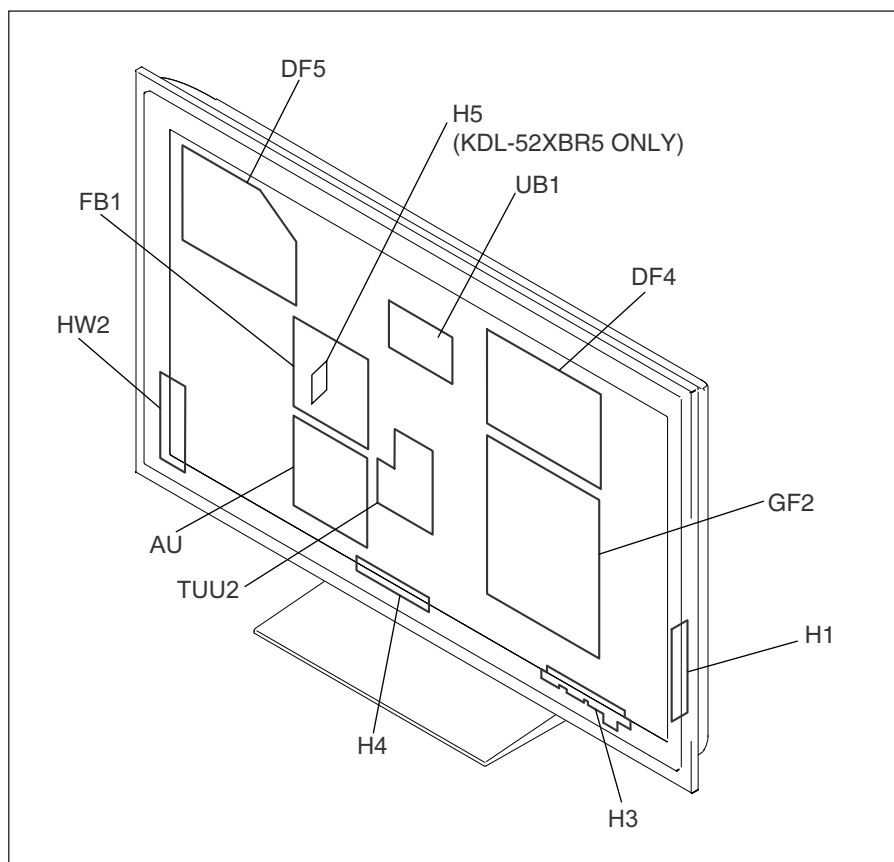

3-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS INFORMATION

All capacitors are in μF unless otherwise noted. pF : μF 50V or less are not indicated except for electrolytics and tantalums.

All electrolytics are in 50V unless otherwise specified.

All resistors are in ohms. $\text{k}\Omega=1000\Omega$, $\text{M}\Omega=1000\text{k}\Omega$

Indication of resistance, which does not have one for rating electrical power, is as follows: Pitch : 5mm


Rating electrical power : $\frac{1}{4}\text{W}$

$\frac{1}{4}\text{W}$ in resistance, $\frac{1}{10}\text{W}$ and $\frac{1}{16}\text{W}$ in chip resistance.

 : nonflammable resistor

 : fusible resistor

 : internal component

 : panel designation and adjustment for repair

 : earth ground

 : earth-chassis

All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

Readings are taken with a color-bar signal input.

Readings are taken with a $10\text{M}\Omega$ digital multimeter.

Voltages are DC with respect to ground unless otherwise noted.

Voltage variations may be noted due to normal production tolerances.

All voltages are in V.


S : Measurement impossibility.


 : B+line.


 : B-line. (Actual measured value may be different).


 : signal path. (RF)


Circled numbers are waveform references.

The components identified by shading and  symbol are critical for safety. Replace only with part number specified.

The symbol  indicates a fast operating fuse and is displayed on the component side of the board. Replace only with fuse of the same rating as marked.

Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Le symbole  indique une fusible à action rapide. Doit être remplacé par une fusible de même valeur, comme marqué.

NOTE: The components identified by a red outline and a  mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced.
See Appendix A: Encryption Key Components in the back of this manual.

REFERENCE INFORMATION

RESISTOR

: RN METAL FILM

: RC SOLID

: FPRD NONFLAMMABLE CARBON

: FUSE NONFLAMMABLE FUSIBLE

: RW NONFLAMMABLE WIREWOUND

: RS NONFLAMMABLE METAL OXIDE

: RB NONFLAMMABLE CEMENT

: ※ ADJUSTMENT RESISTOR

CAPACITOR

: TA TANTALUM

: PS STYROL

: PP POLYPROPYLENE

: PT MYLAR

: MPS METALIZED POLYESTER

: MPP METALIZED POLYPROPYLENE

: ALB BIPOLAR

: ALT HIGH TEMPERATURE

: ALR HIGH RIPPLE

COIL

: LF-8L MICRO INDUCTOR


Terminal name of semiconductors in silk screen
printed circuit (※)

	Device	Printed symbol	Terminal name	Circuit
1	Transistor		Collector Base Emitter	
2	Transistor		Collector Base Emitter	
3	Diode		Cathode Anode	
4	Diode		Cathode Anode (NC)	
5	Diode		Cathode Anode (NC)	
6	Diode		Common Anode Cathode	
7	Diode		Common Anode Cathode	
8	Diode		Common Anode Anode	
9	Diode		Common Anode Anode	
0	Diode		Common Cathode Cathode	
!i	Diode		Common Cathode Cathode	
!TM	Diode		Anode Anode Cathode Anode	
!£	Transistor (FET)		Drain Source Gate	
!Ç	Transistor (FET)		Drain Source Gate	
!?	Transistor (FET)		□ Source □ Drain □ Gate	
!§	Transistor		□ Emitter □ Collector □ Base	
!¶	Transistor		C2(B1)E1 E2(B2)C1	
!•	Transistor		C1(B2)E2 E1(B1)C2	
!a	Transistor		C1 B2 E2 E1 B1 C2	
@°	Transistor		C1 B2 E2 E1 B1 C2	
@ı	Transistor		E2 B1 E1 C2 C1(B2)	
@TM	Transistor		(B2) B1 E1 E2 C1 C2	
@£	Transistor		(B2) E2 E1 B1 C2 C1	
—	Discrete semiconductot			


(Chip semiconductors that are not actually used are included.)

Ver.1.6


3-3. BLOCK DIAGRAM

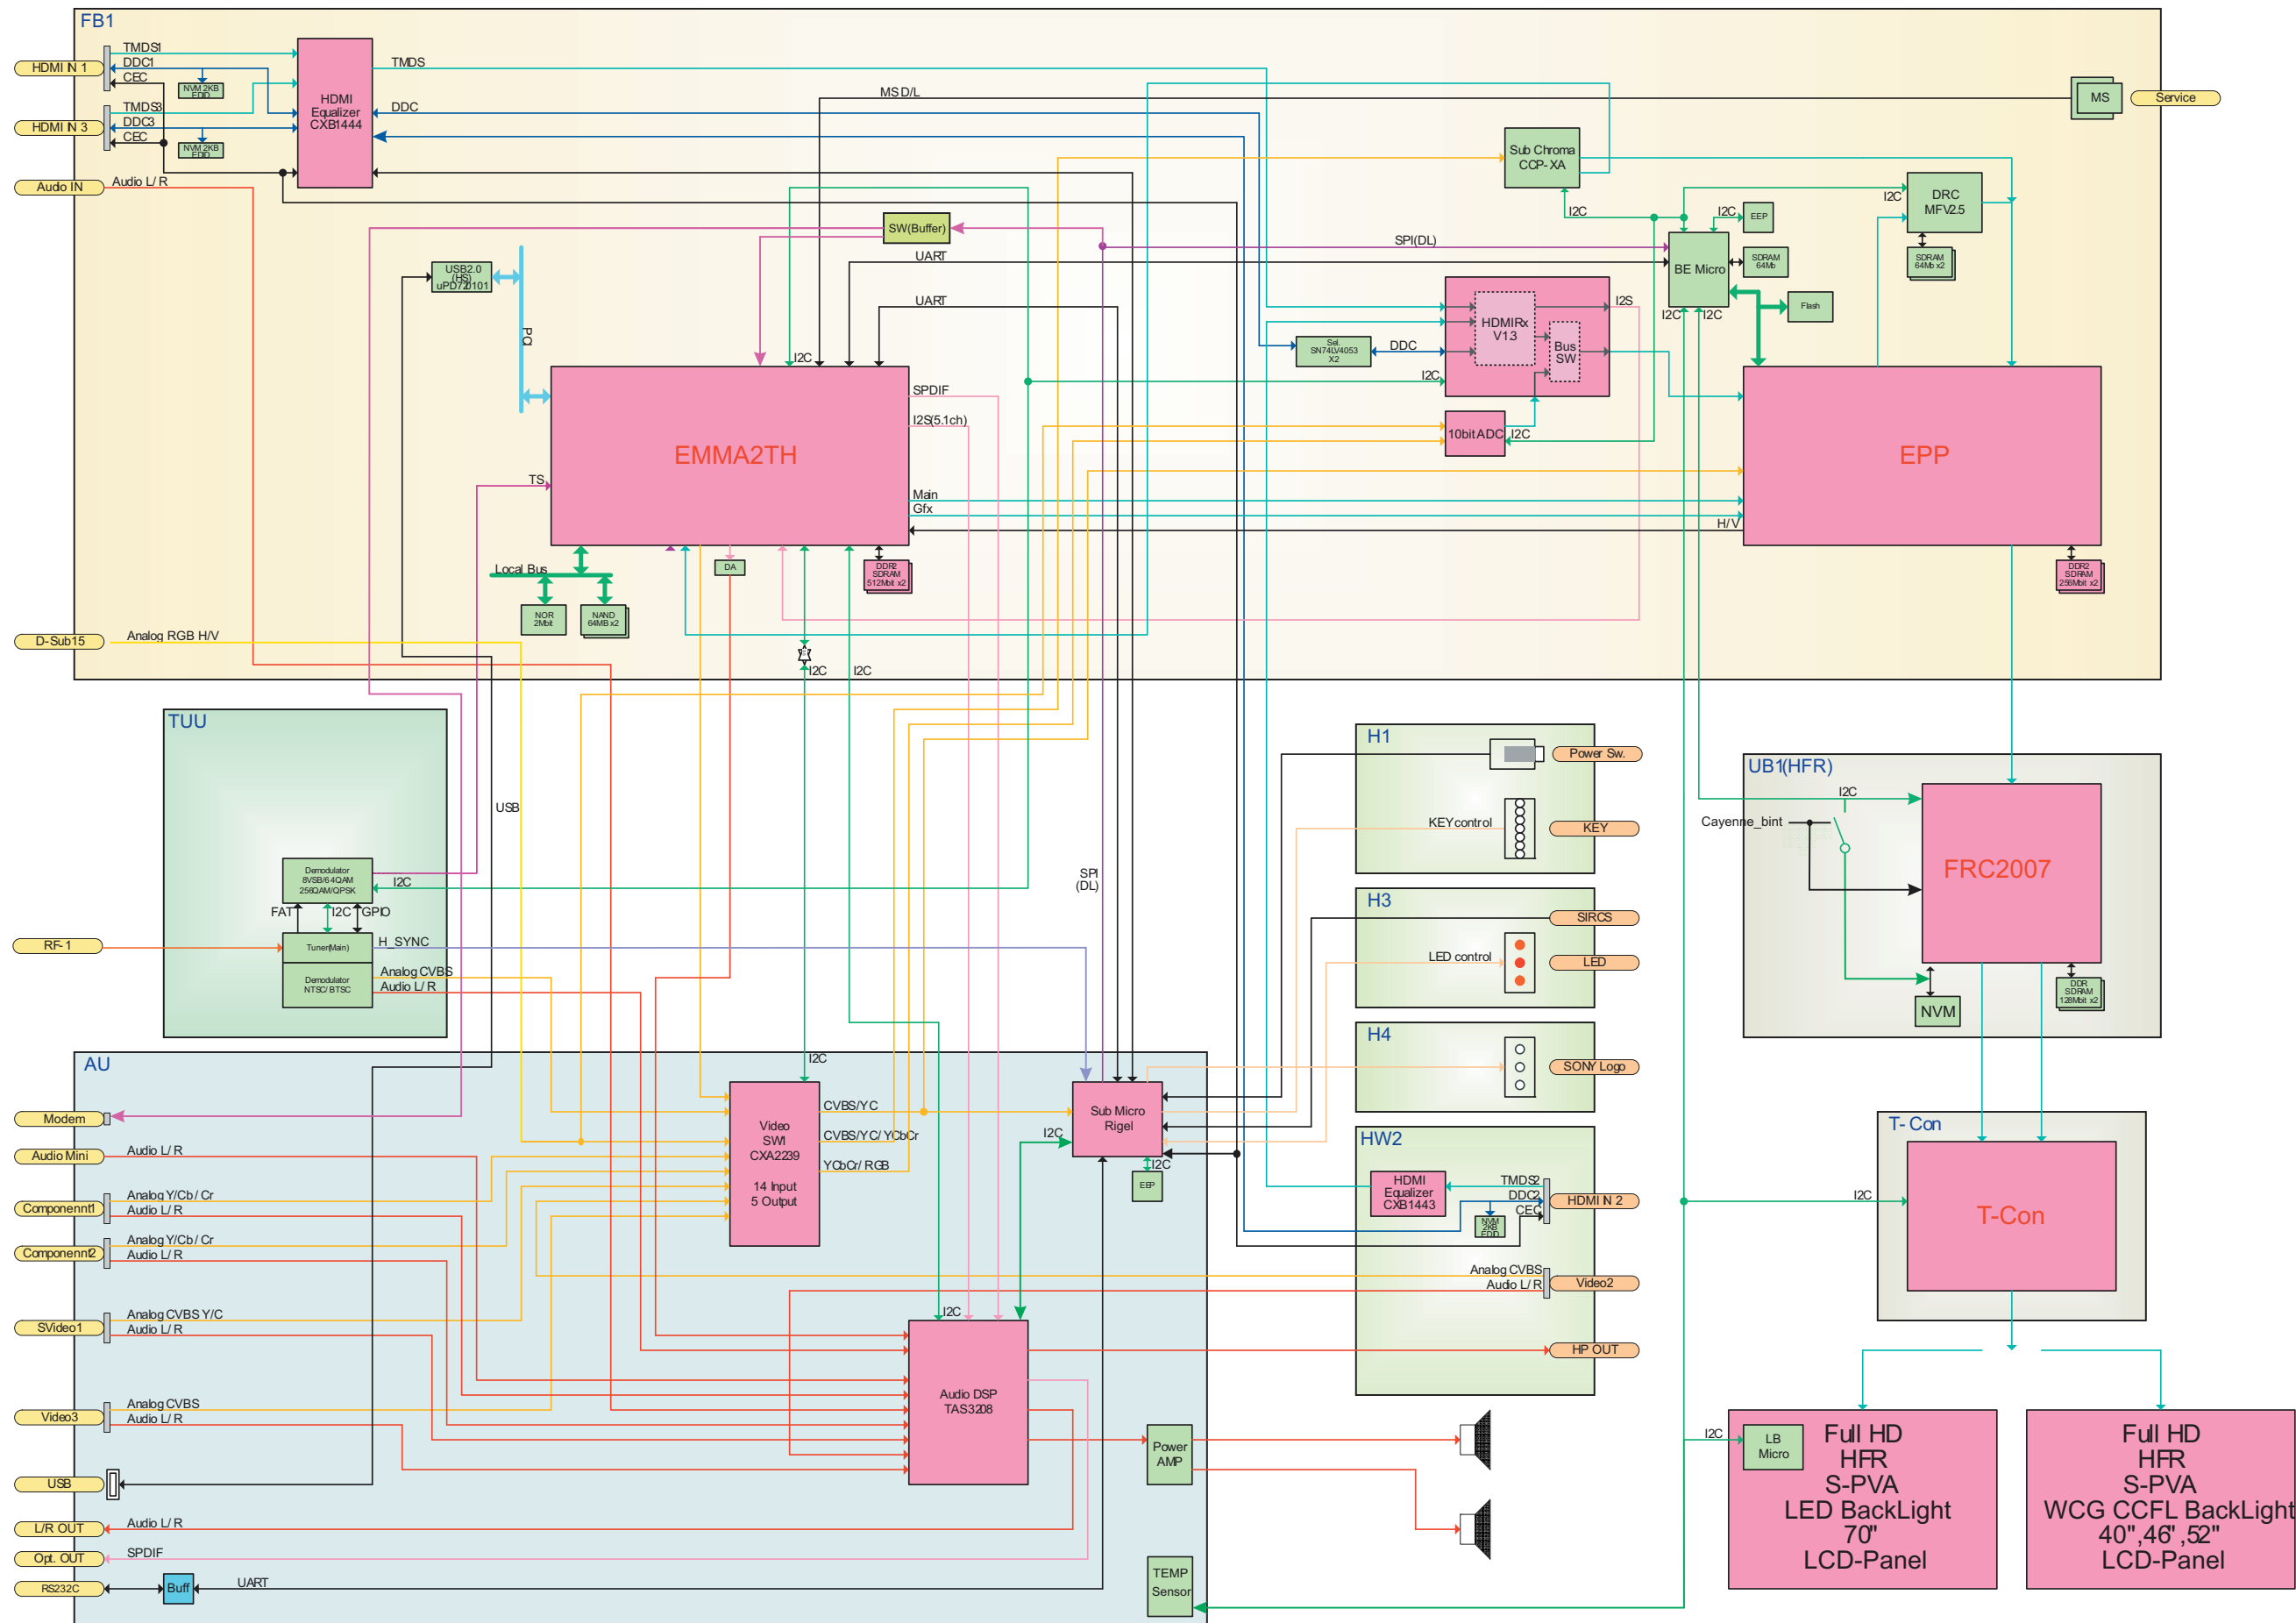

3-3-1. CONNECTOR DIAGRAM

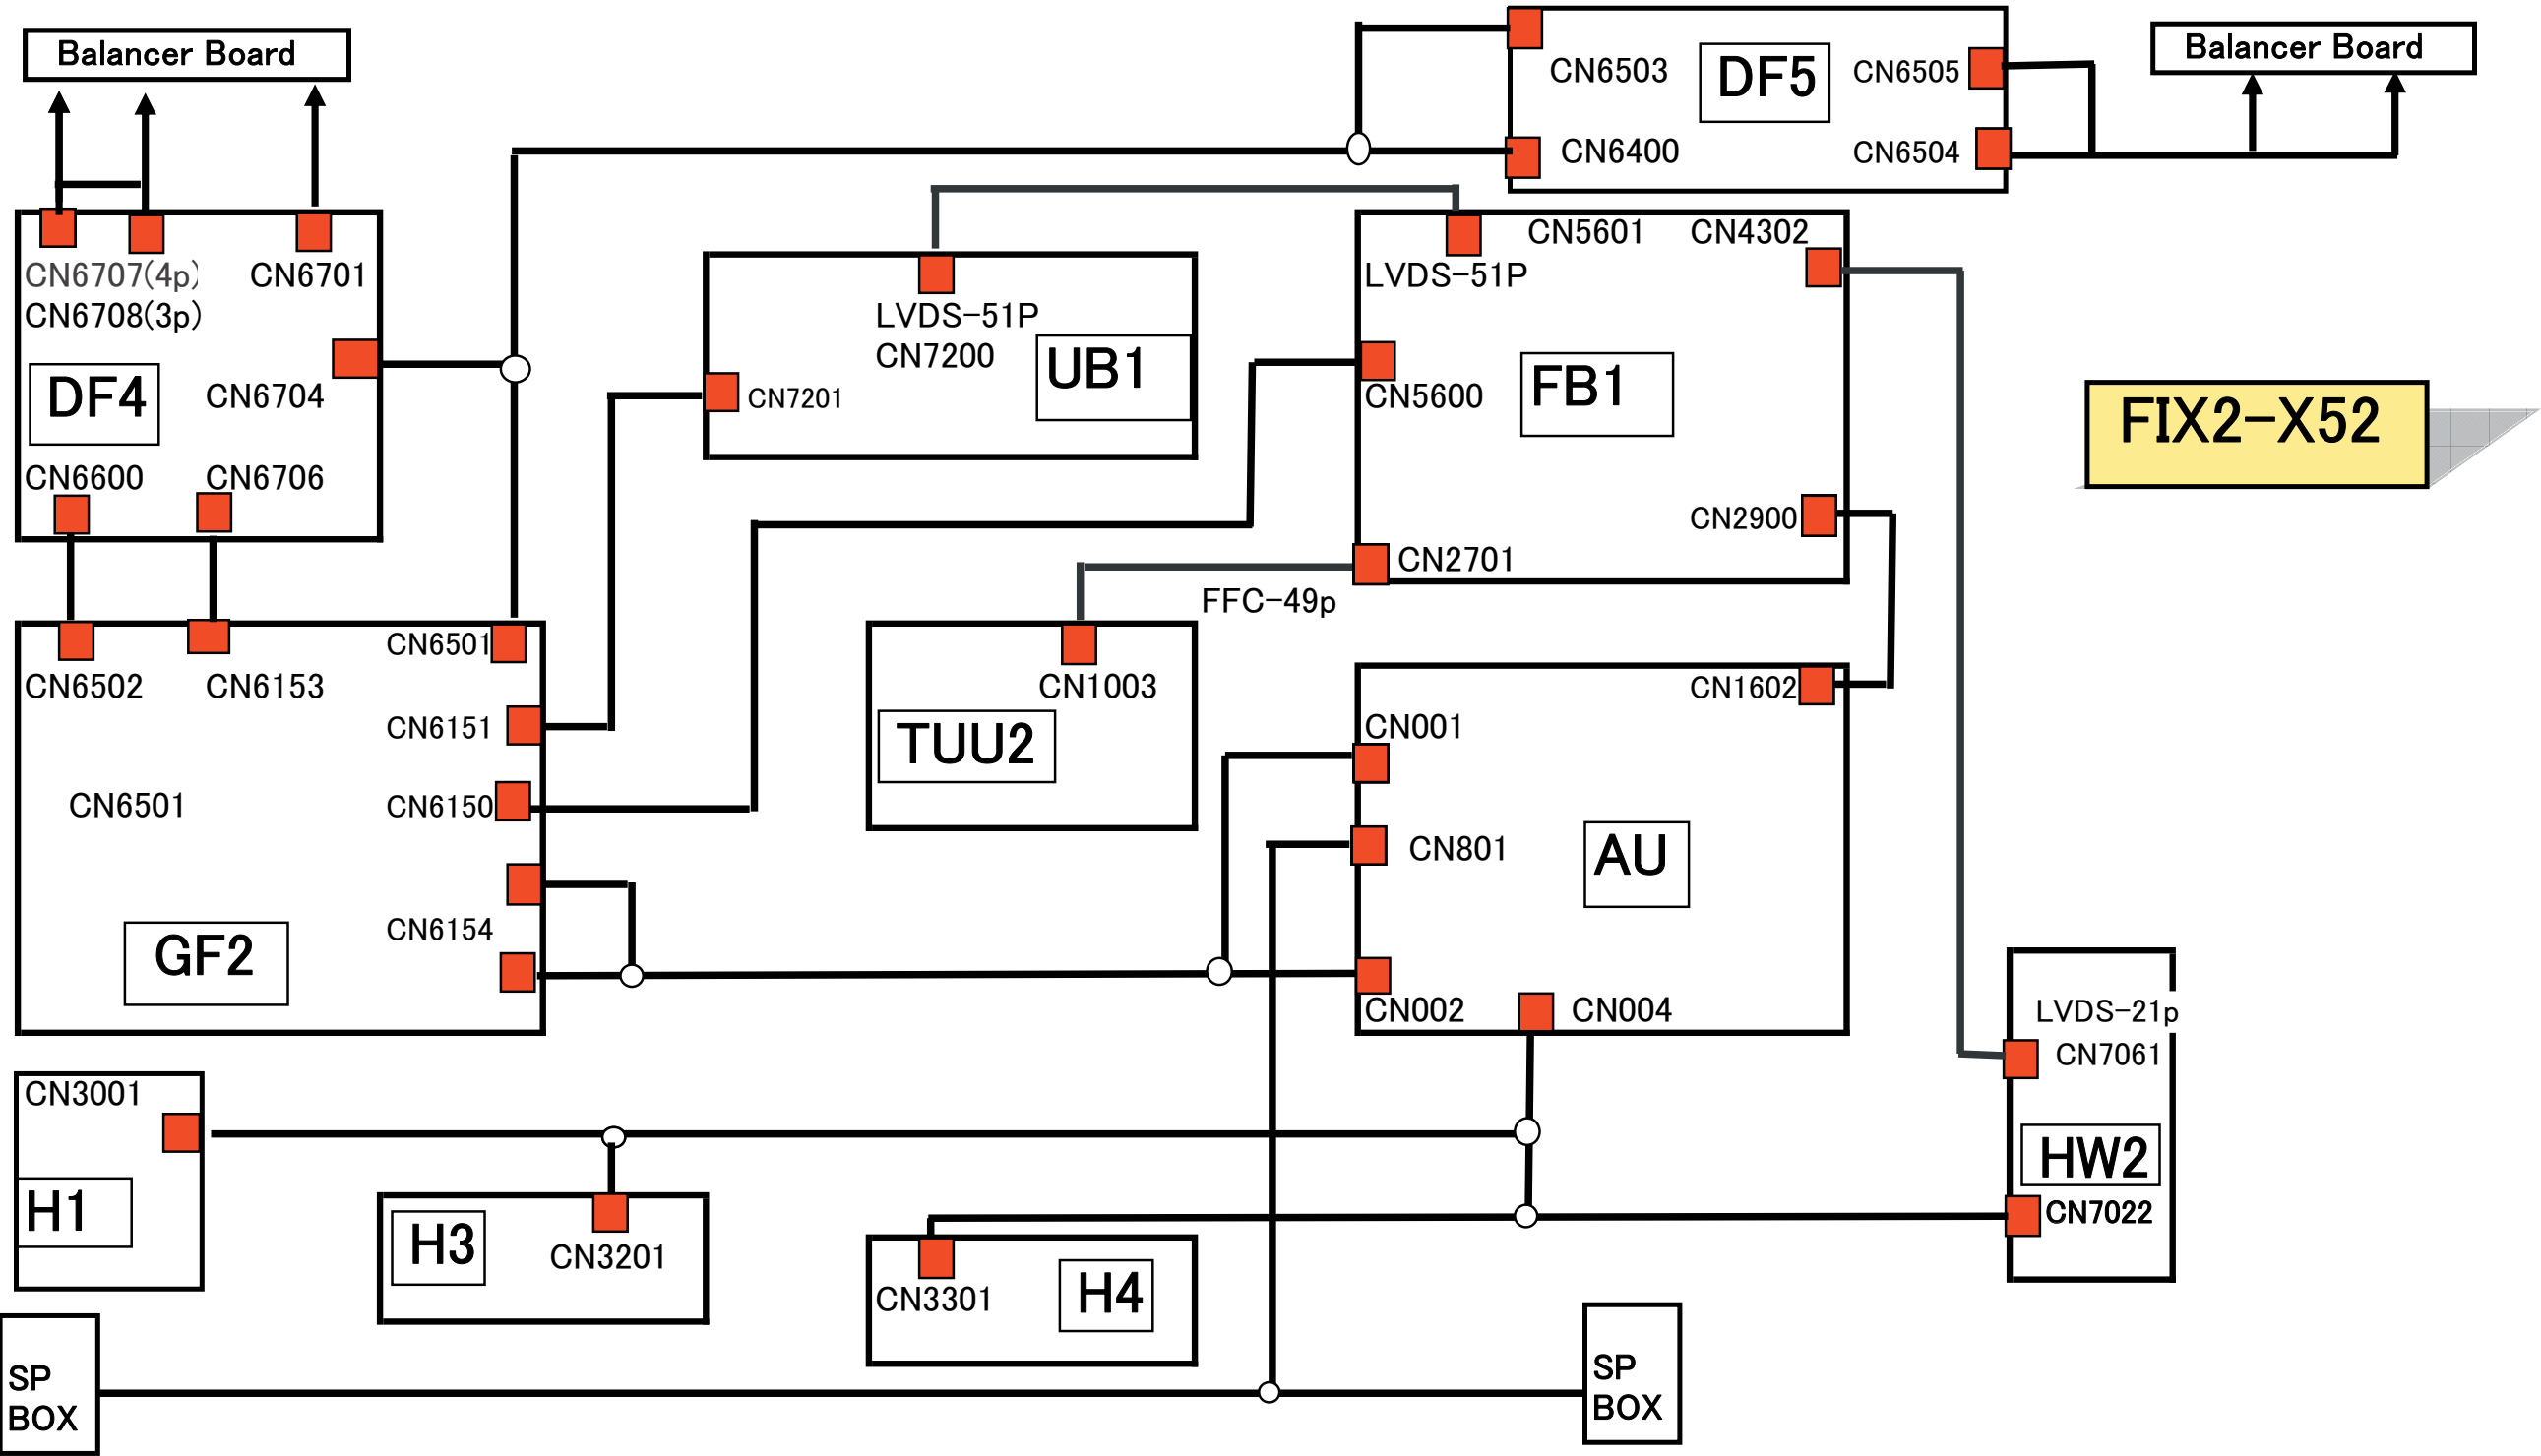


👉 AU BOARD SCHEMATIC DIAGRAM (1 OF 6)

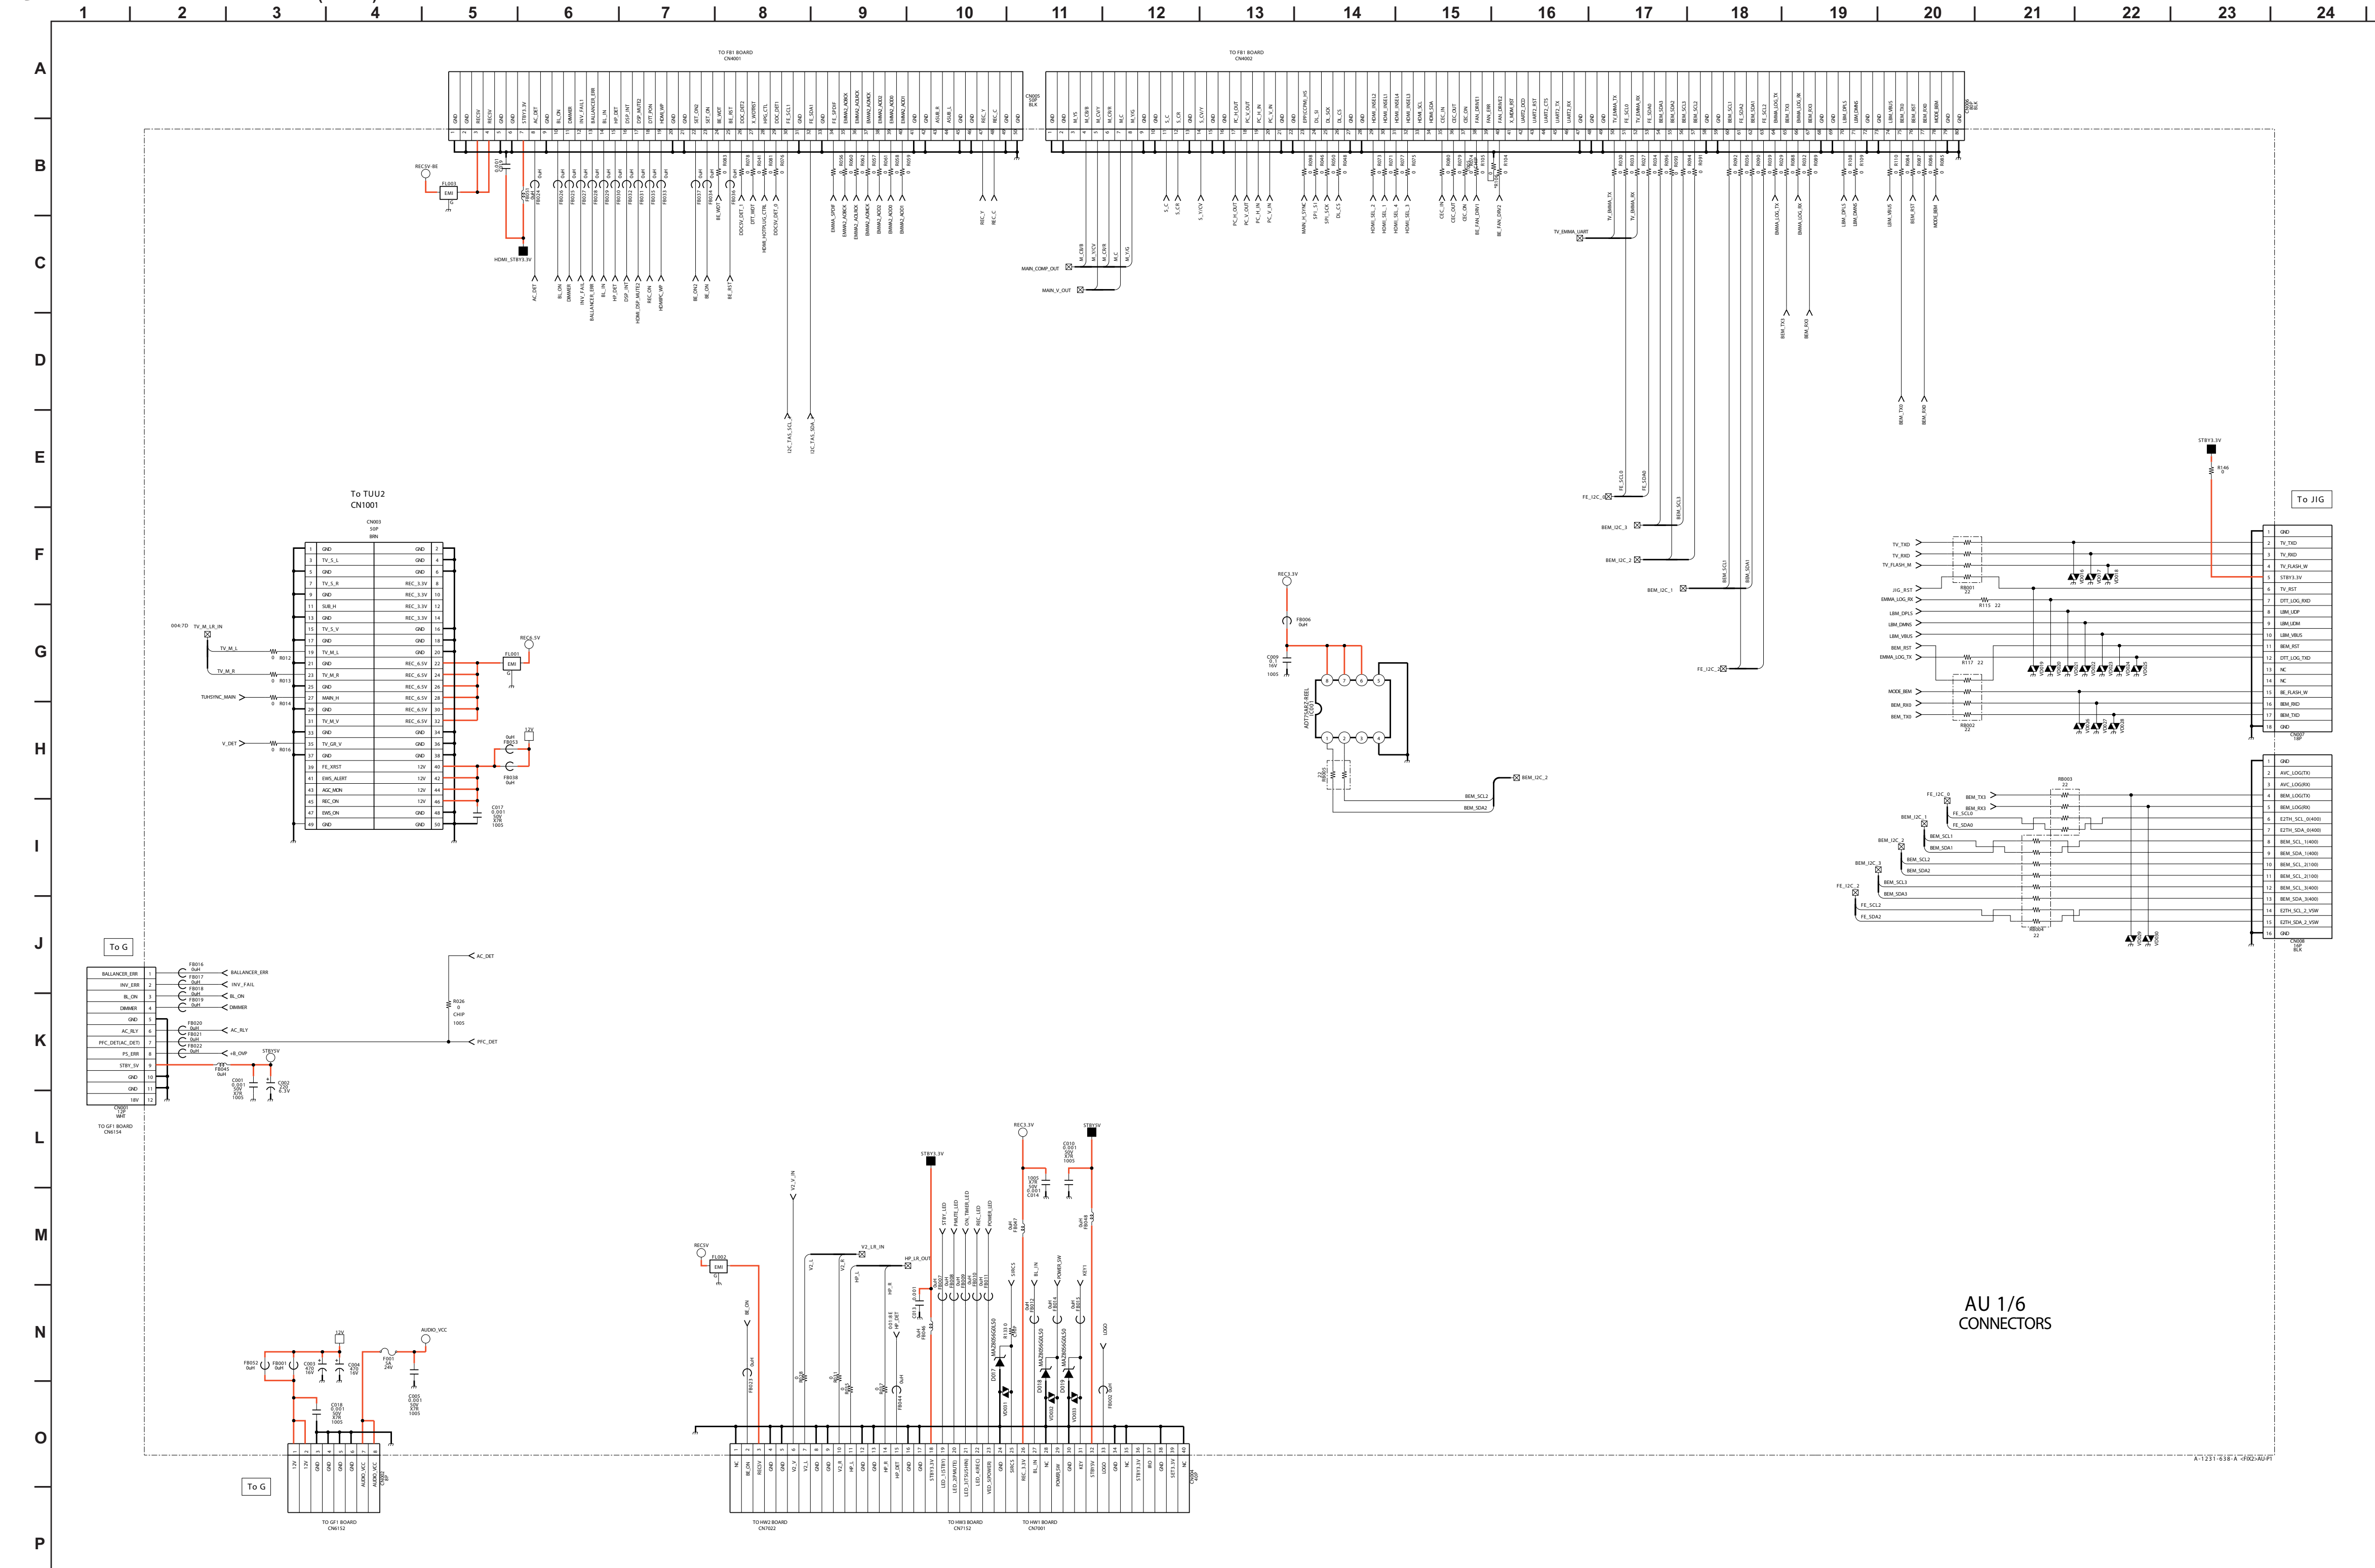




AU BOARD SCHEMATIC DIAGRAM (3 OF 6)

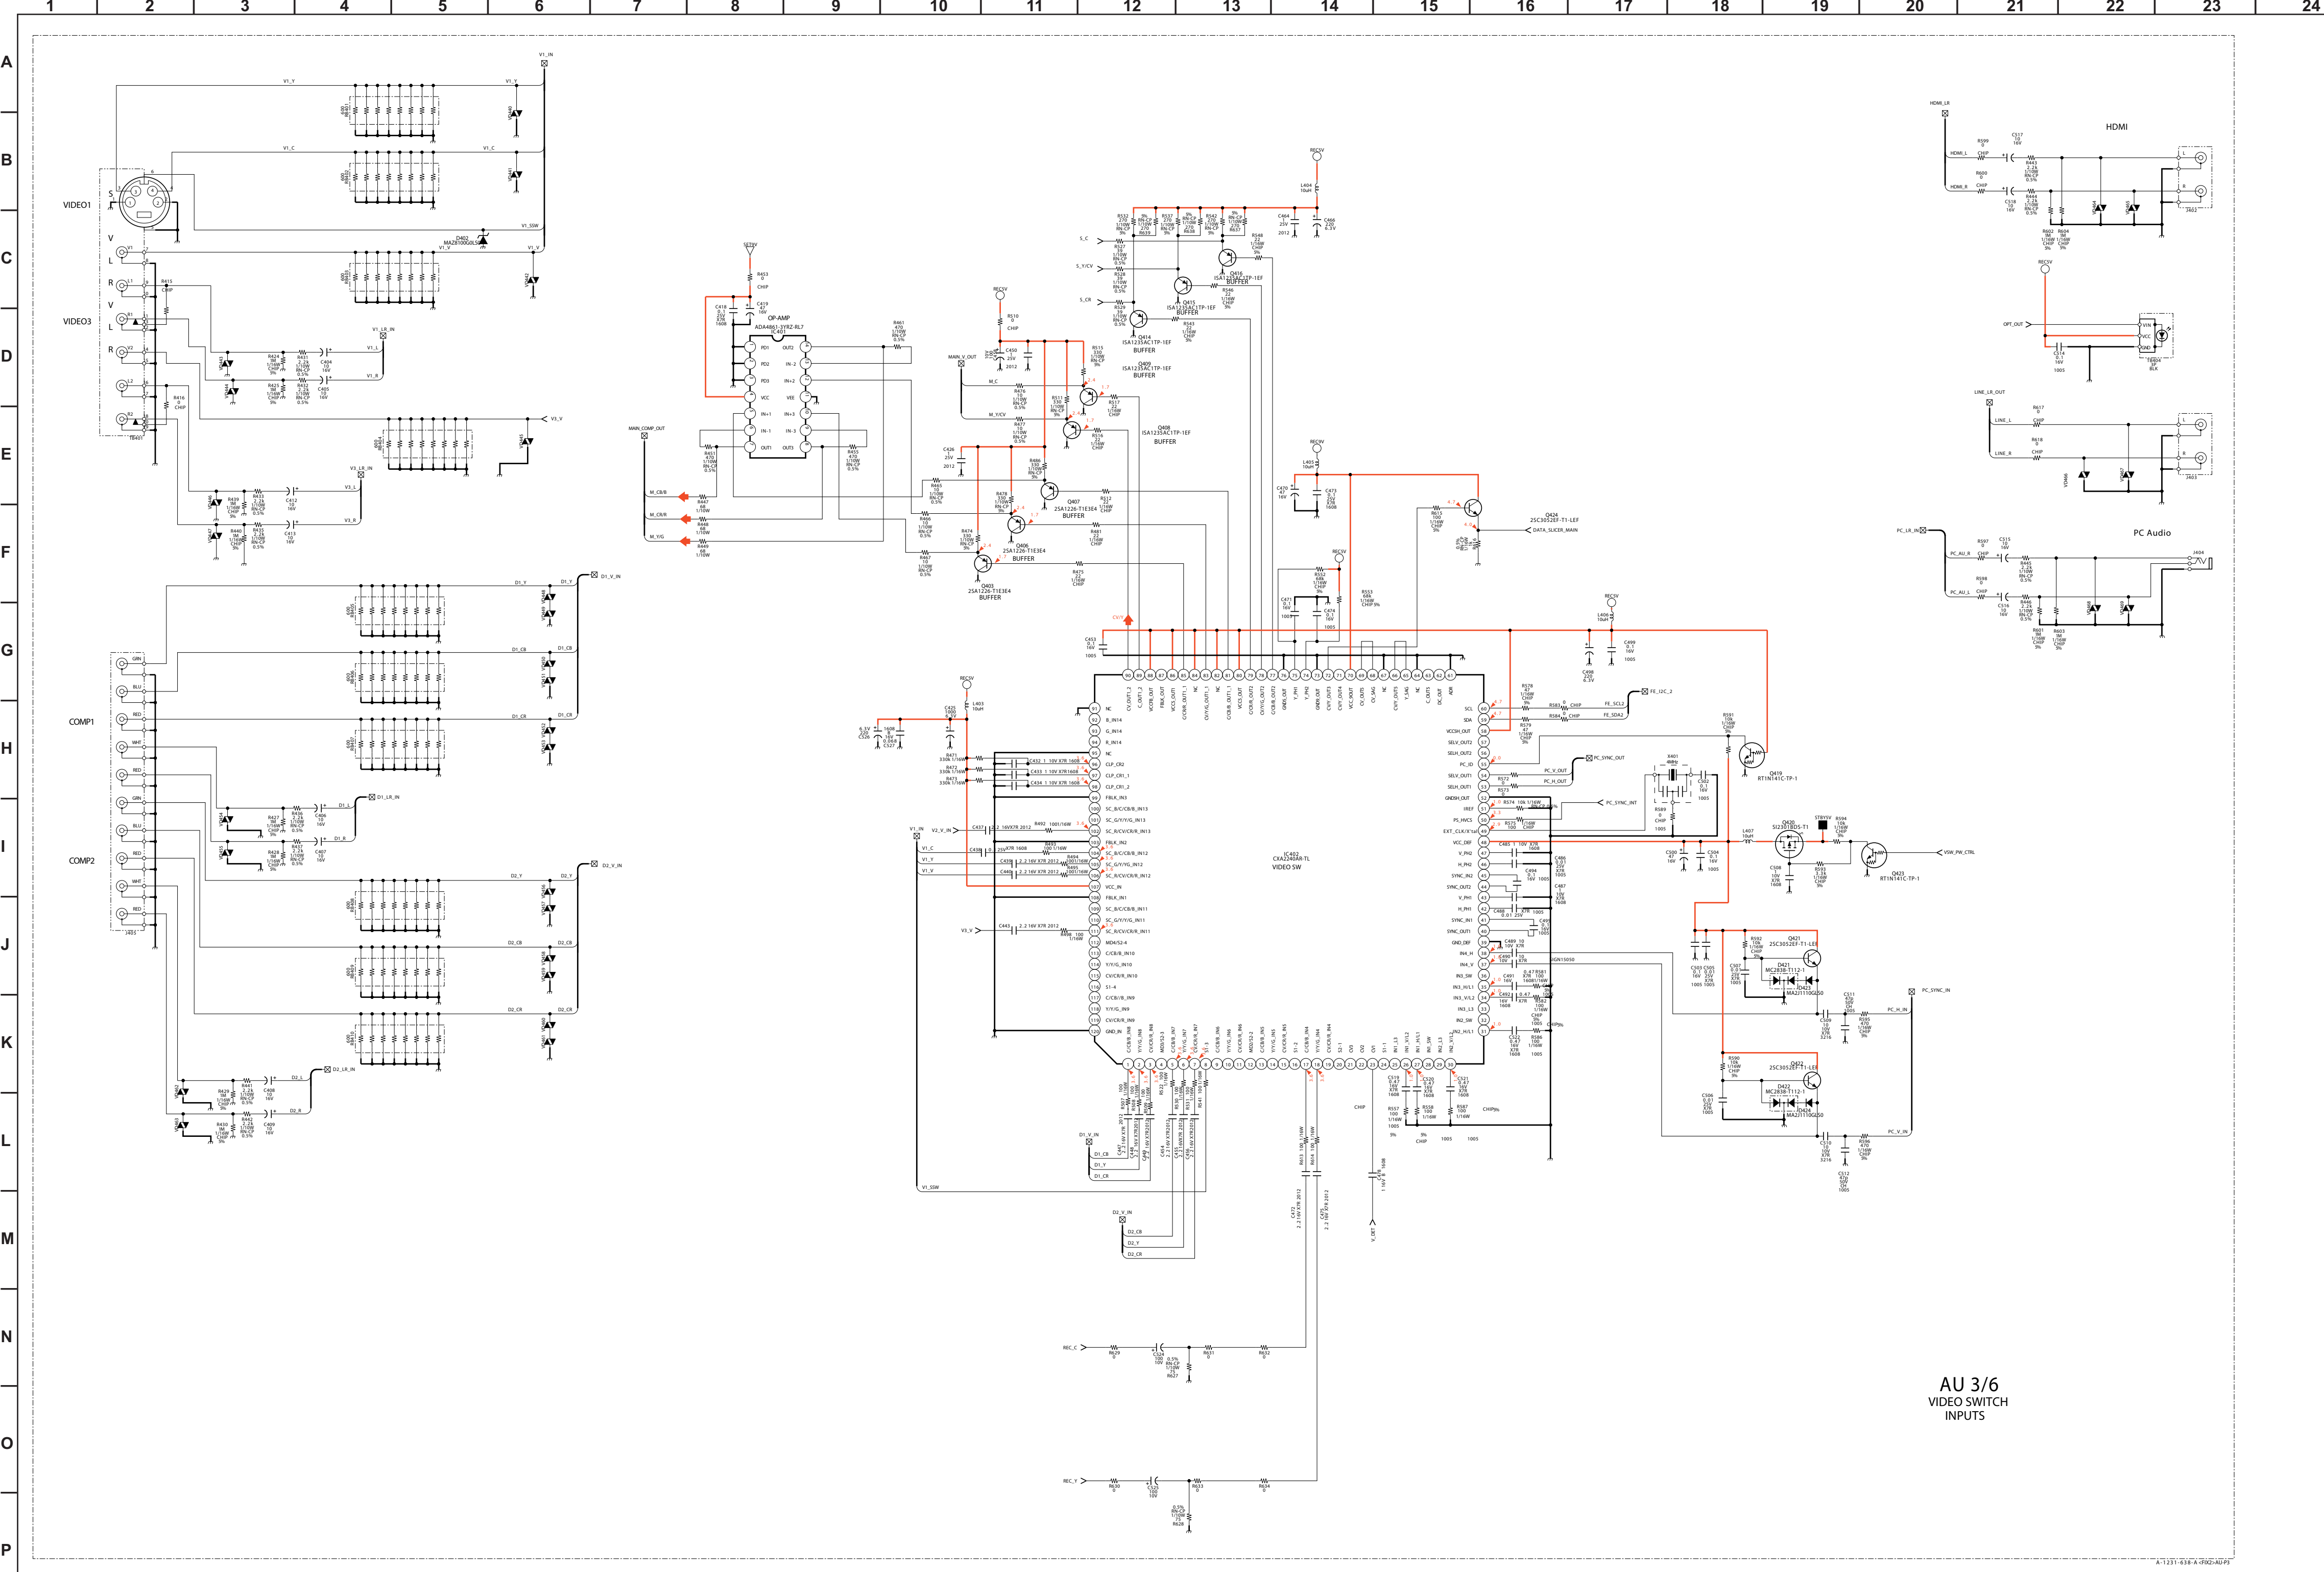


AU 3/6
VIDEO SWITCH
INPUTS

AU BOARD SCHEMATIC DIAGRAM (4 OF 6)

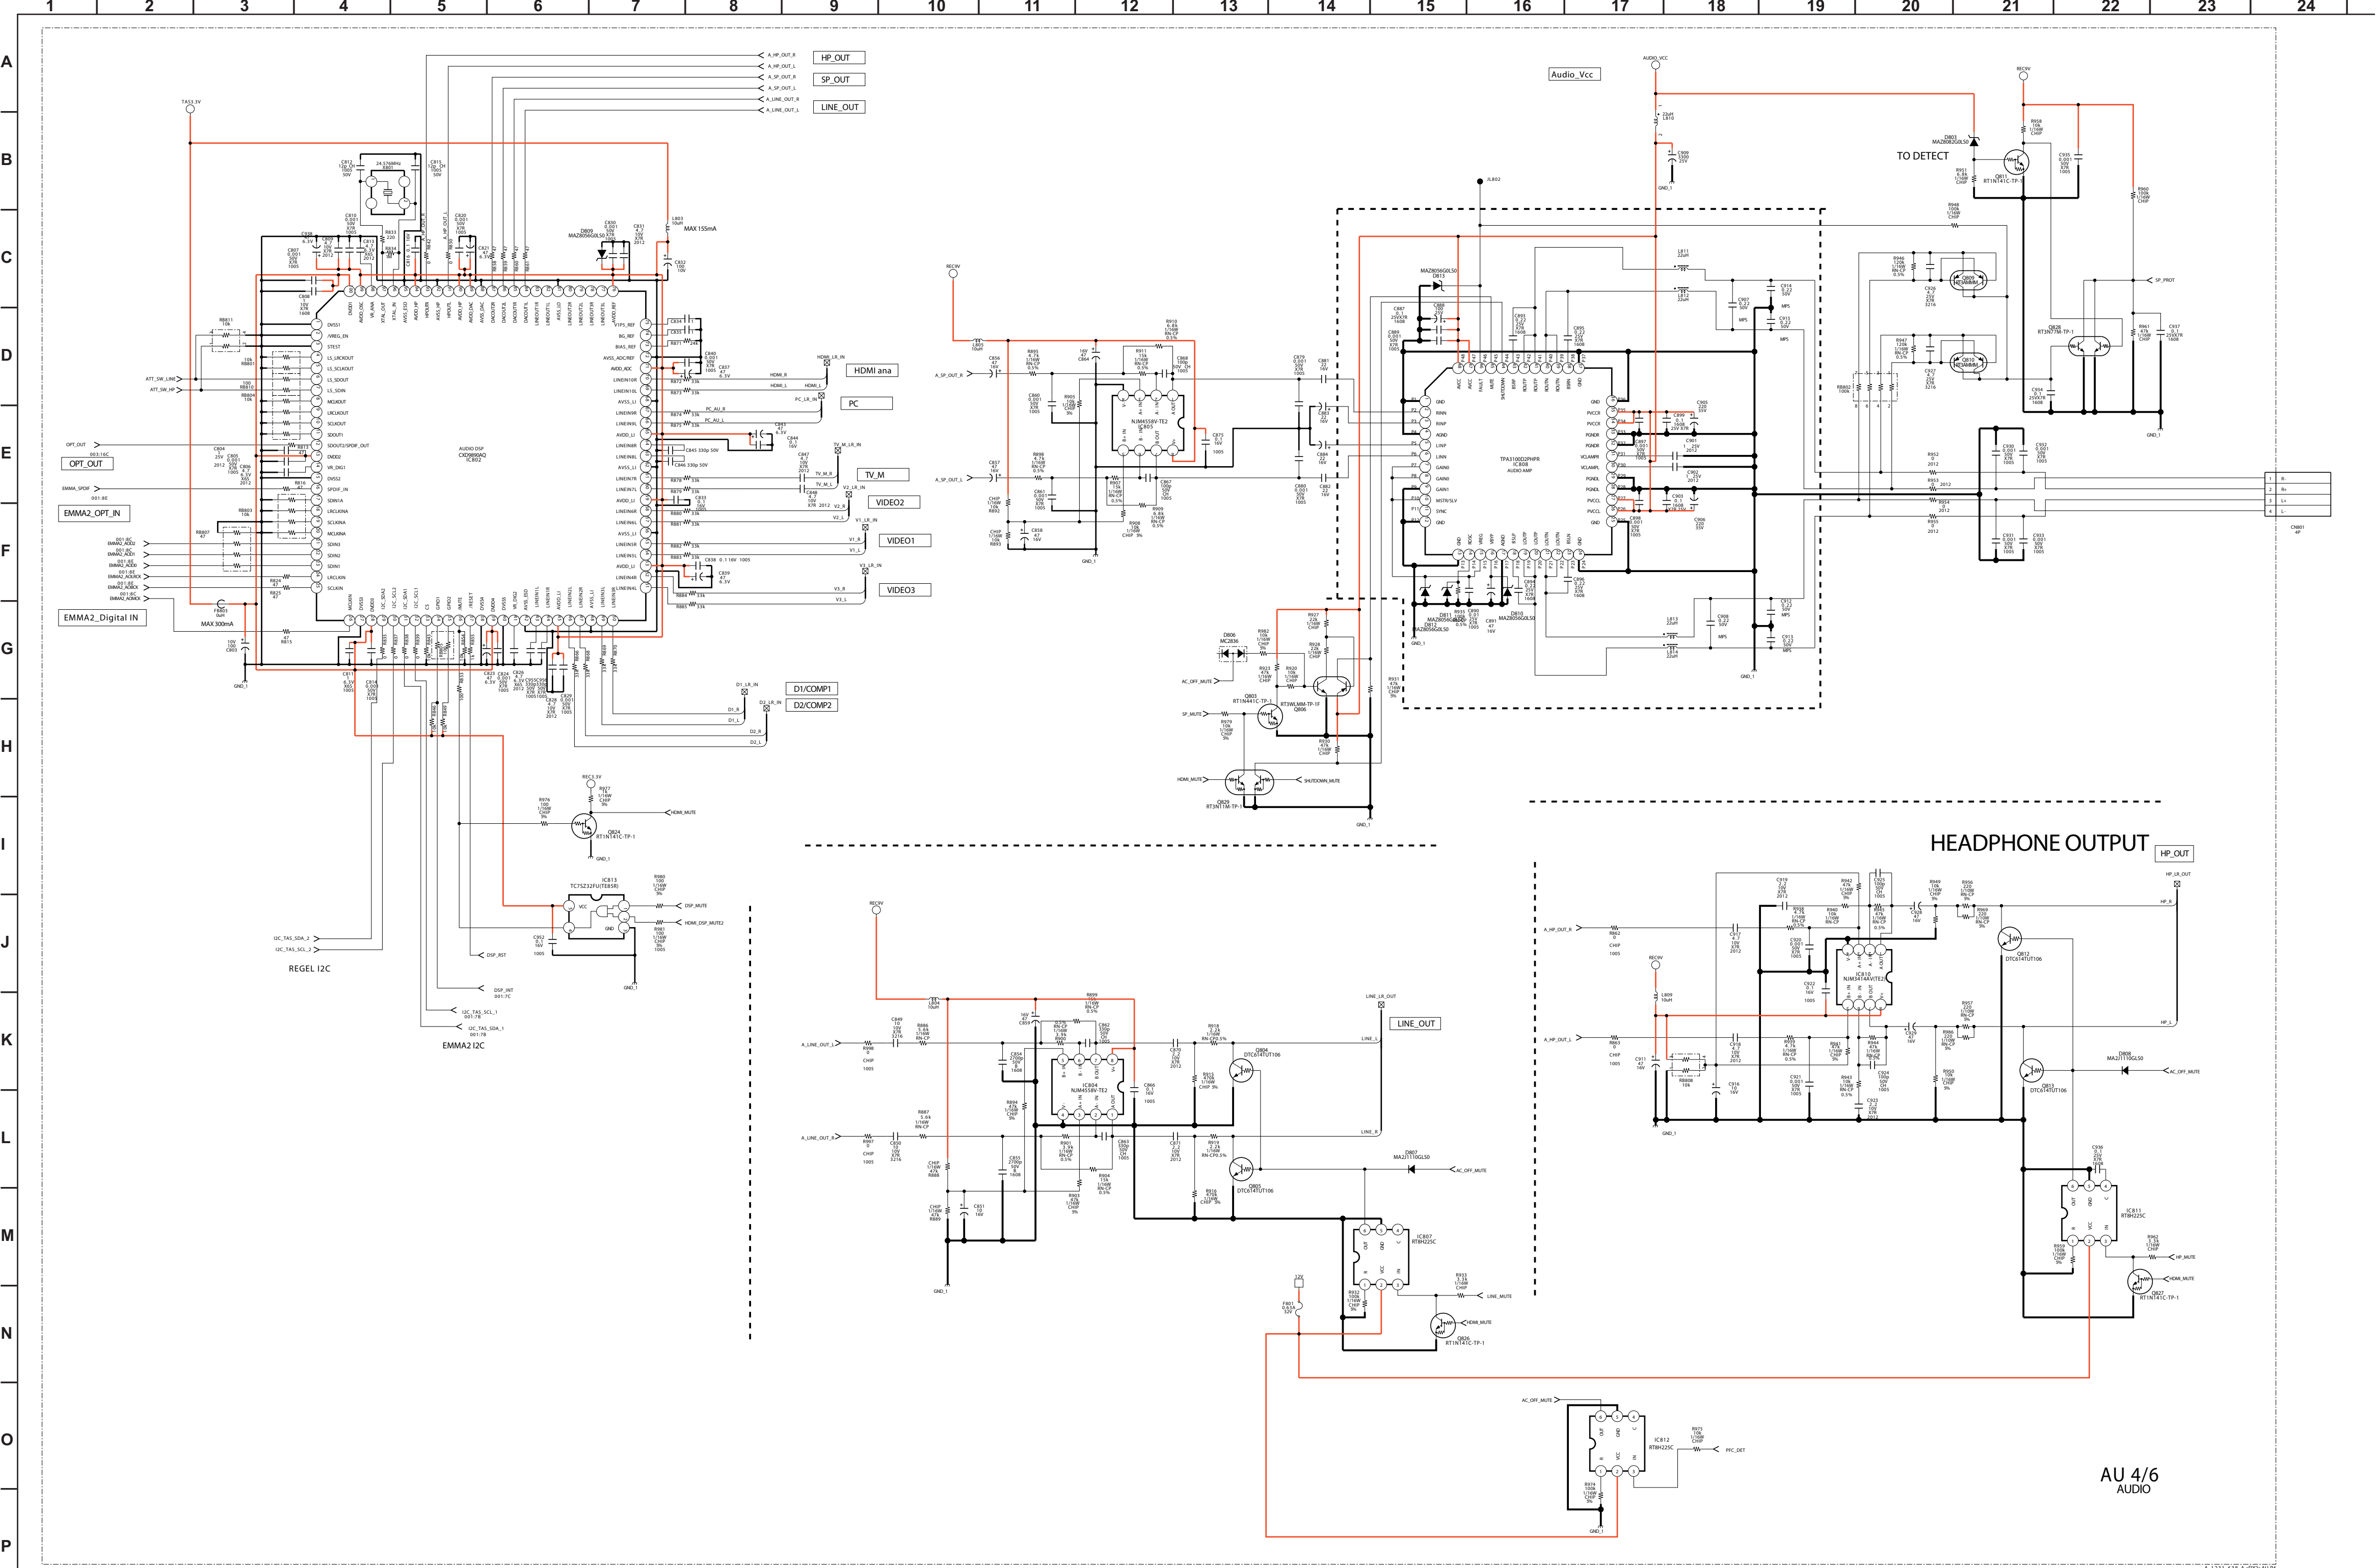


AU BOARD SCHEMATIC DIAGRAM (5 OF 6)

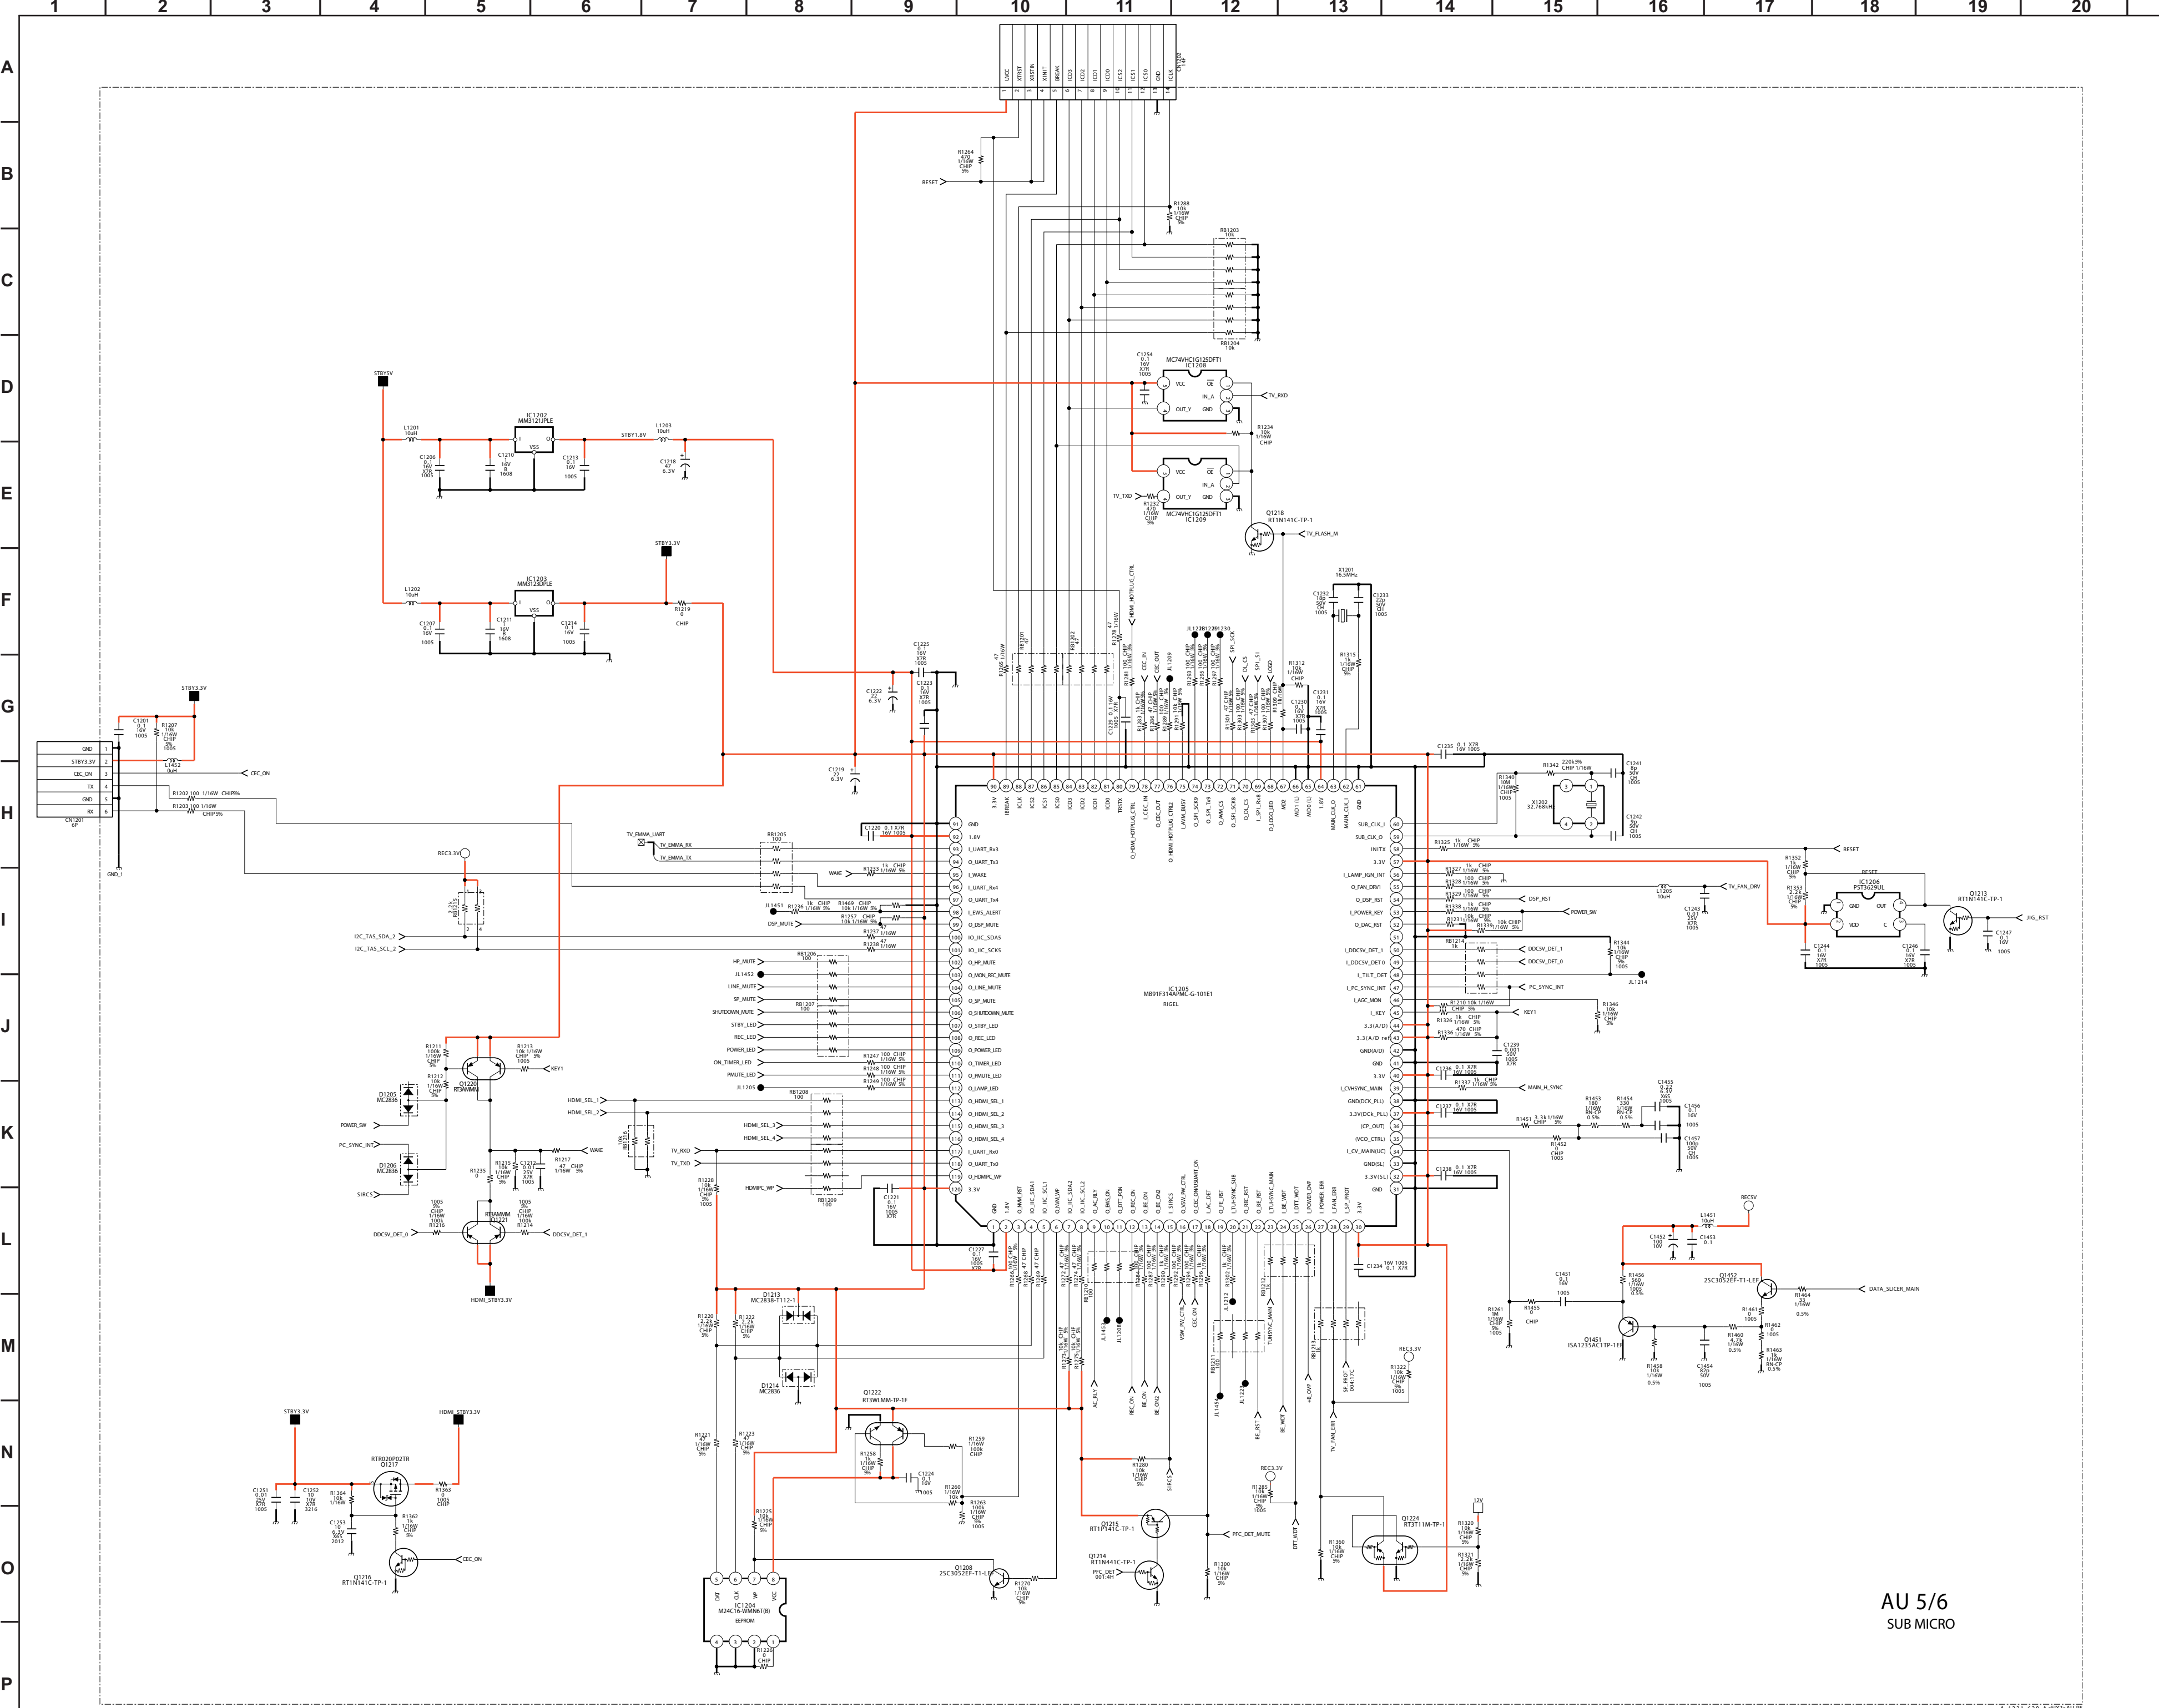

AU 5/6
SUB MICRO

AU BOARD SCHEMATIC DIAGRAM (6 OF 6)

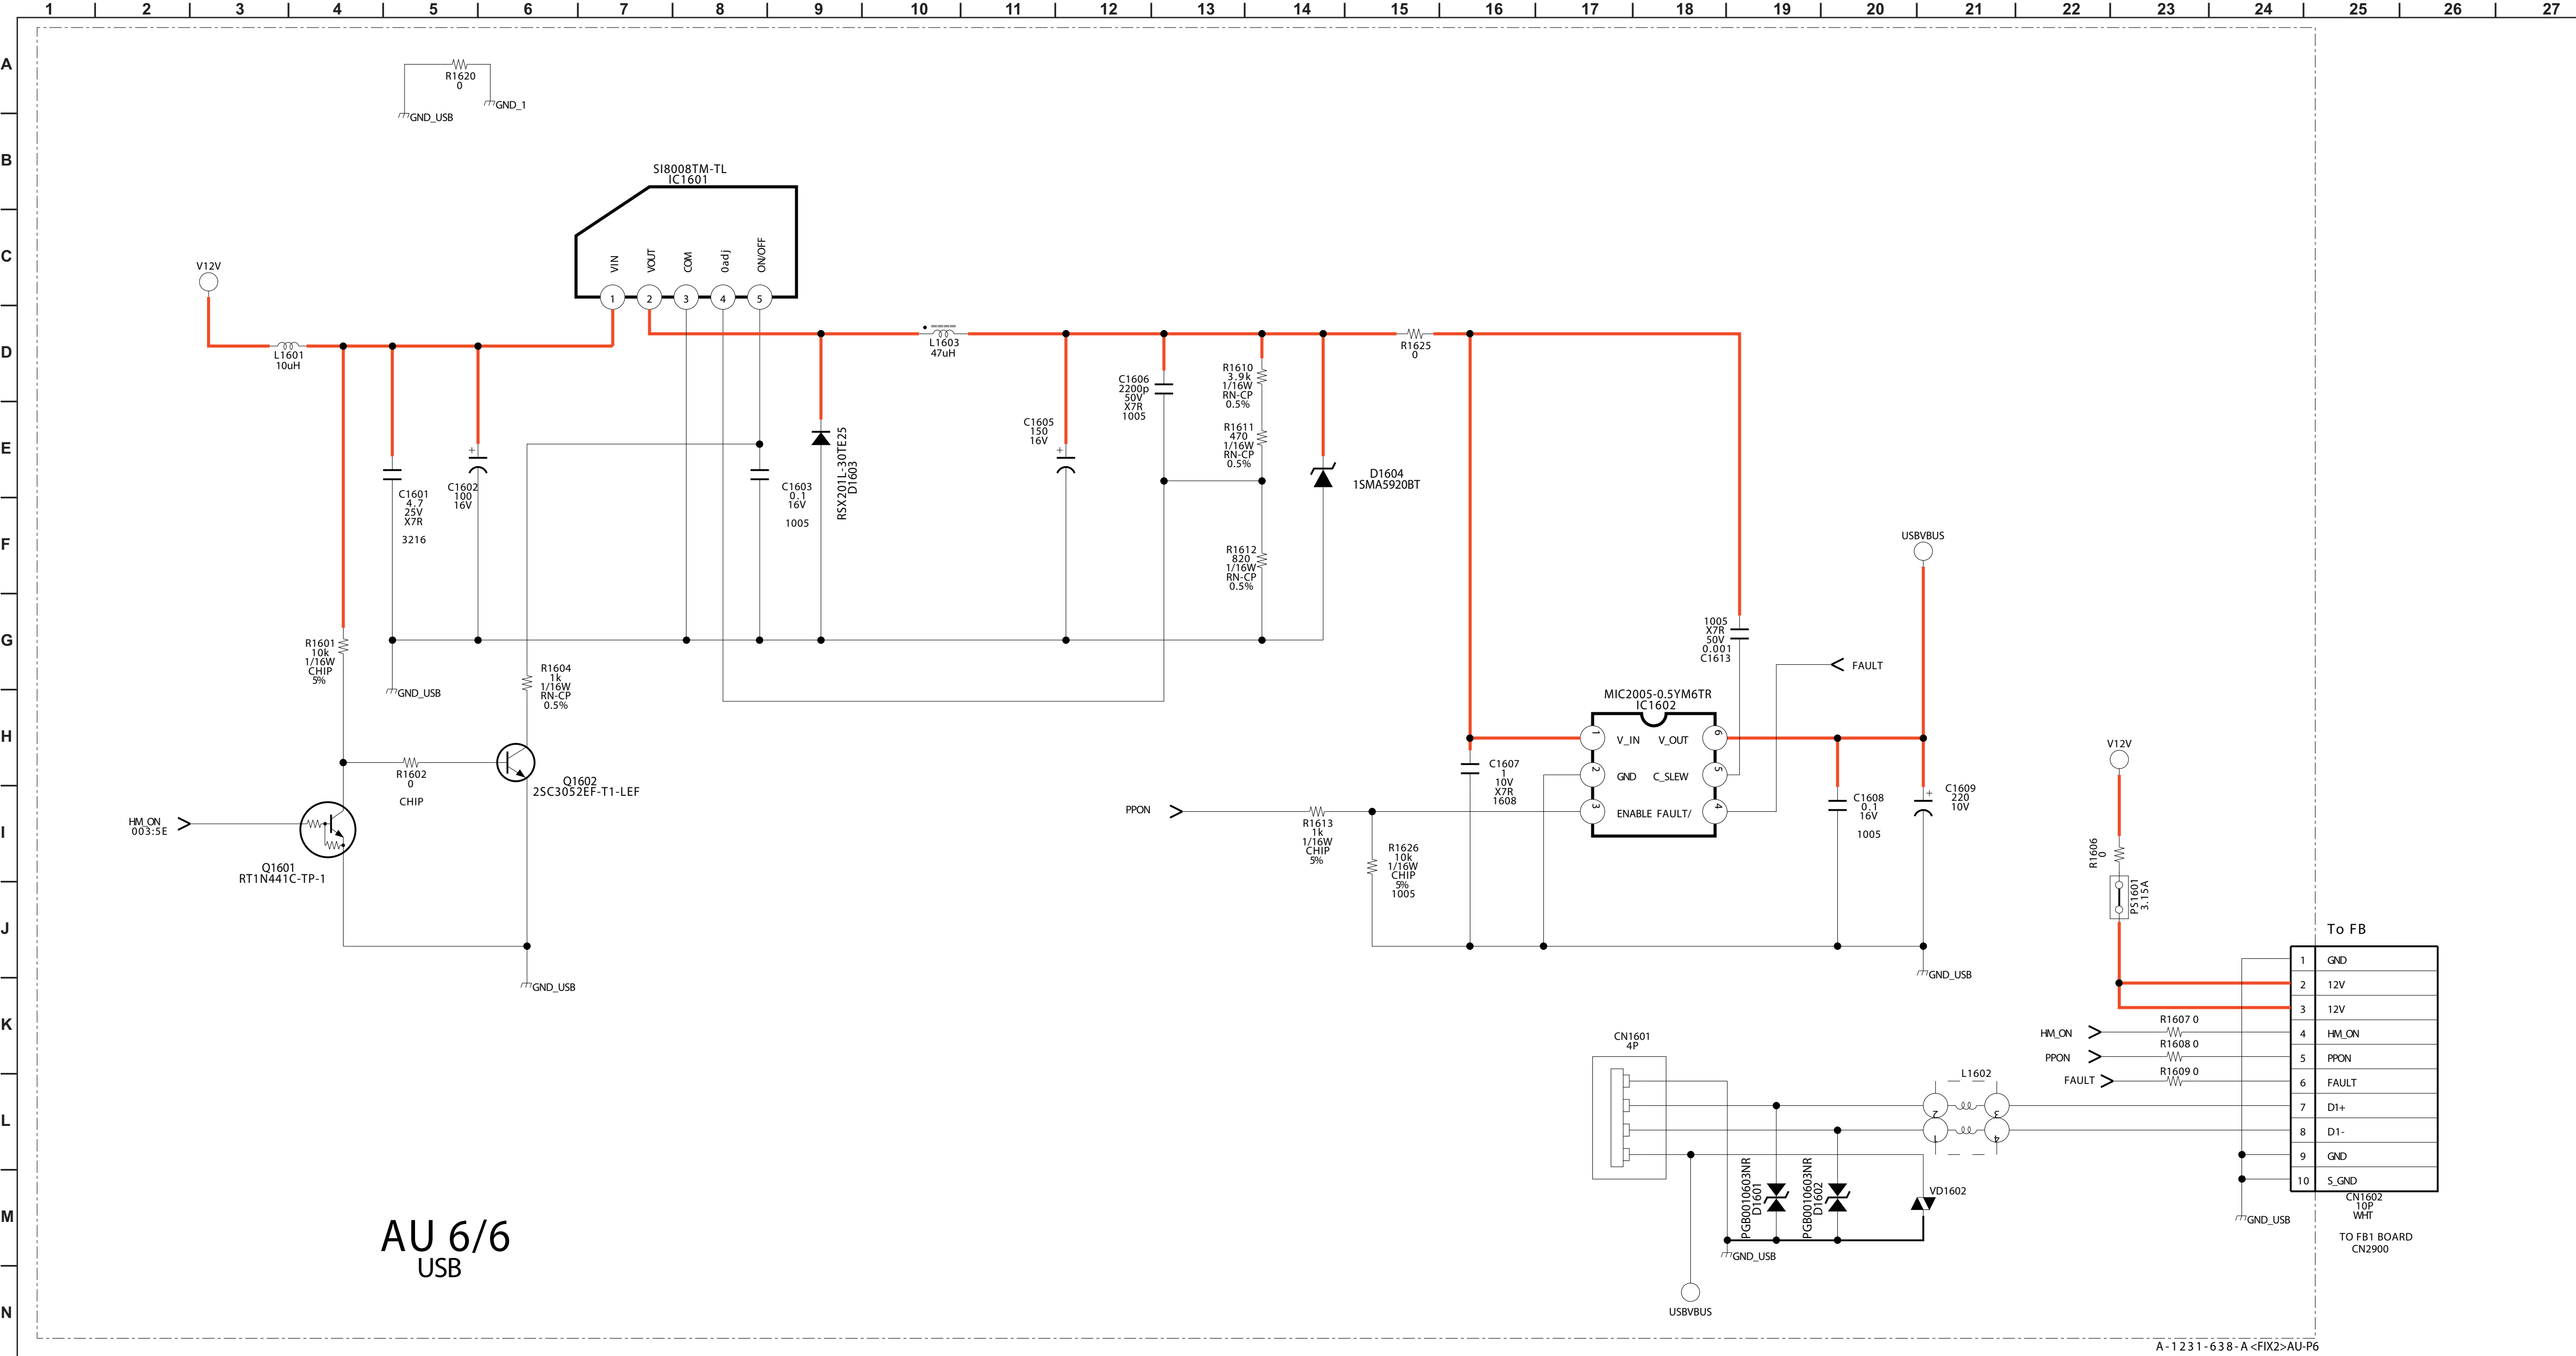


COMPONENT SIDE



CONDUCTOR SIDE




DF4 BOARD SCHEMATIC DIAGRAM

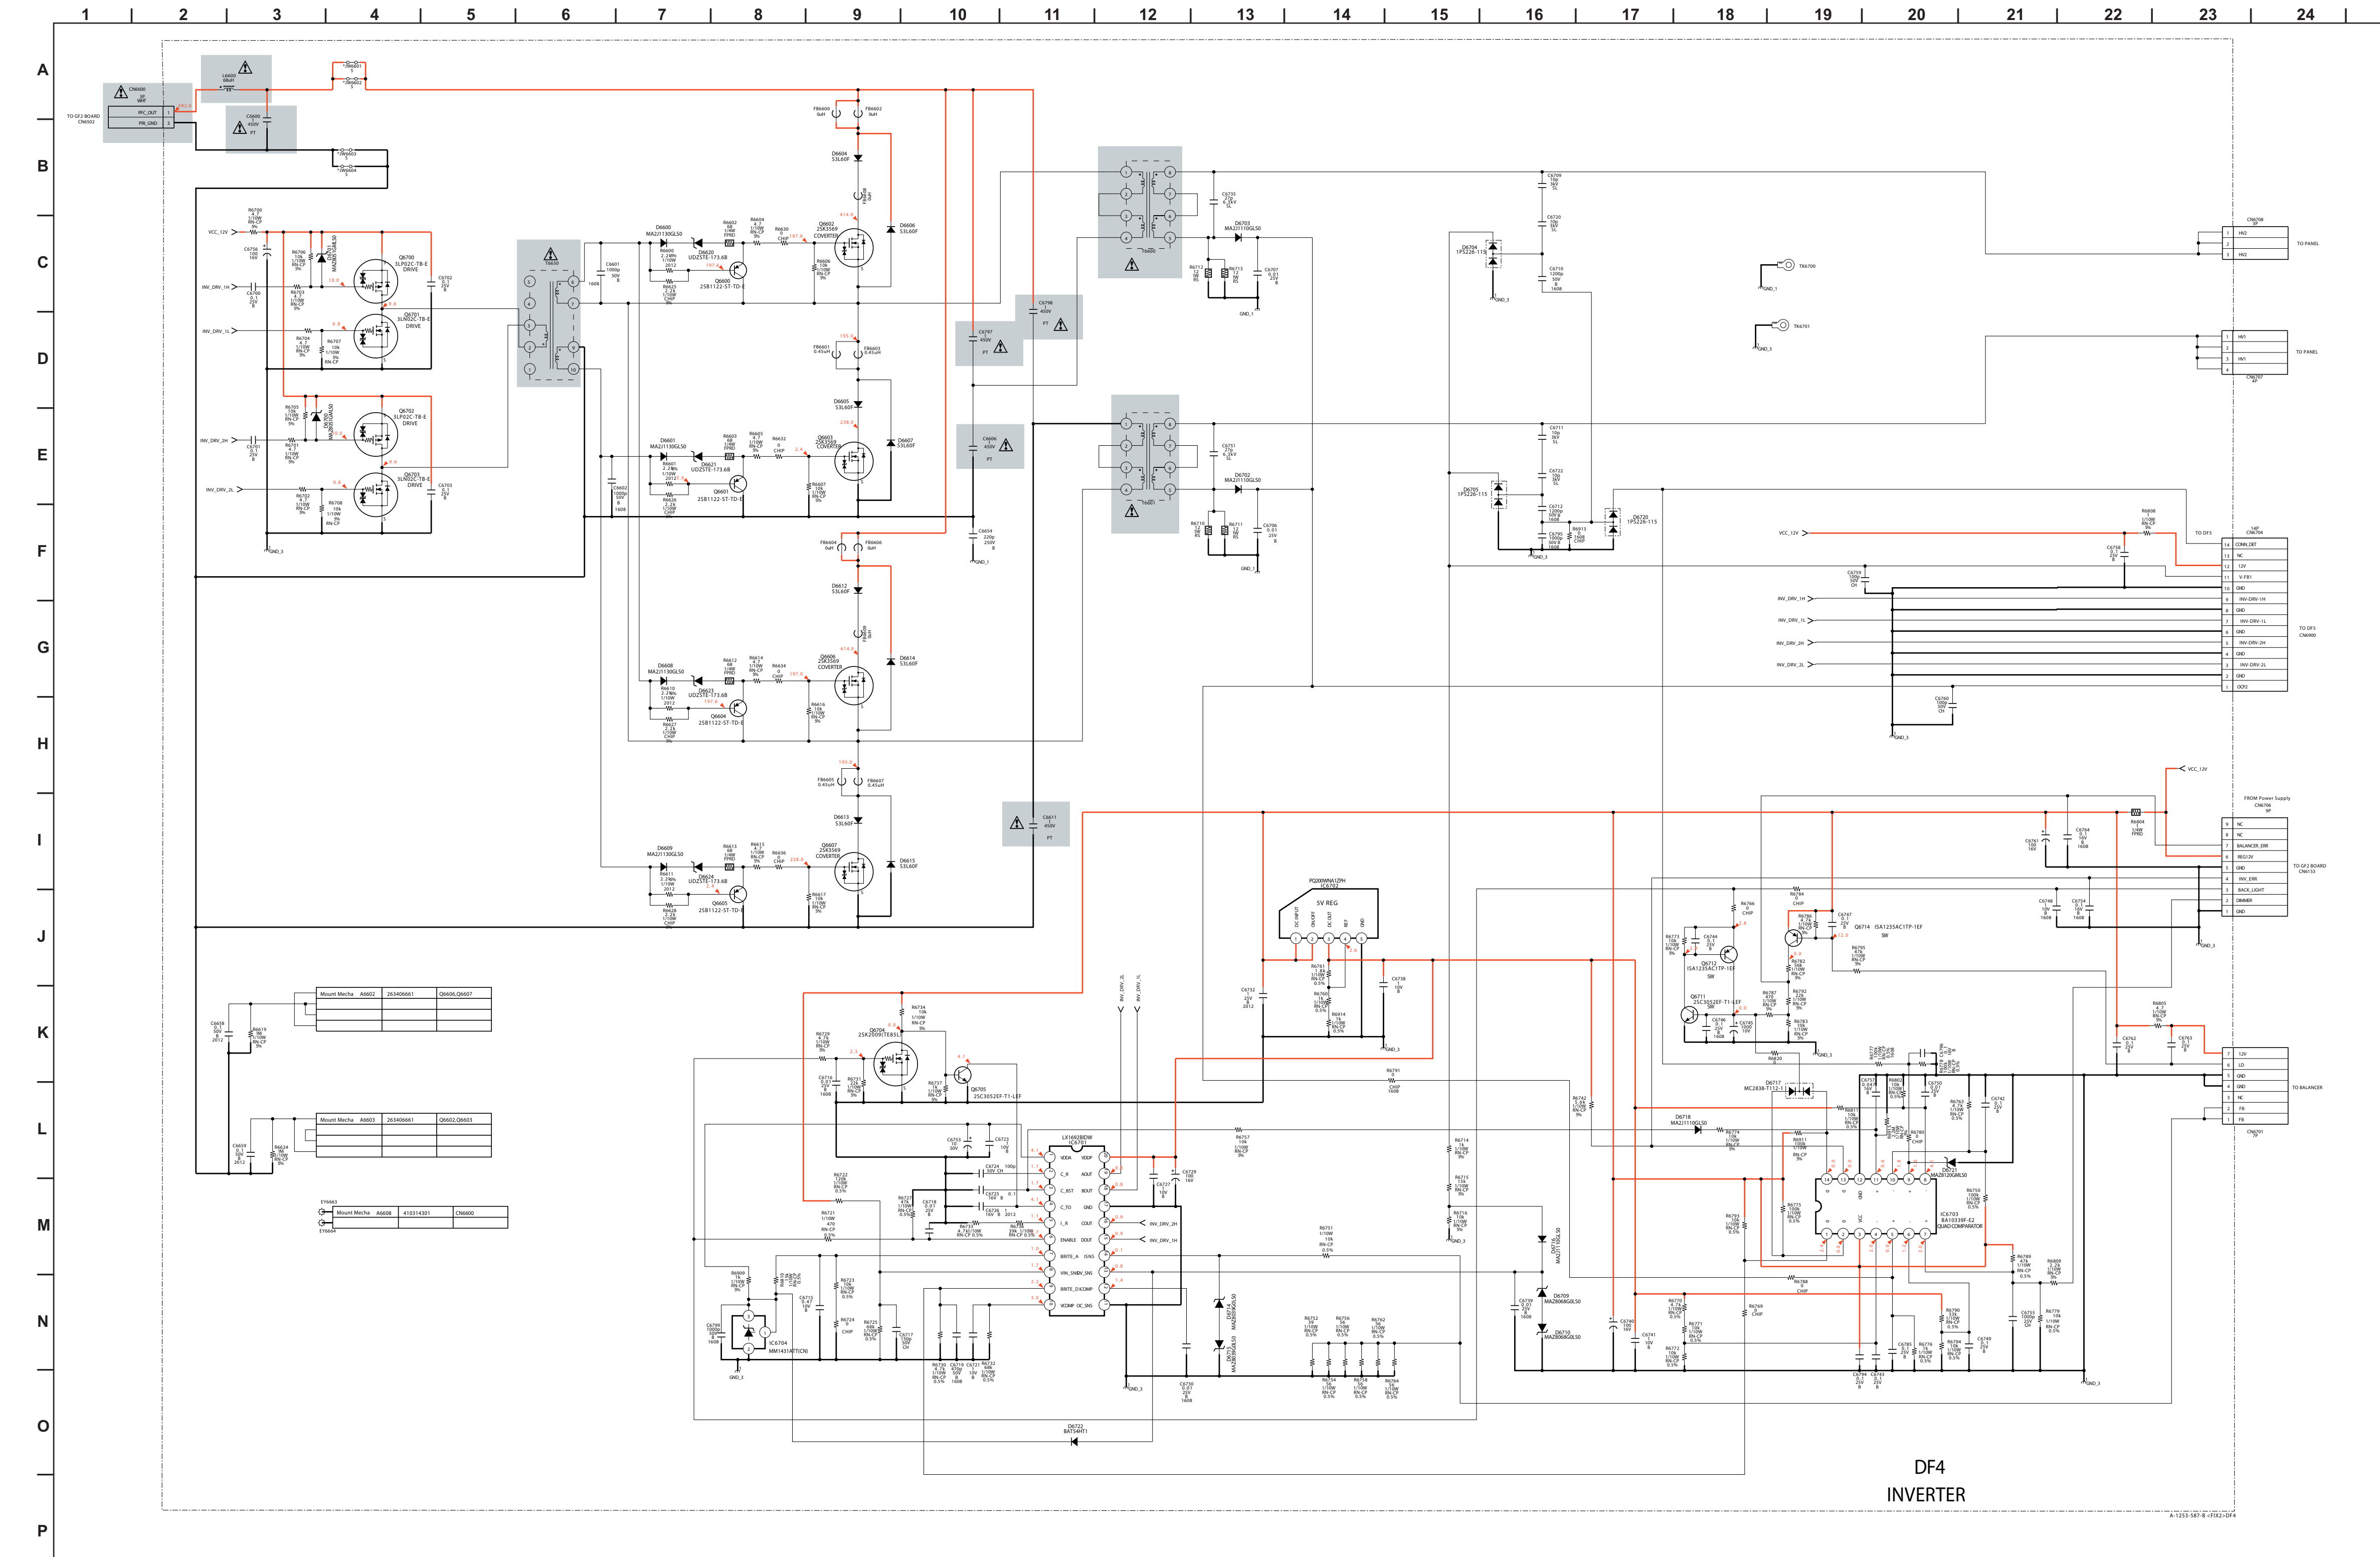


DF4

[INVERTER]

CONDUCTOR SIDE

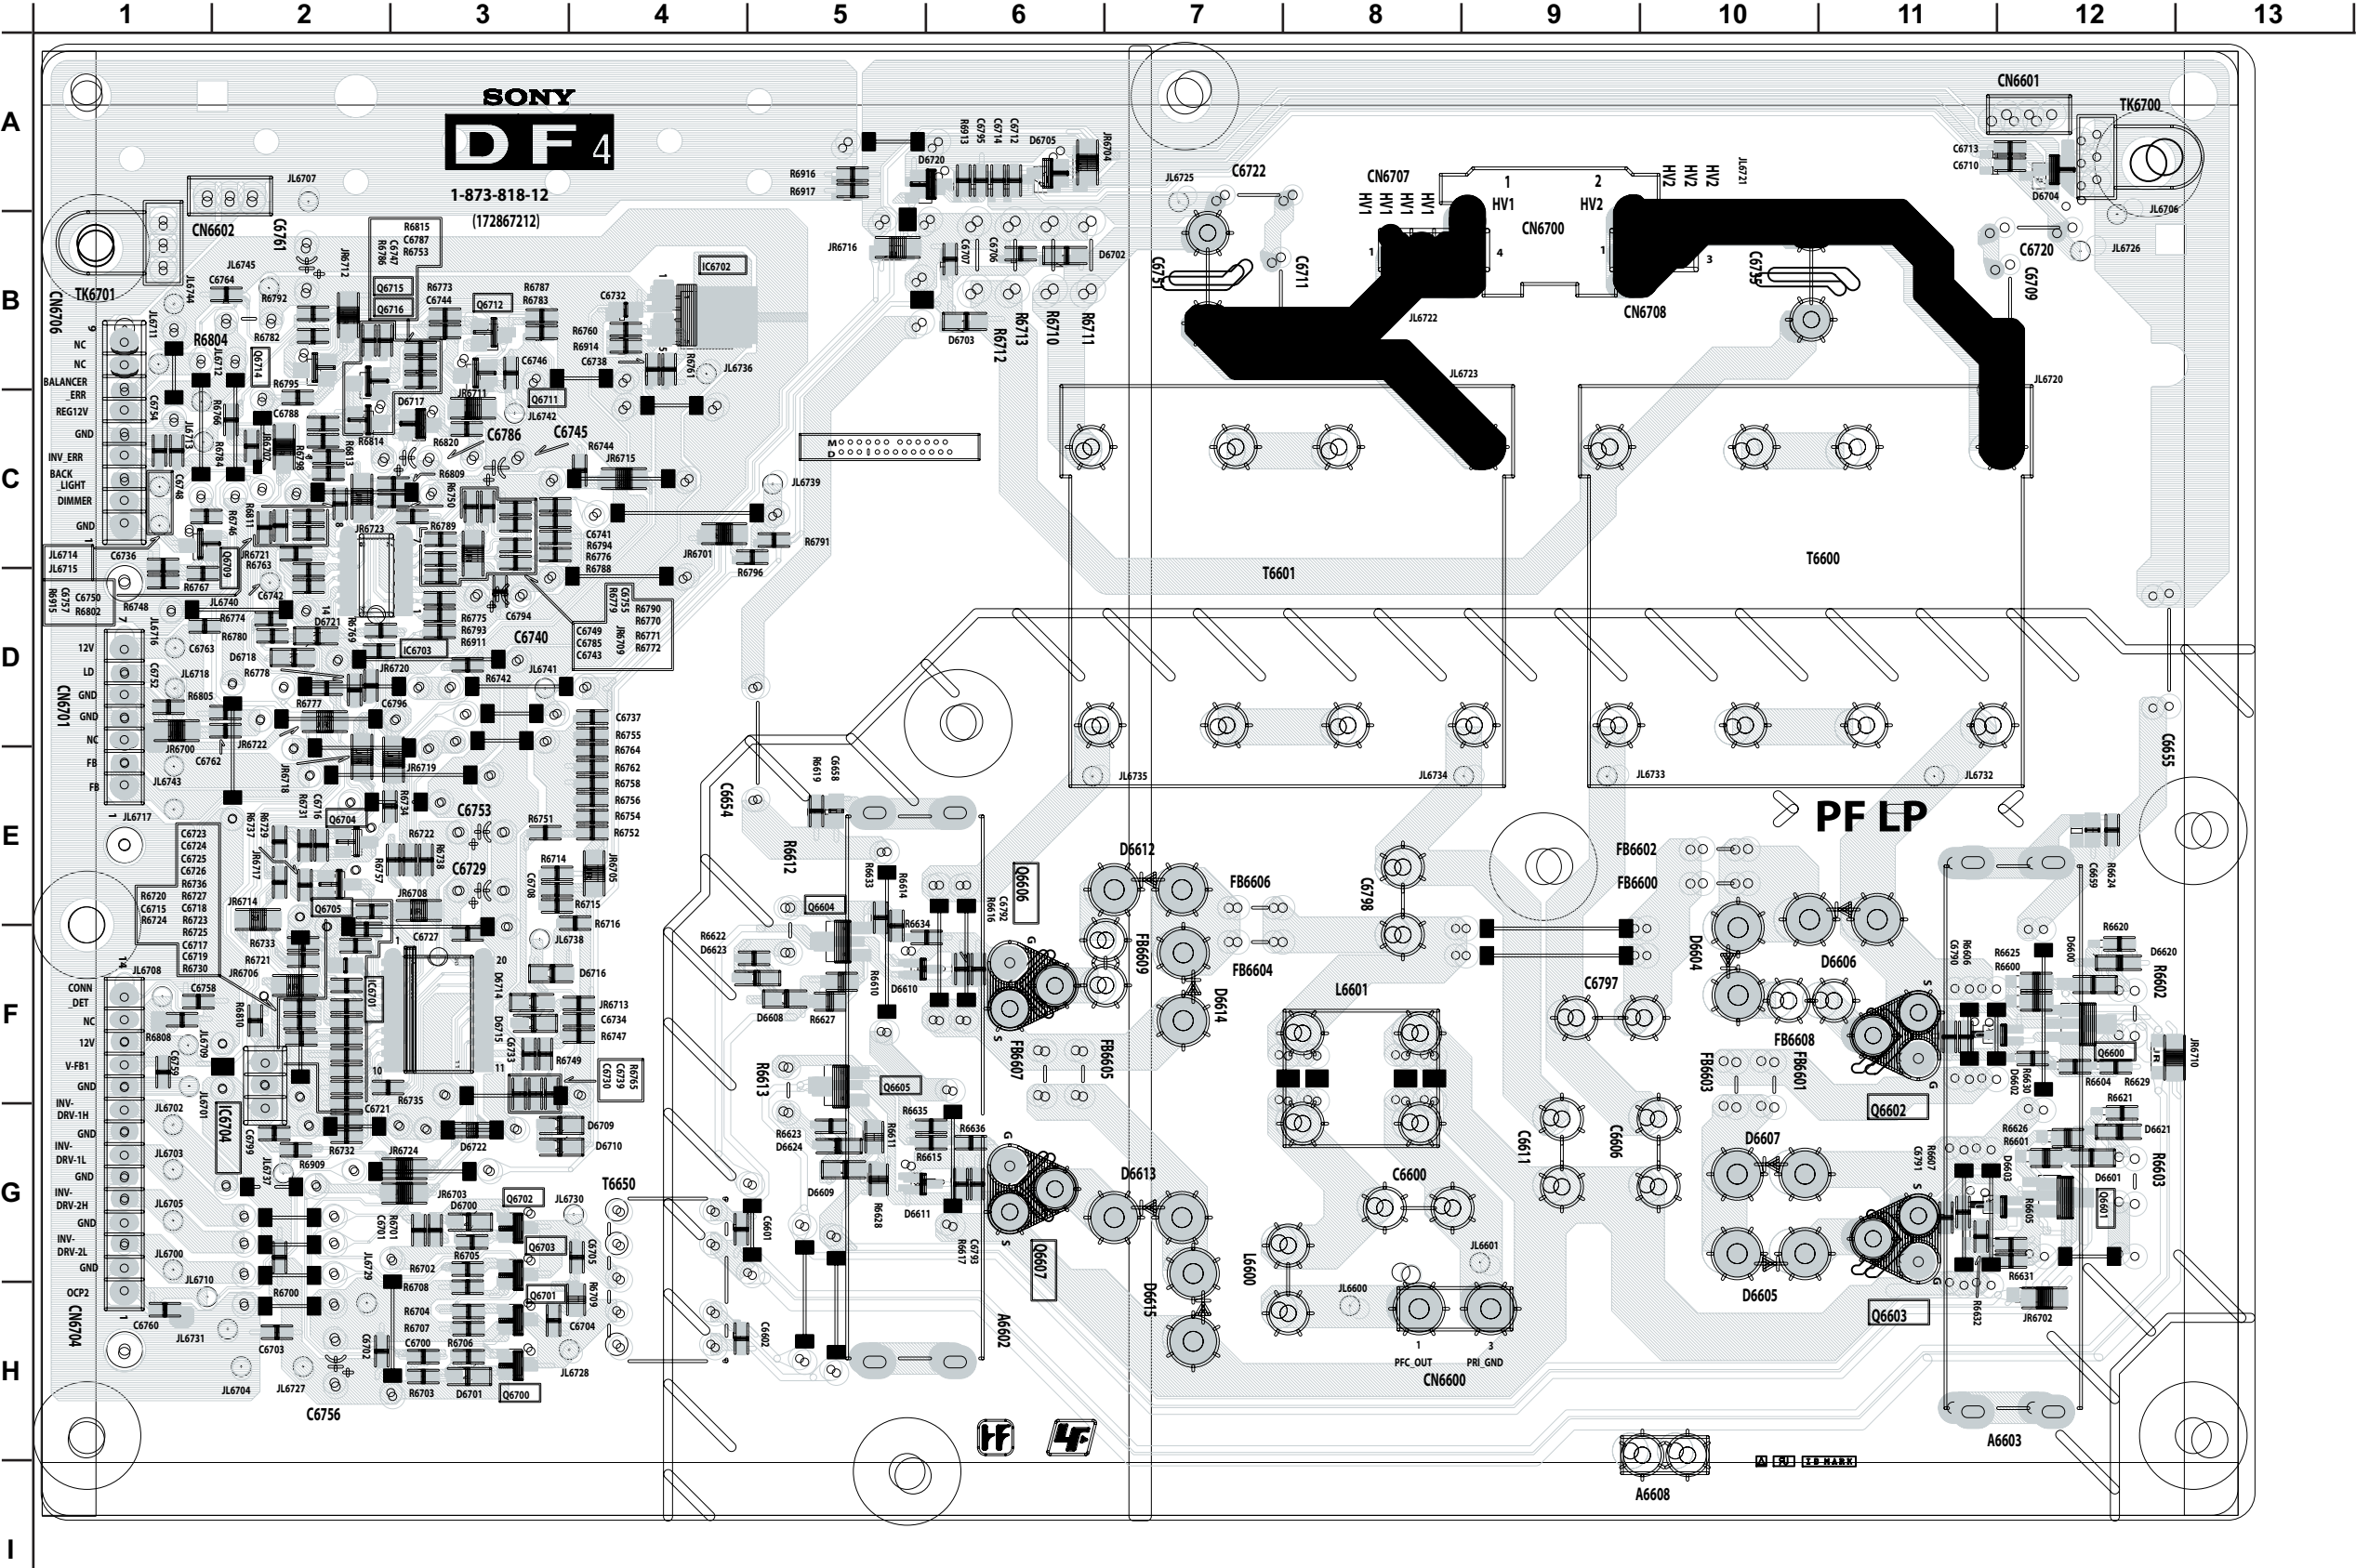


DF5 BOARD SCHEMATIC DIAGRAM

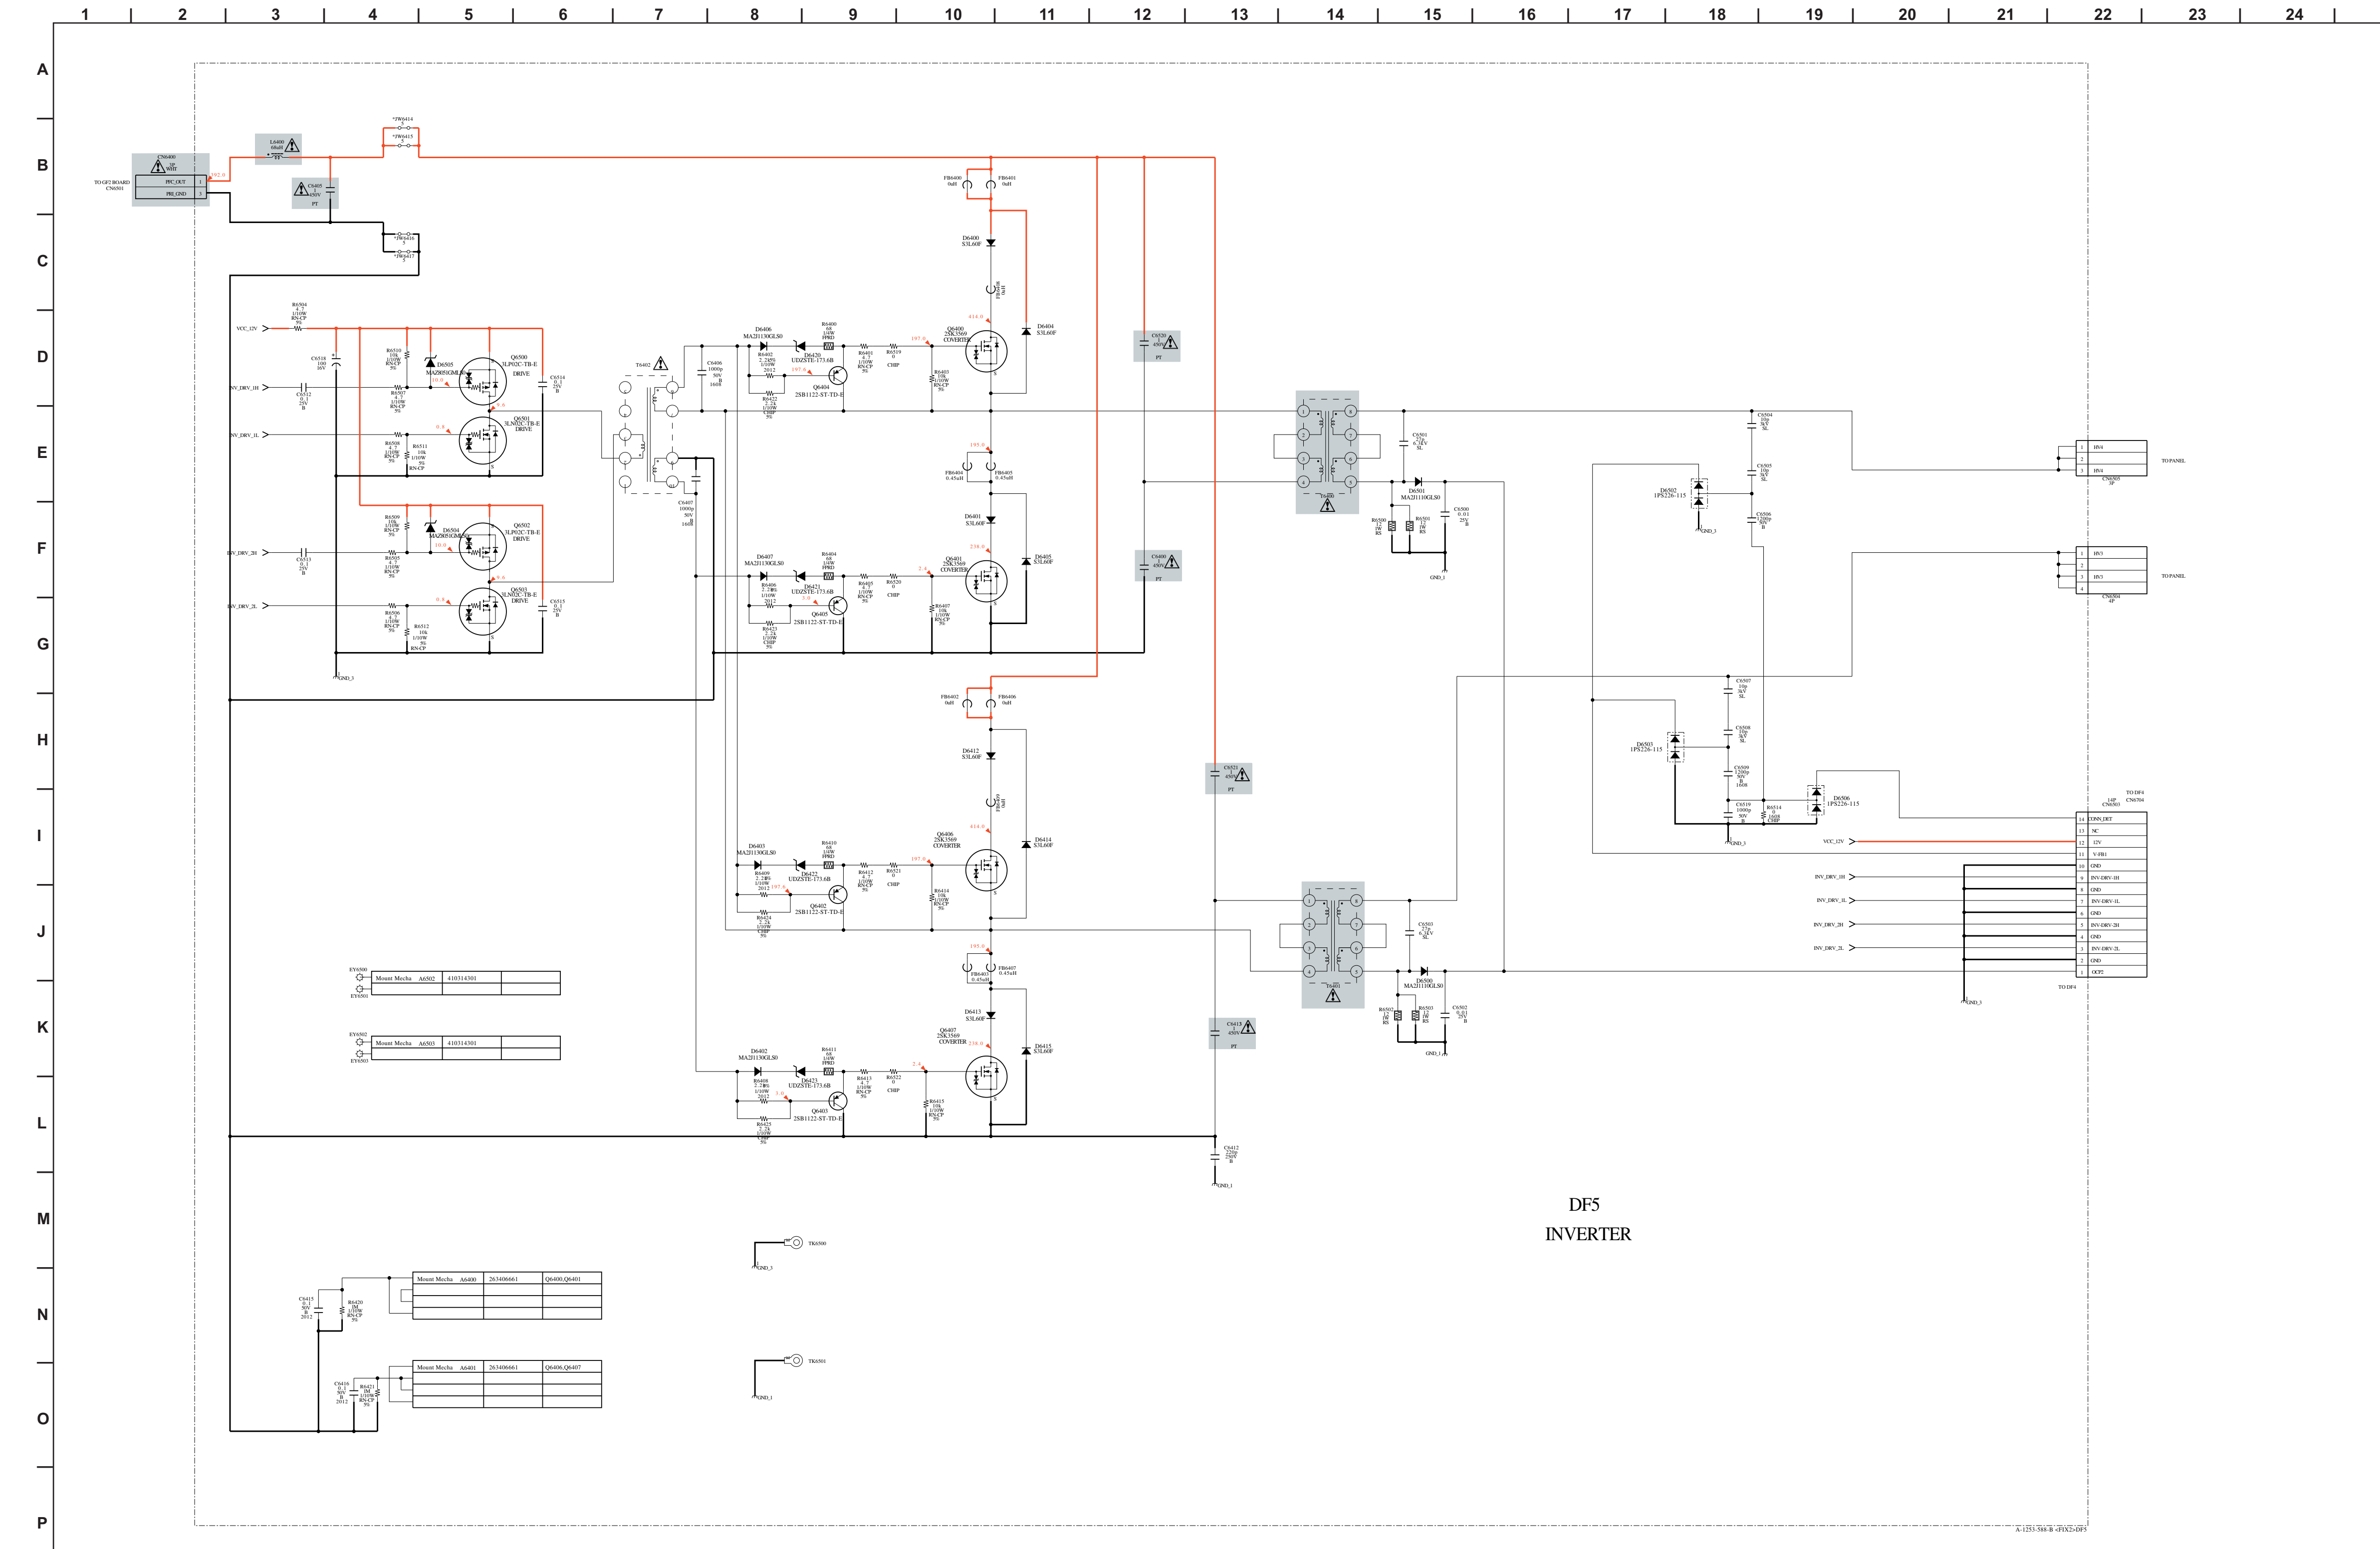


DF5
INVERTER

DF5 [INVERTER]
COMPONENT SIDE

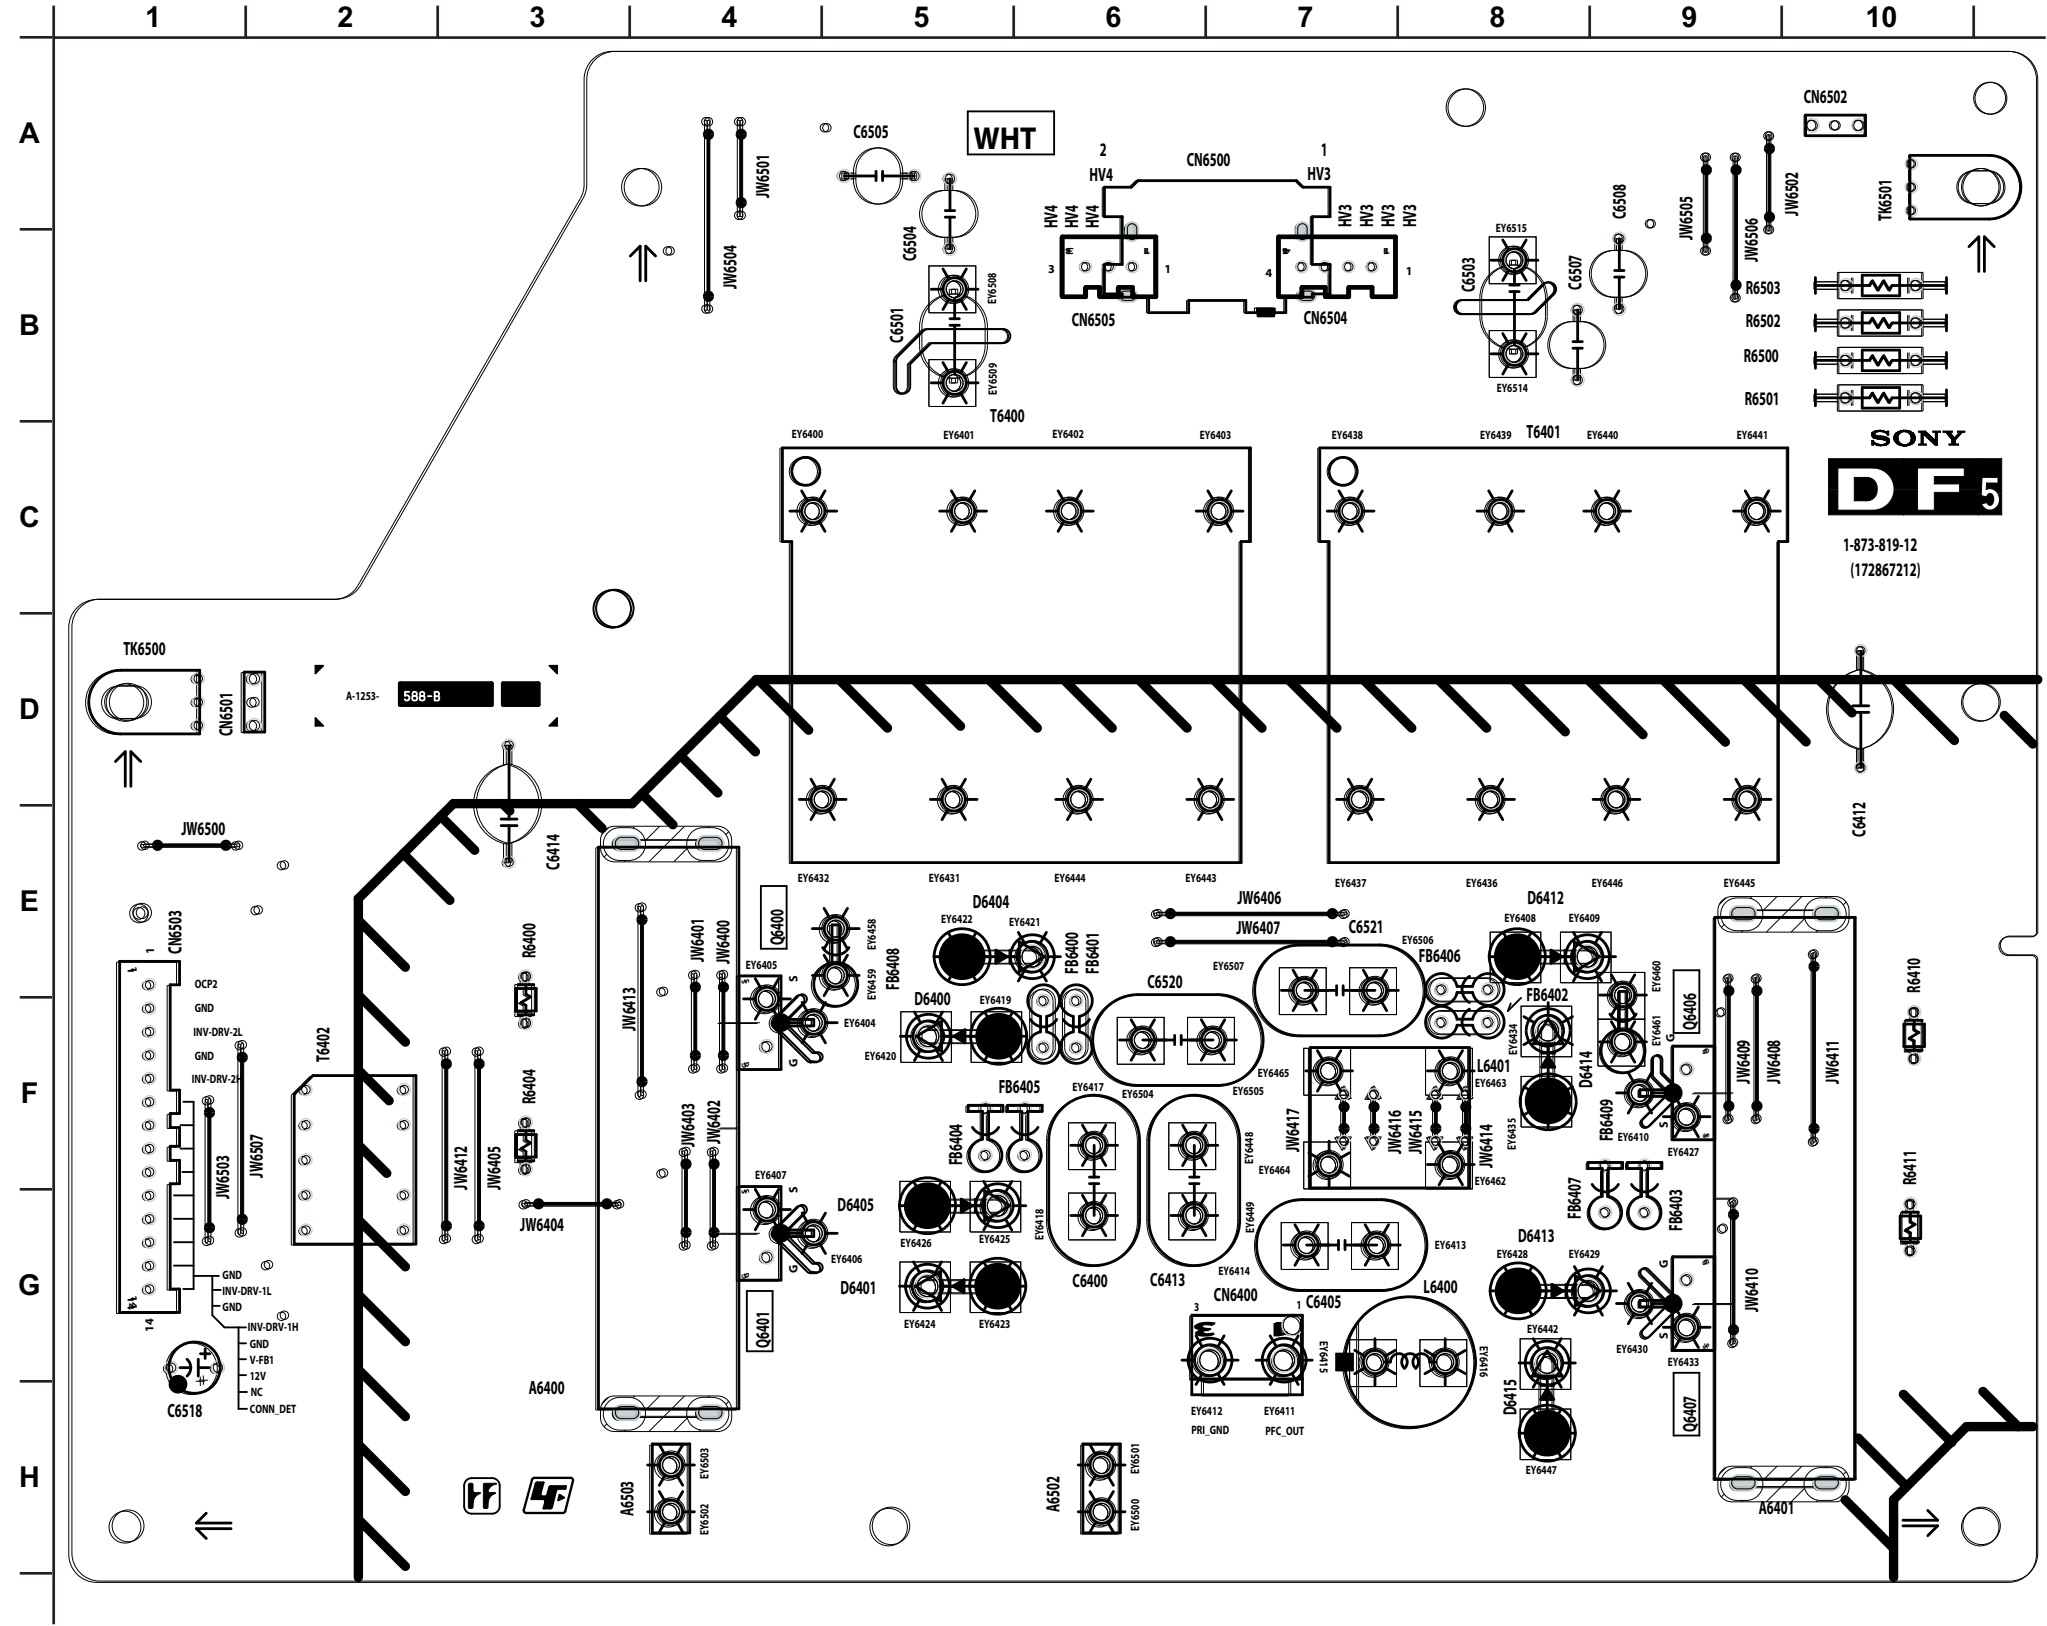


The image shows a detailed PCB layout for a power supply unit. The layout is divided into sections labeled A through H and 1 through 10. Key components include a Sony DF5 capacitor, a PFC OUT section, and a PF LP section. The layout also includes a connector for a power supply unit (PSU) and a connector for a fan. The layout is a top-down view of the PCB, showing the placement of components and the routing of traces.

FB1 BOARD SCHEMATIC DIAGRAM (1 OF 17)

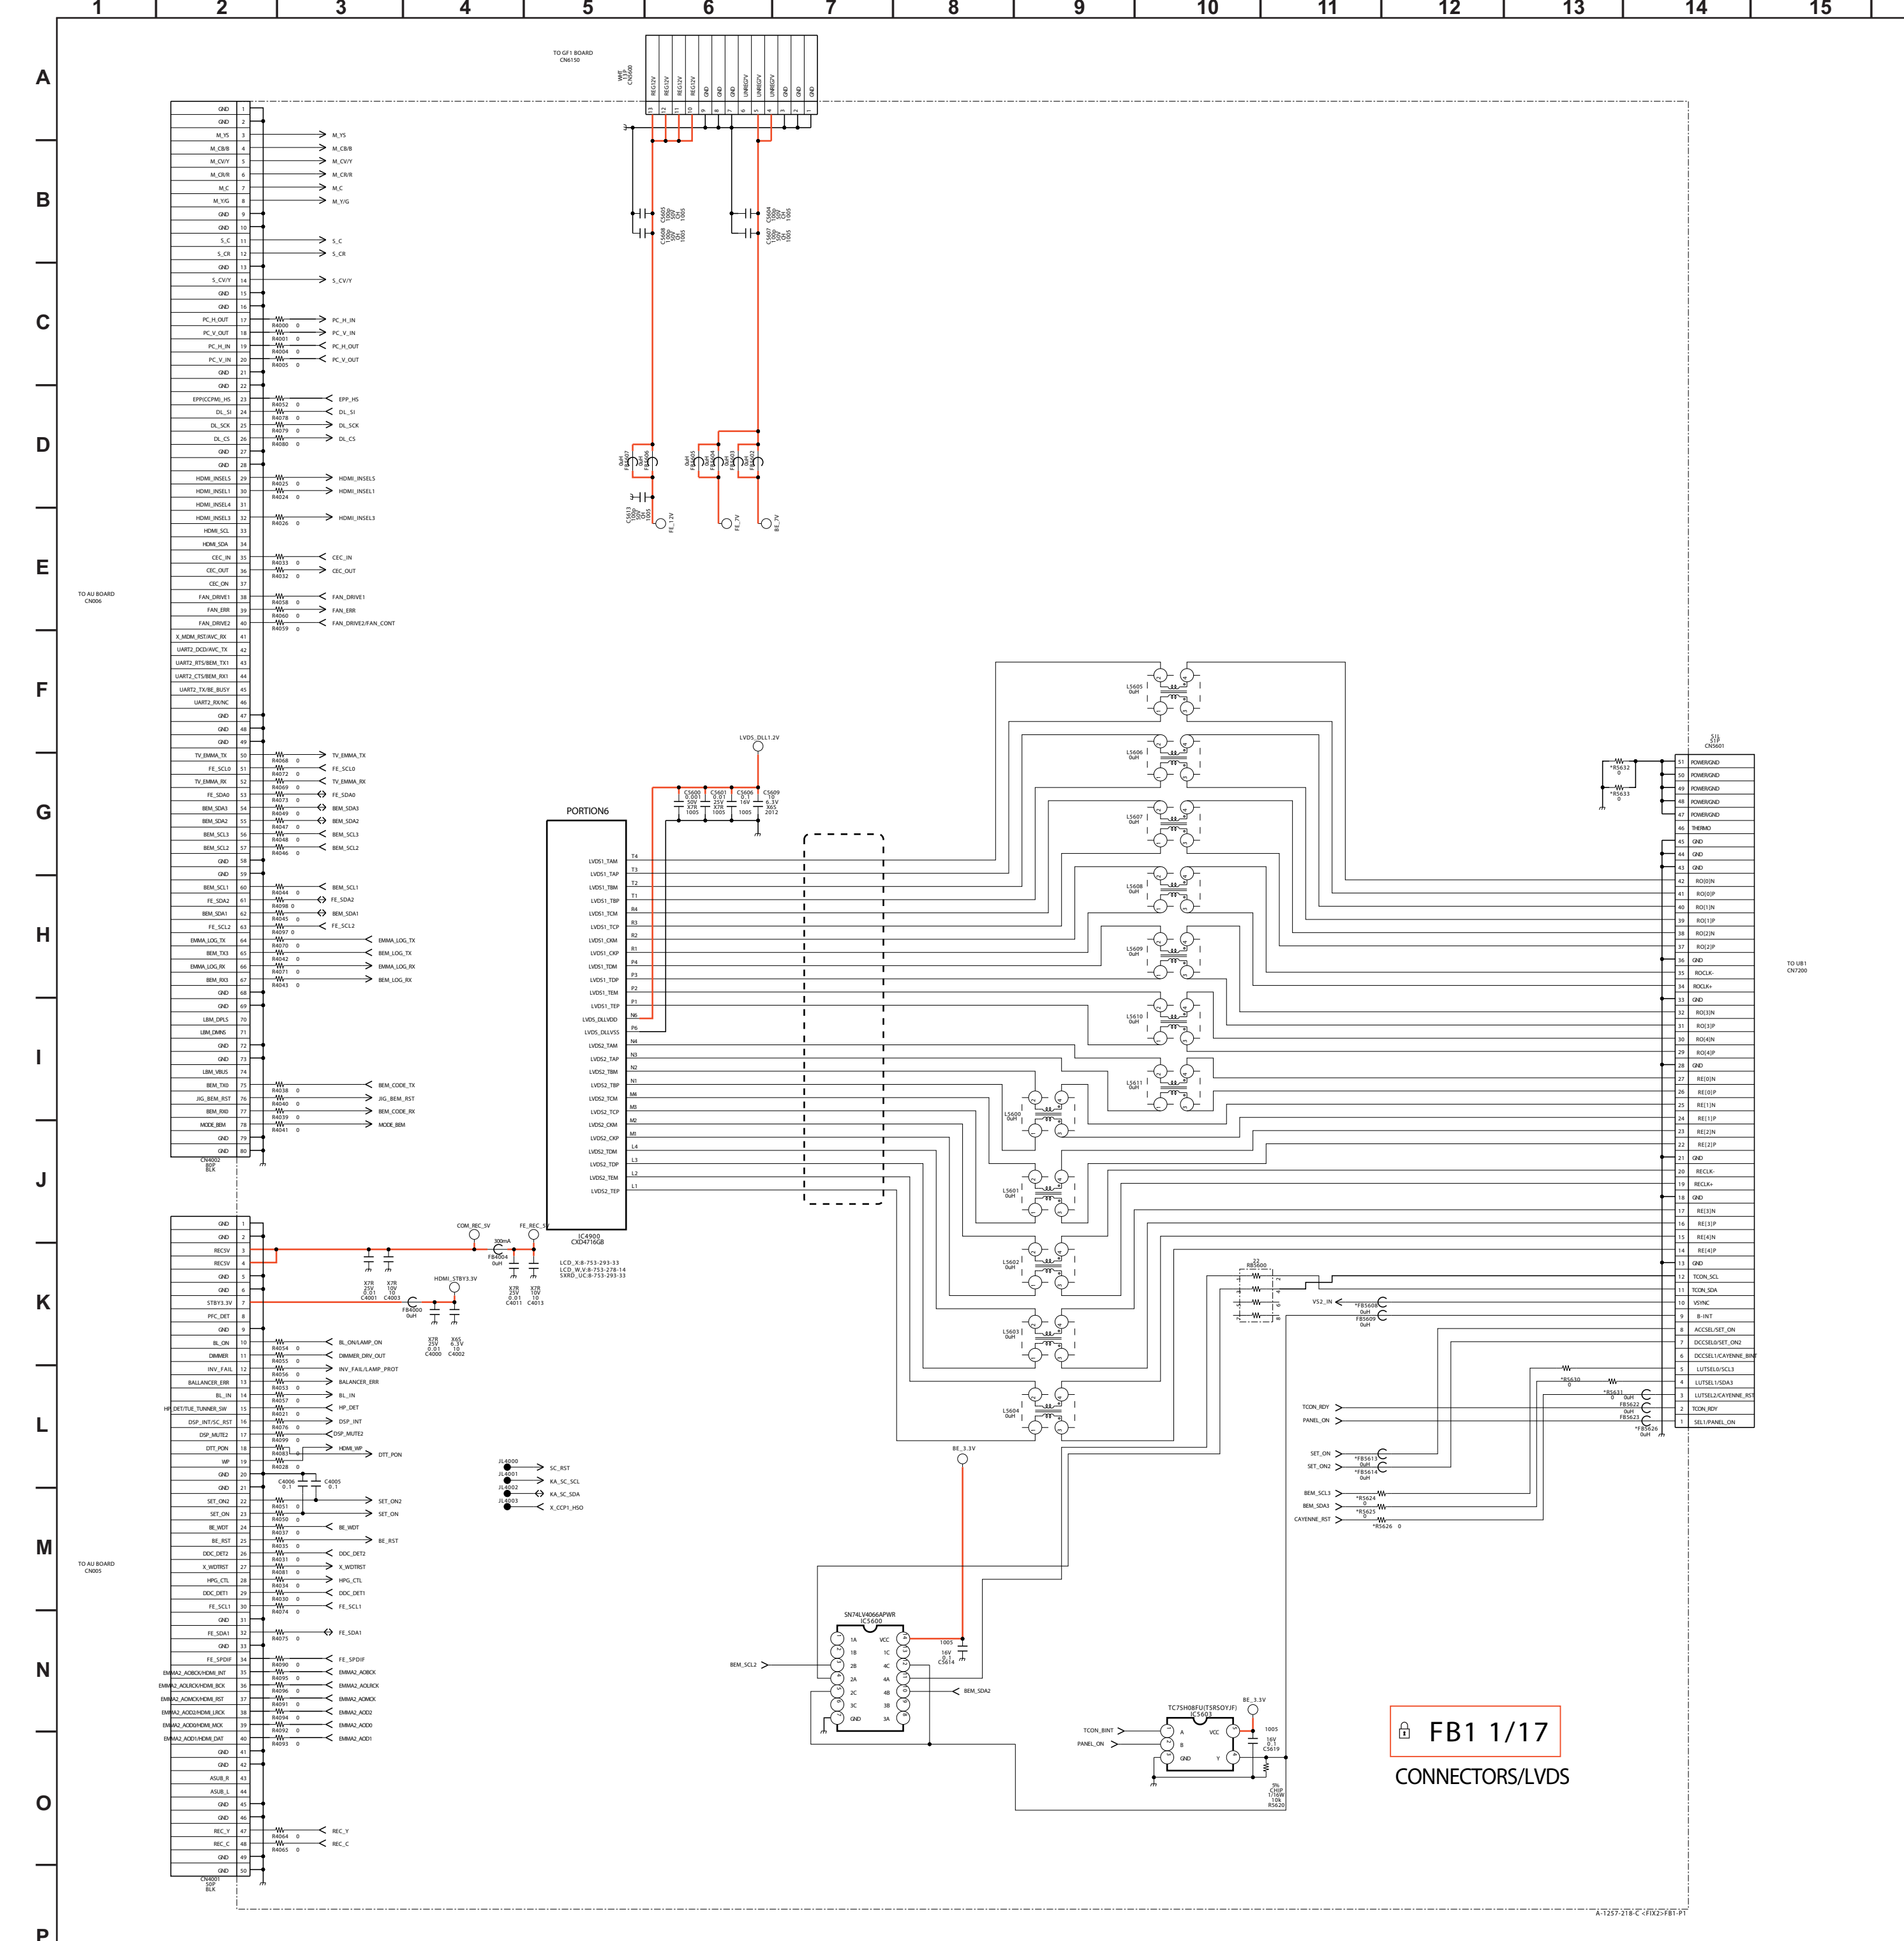


FB1 1/17
CONNECTORS/LVDS

FB1 BOARD SCHEMATIC DIAGRAM (2 OF 17)

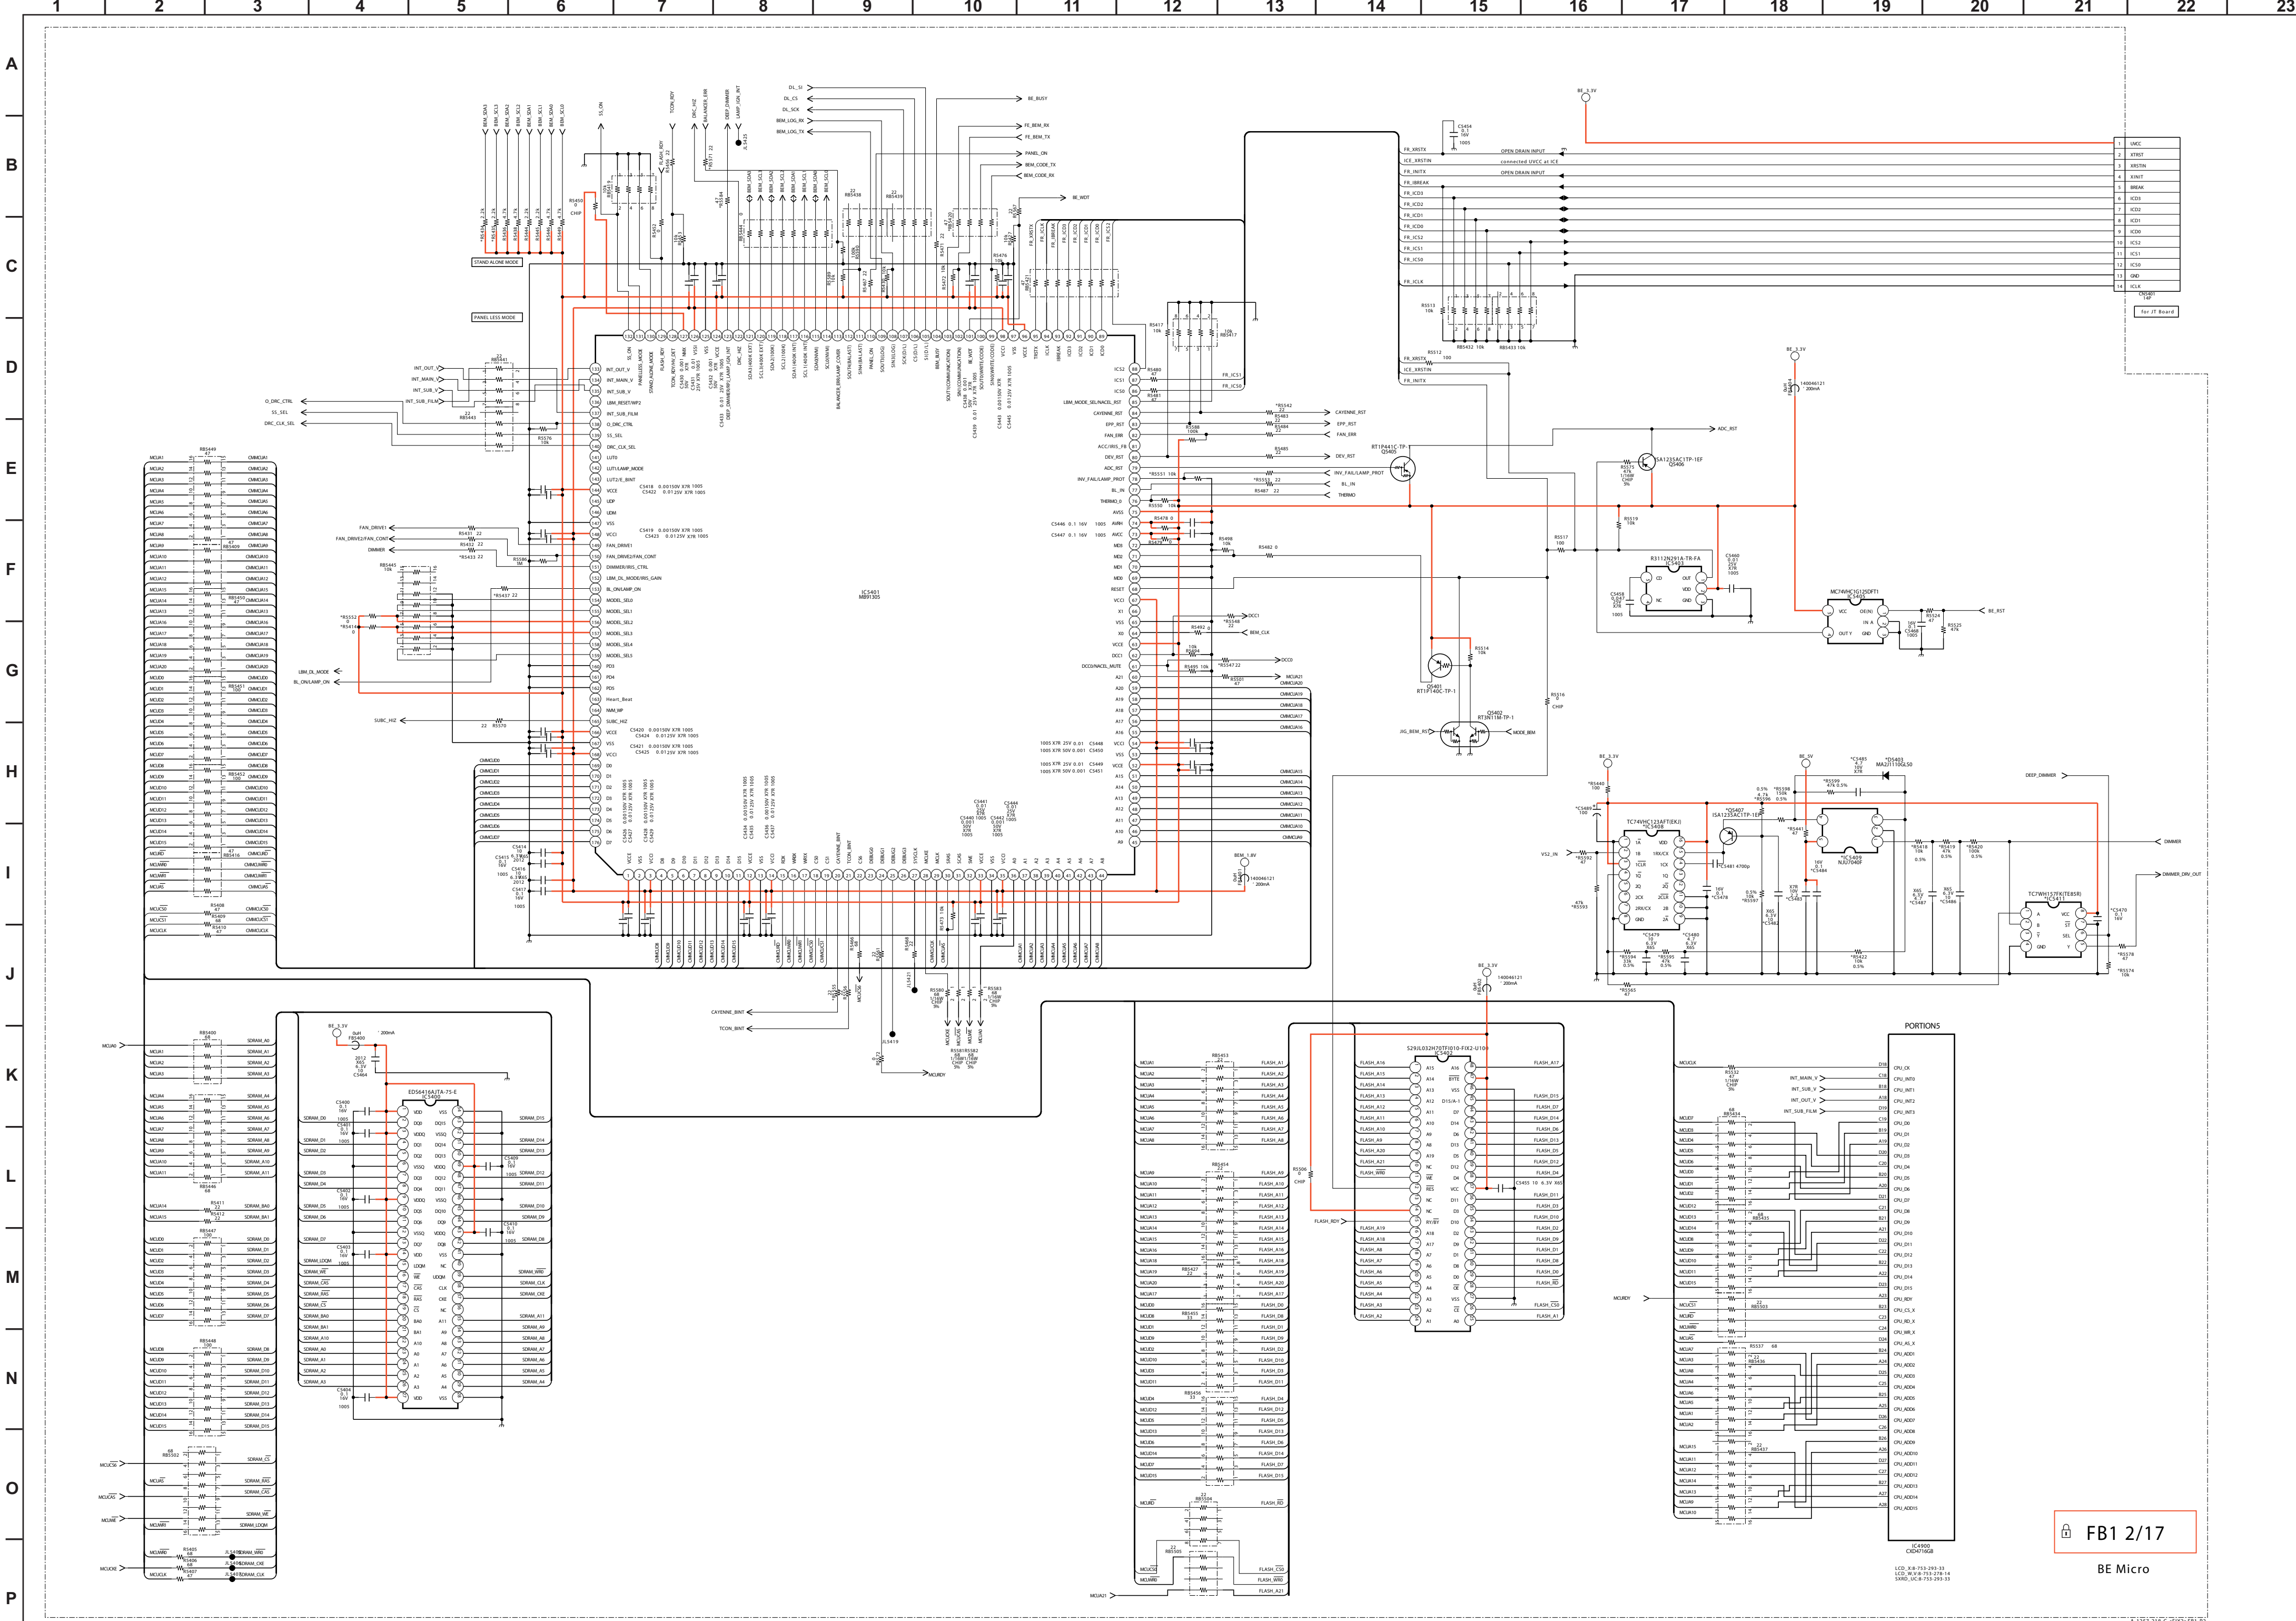


FB1 BOARD SCHEMATIC DIAGRAM (3 OF 17)

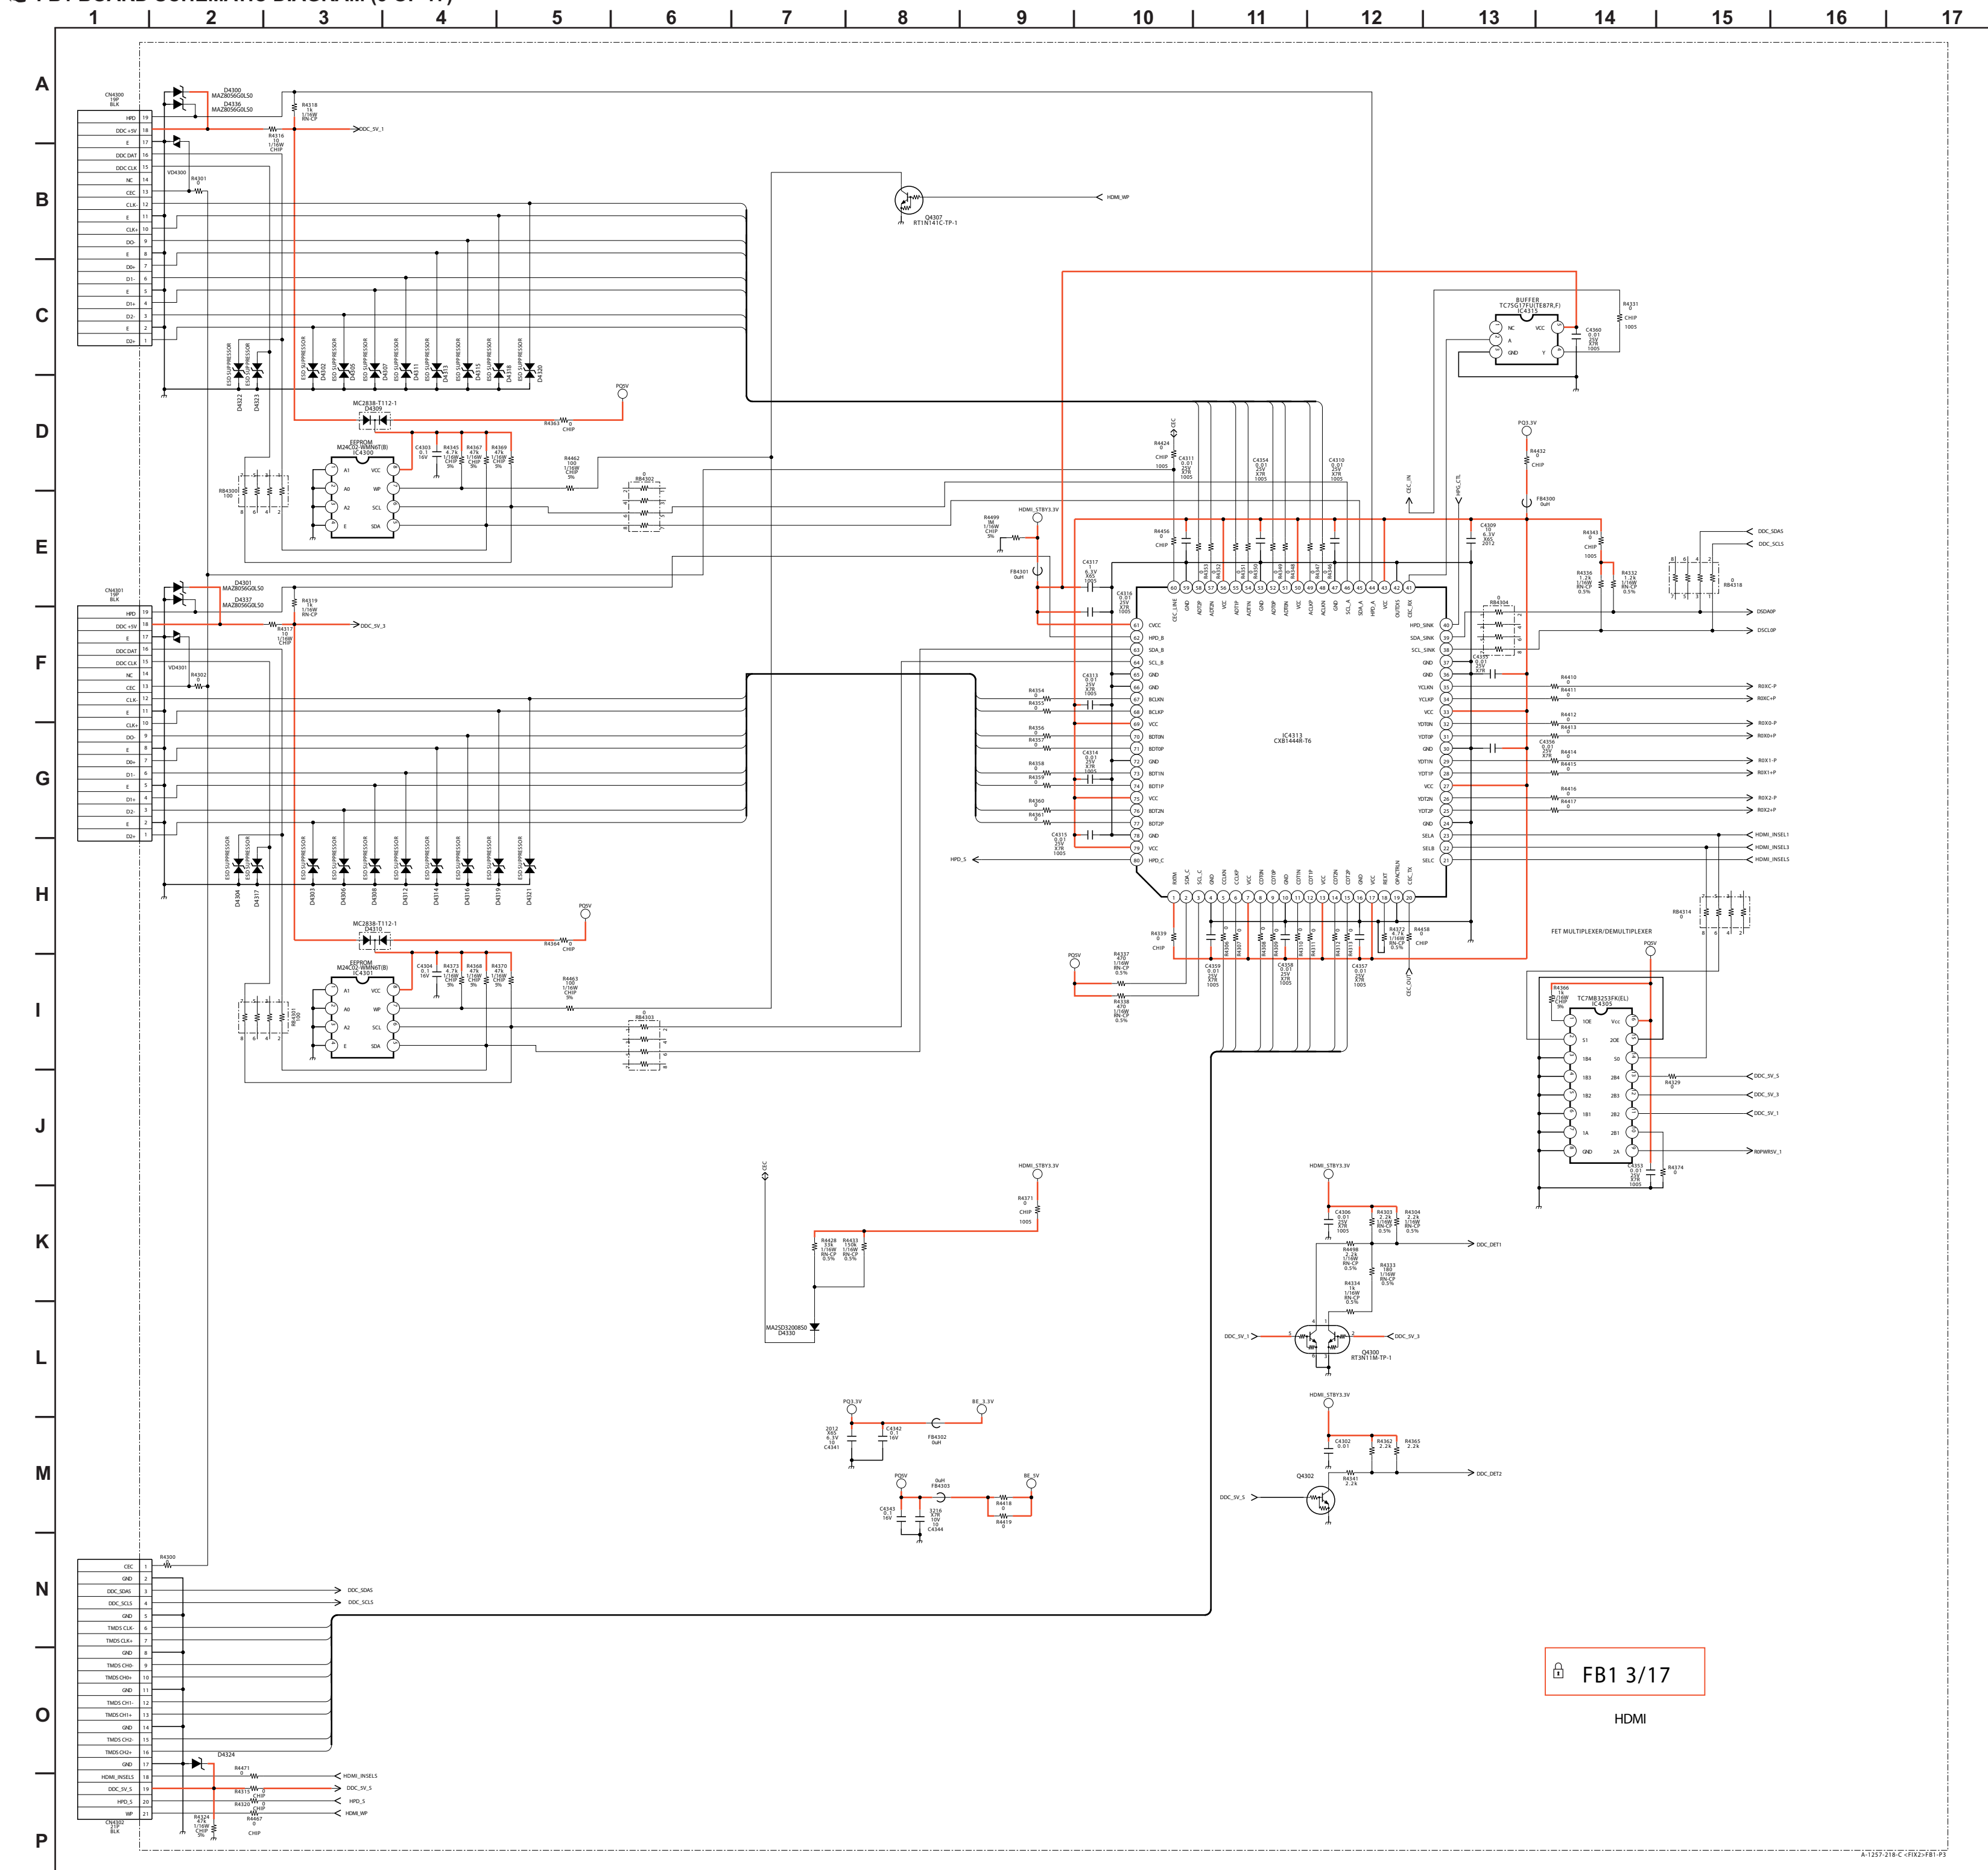

FB1 3/17

HDMI



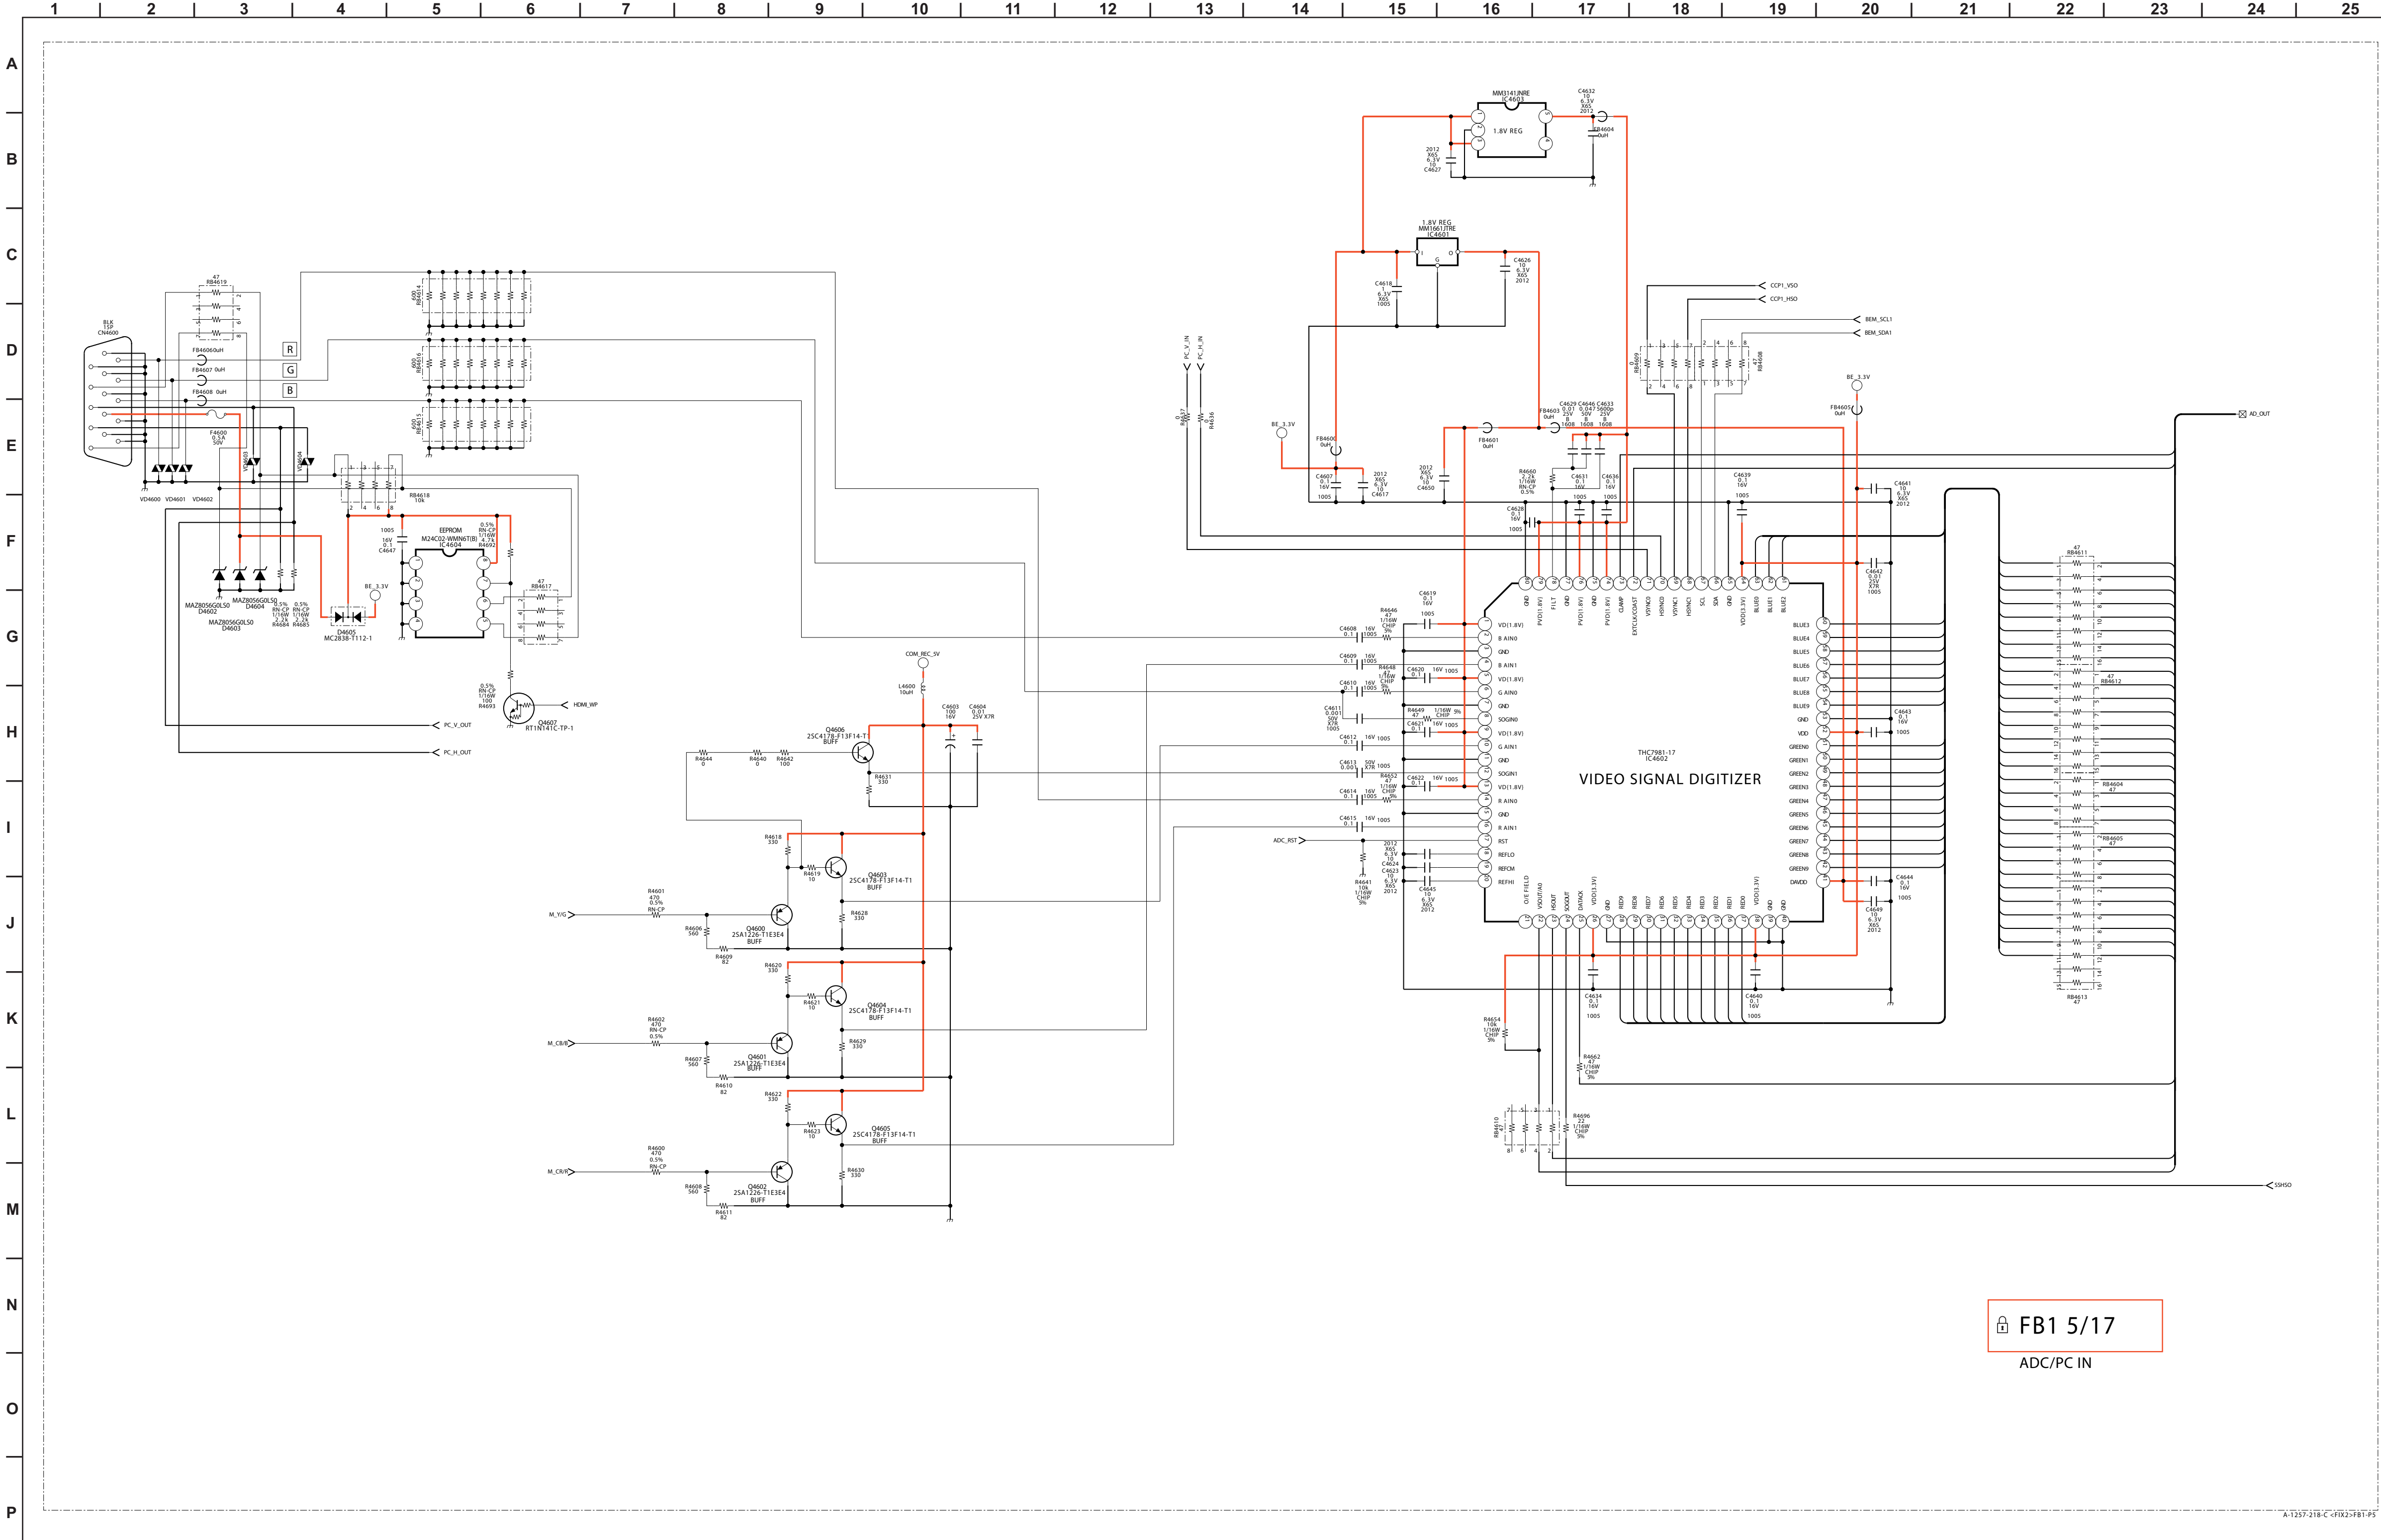















FB1 BOARD SCHEMATIC DIAGRAM (13 OF 17)

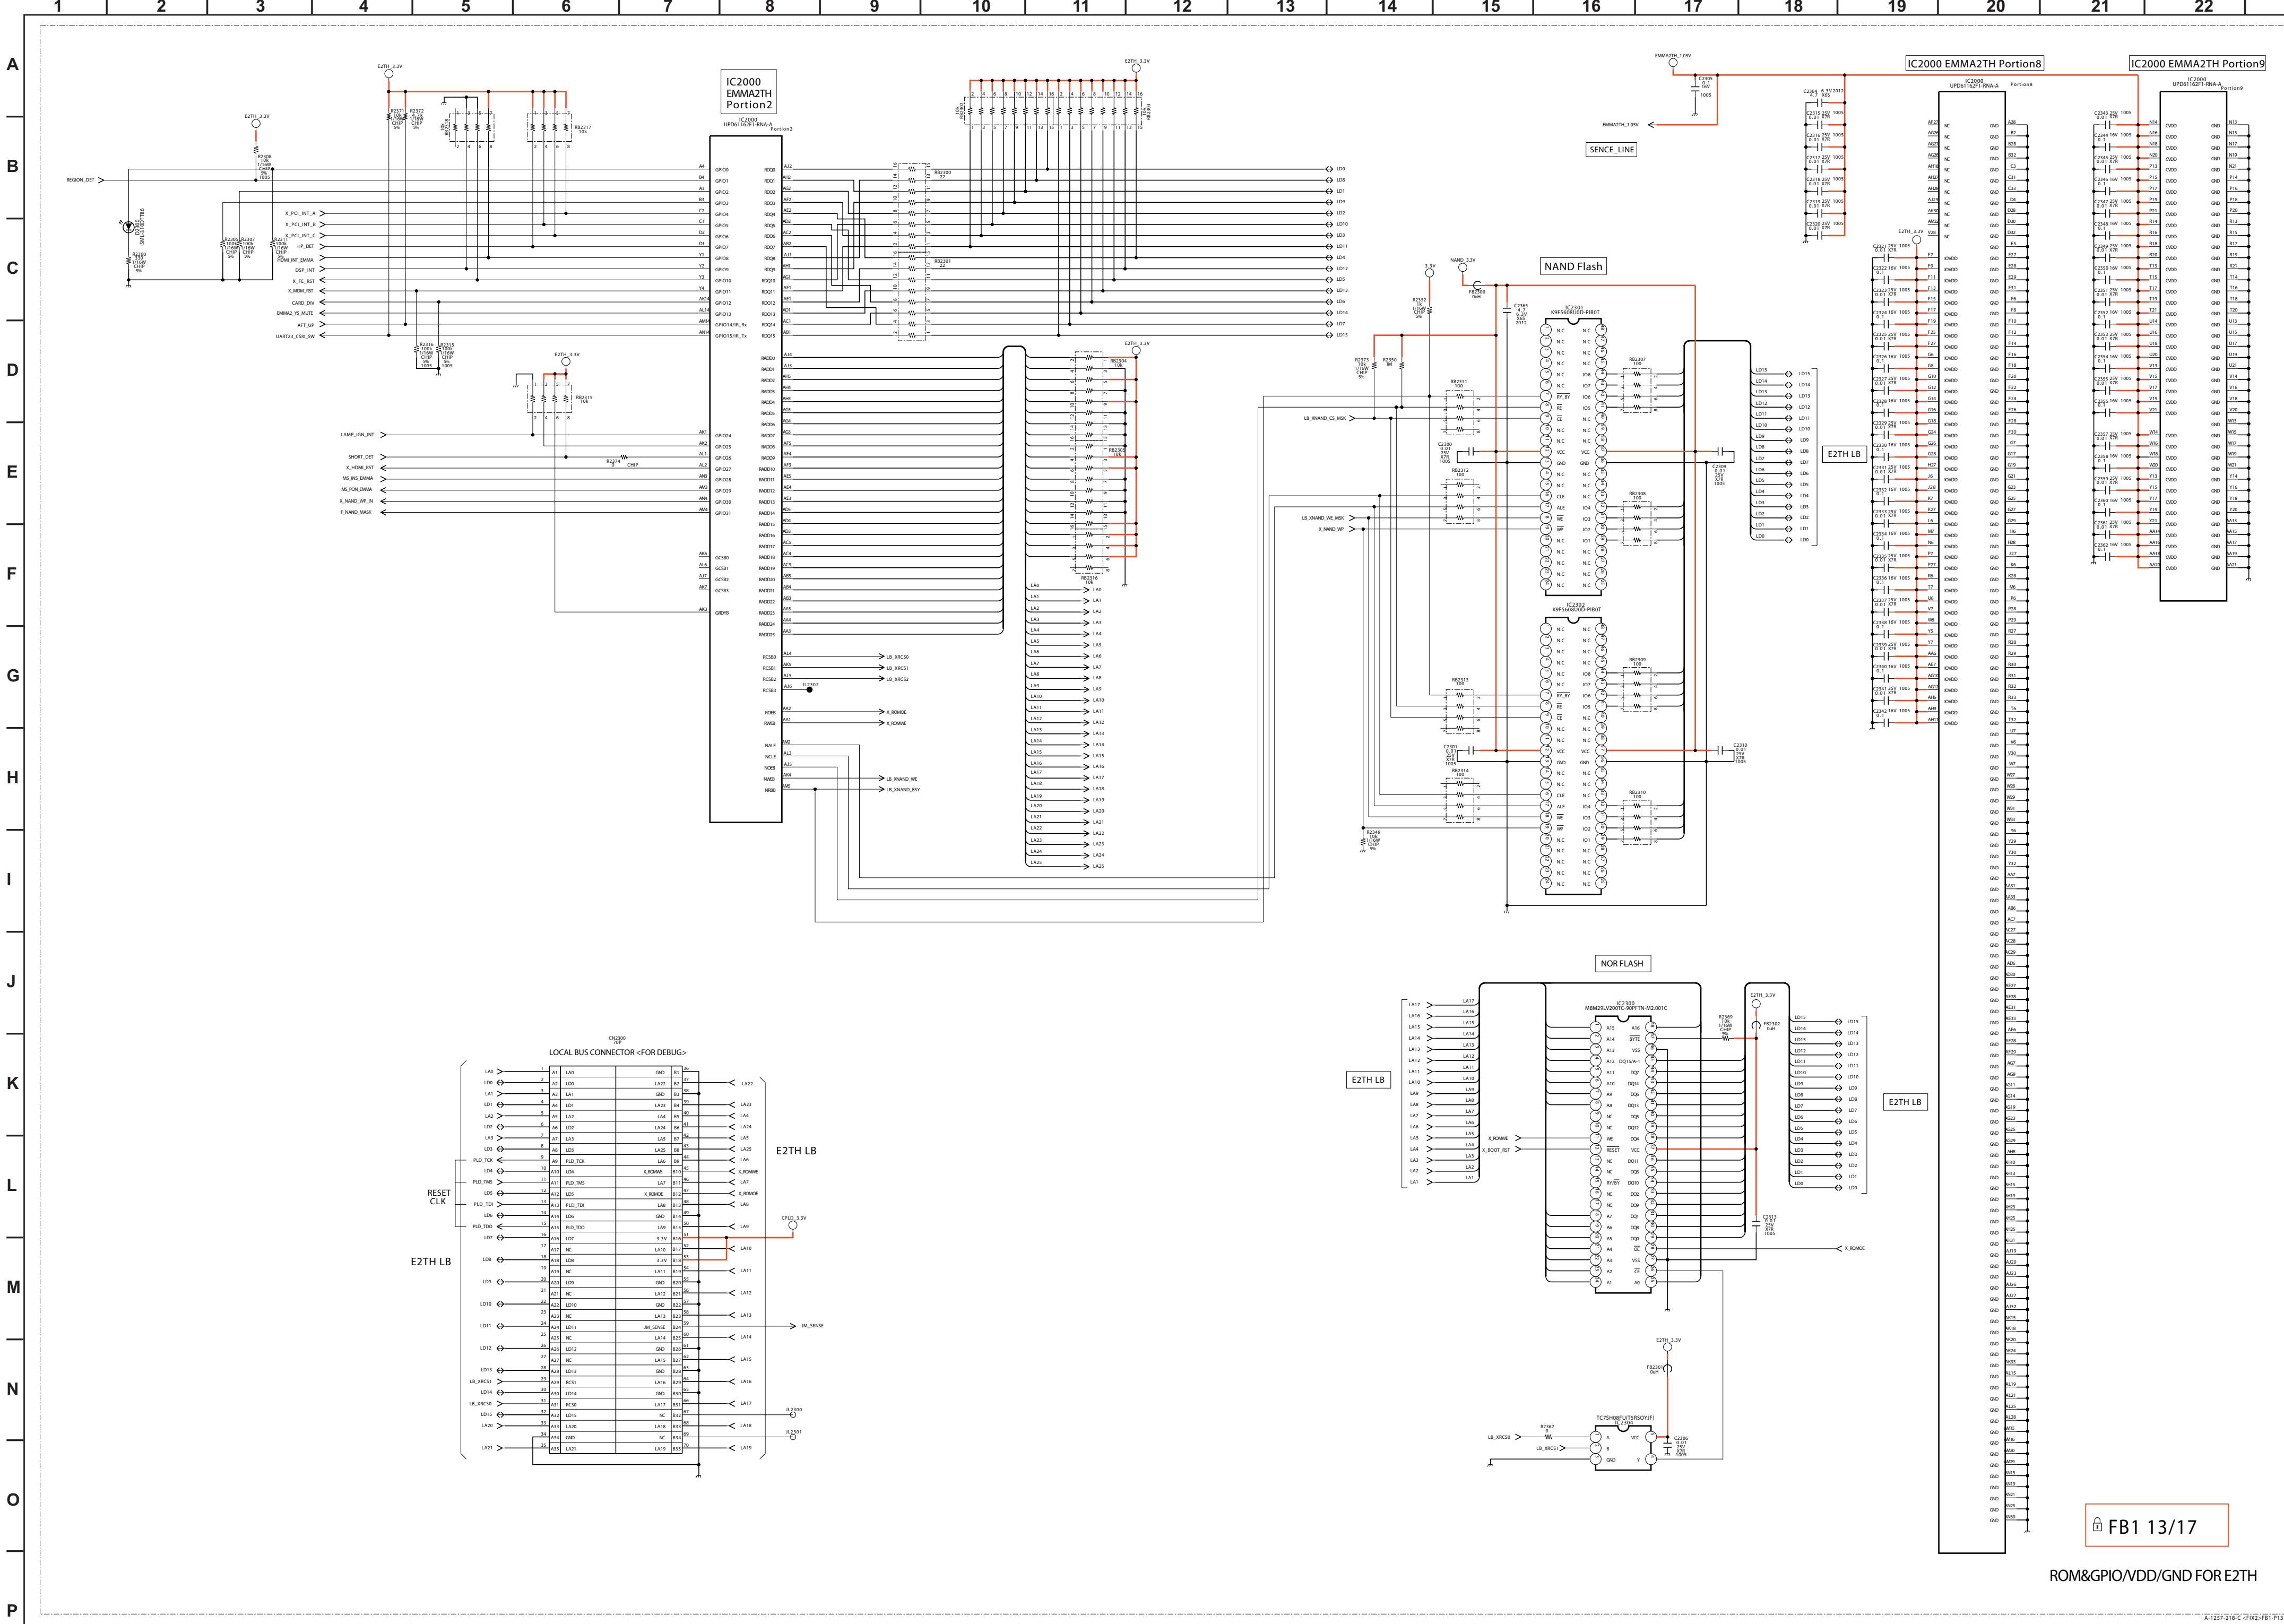

FB1 13/17

ROM&GPIO/VDD/GND for E2TH


FB1 BOARD SCHEMATIC DIAGRAM (14 OF 17)

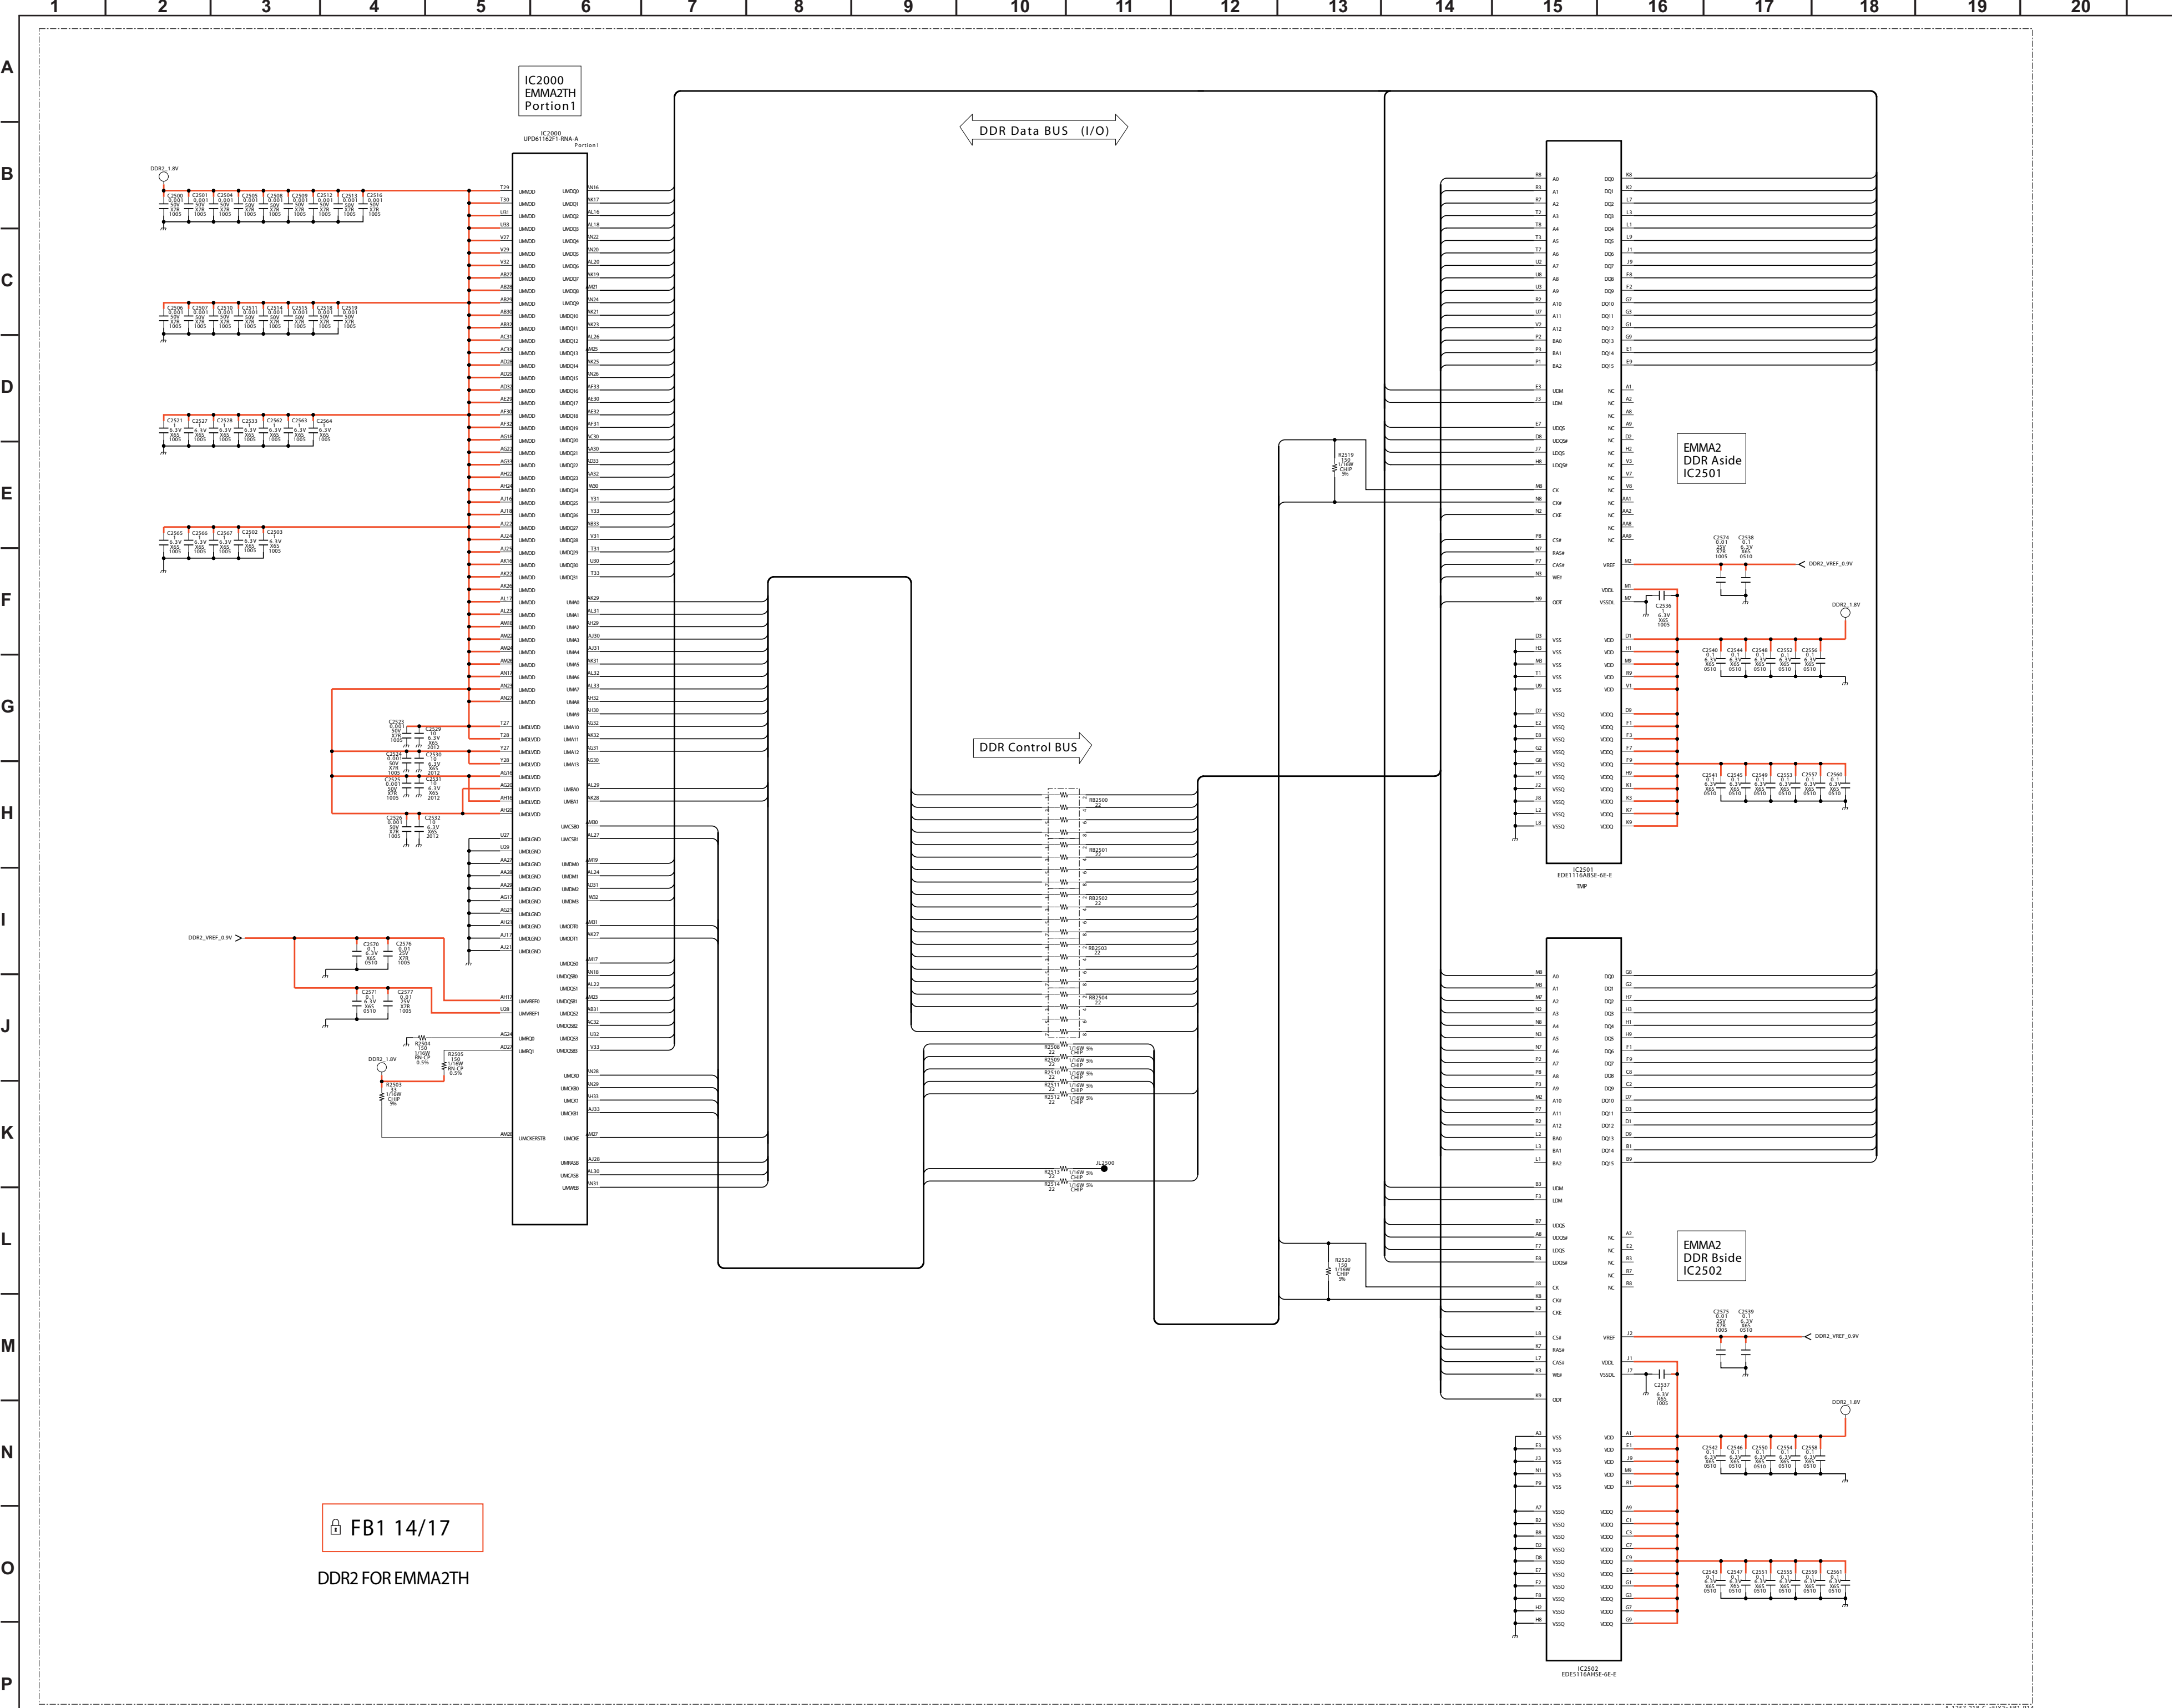


FB1 14/17

DDR2 FOR EMMA2TH


FB1 BOARD SCHEMATIC DIAGRAM (15 OF 17)

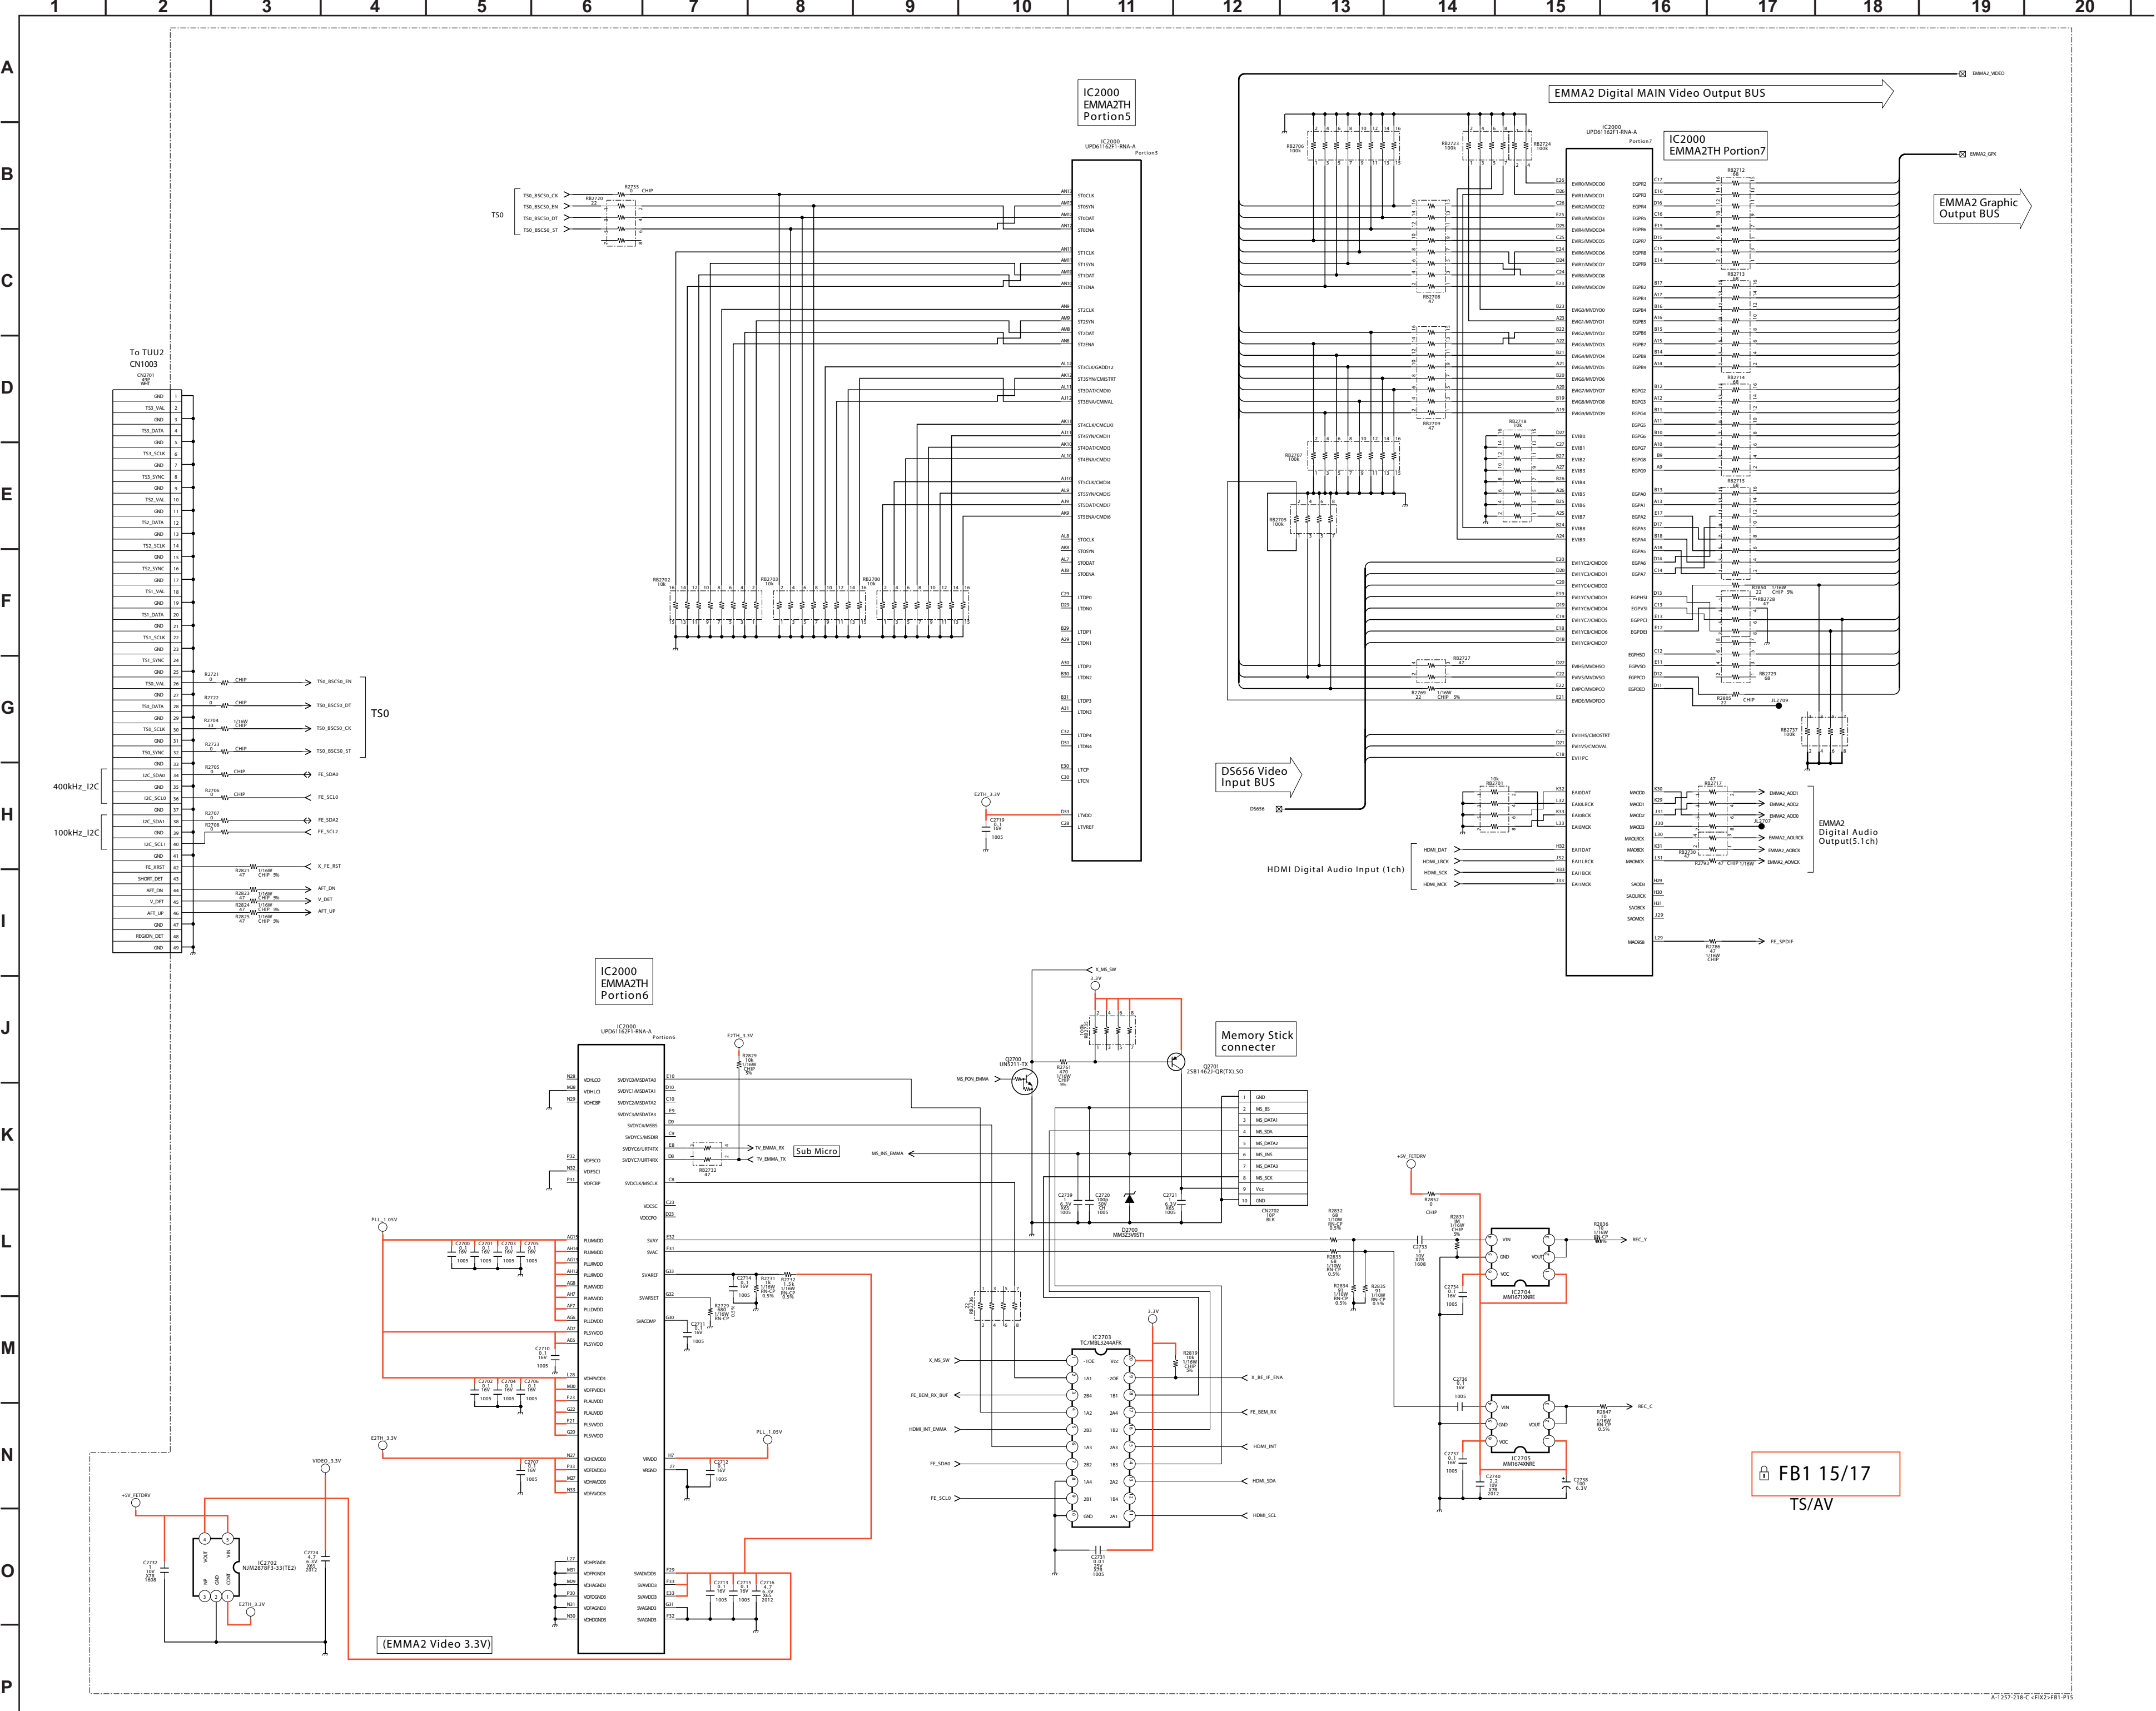


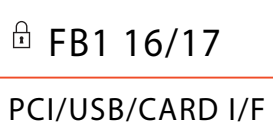




GF2 BOARD SCHEMATIC DIAGRAM

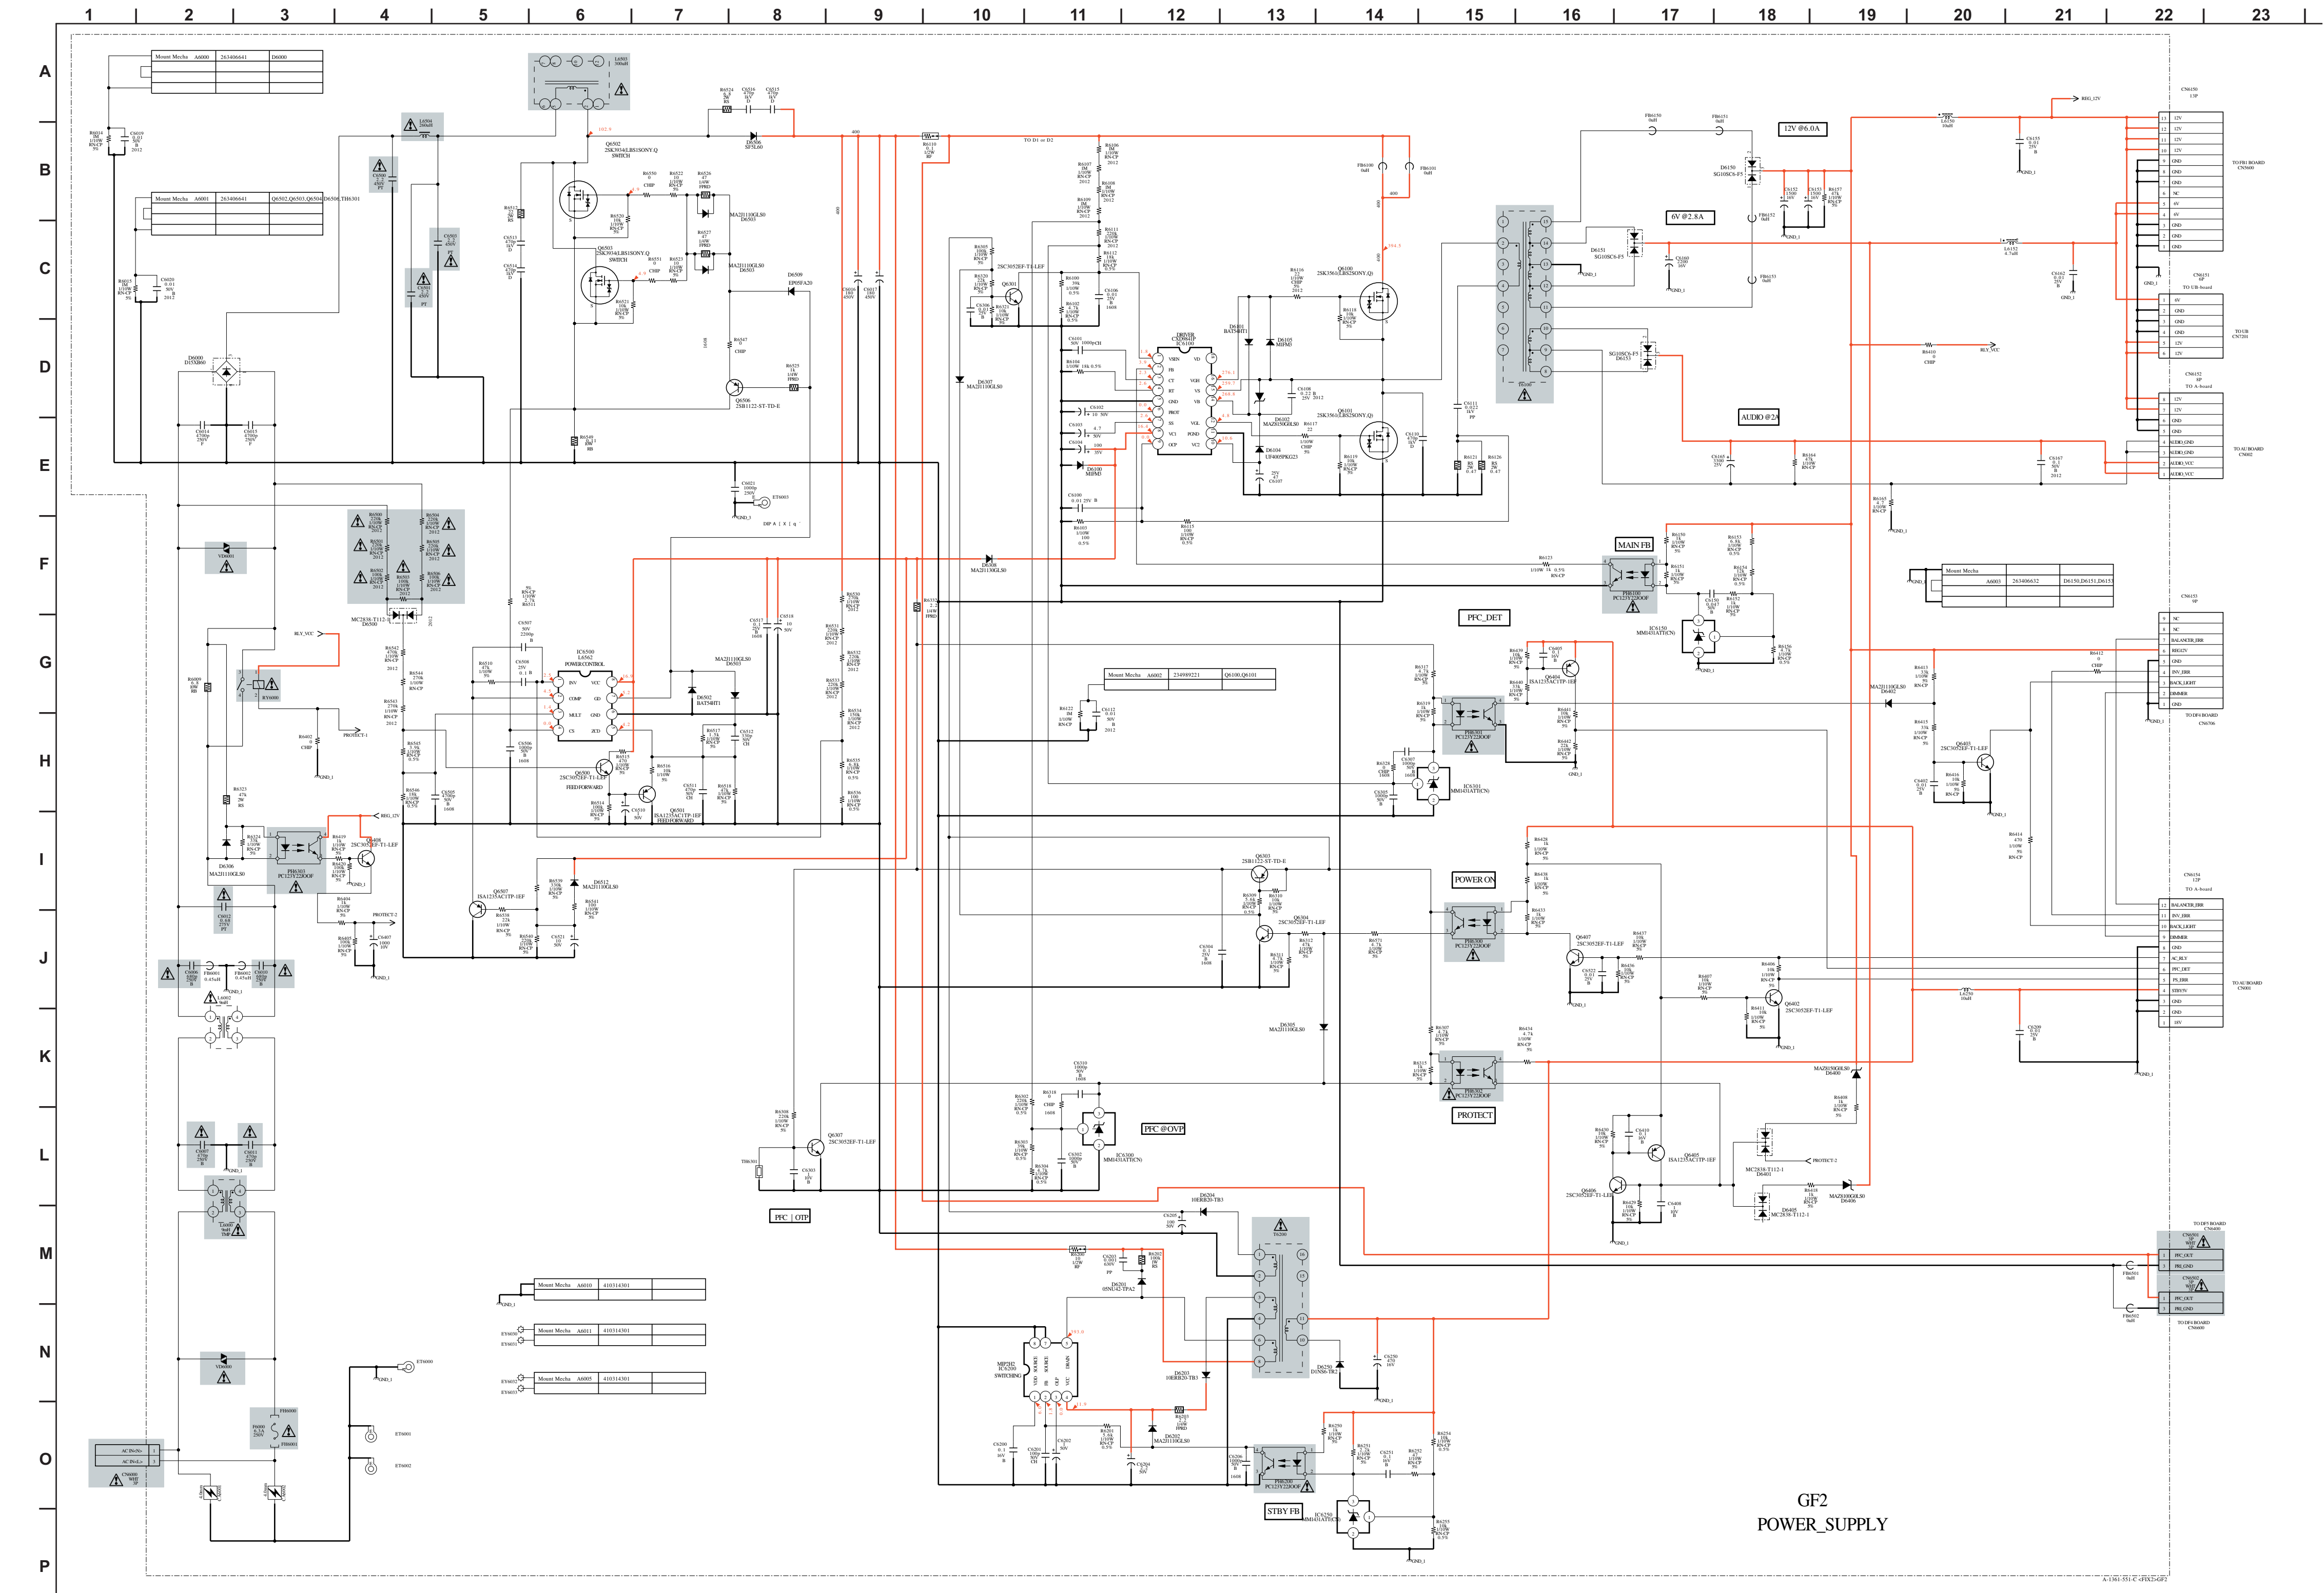


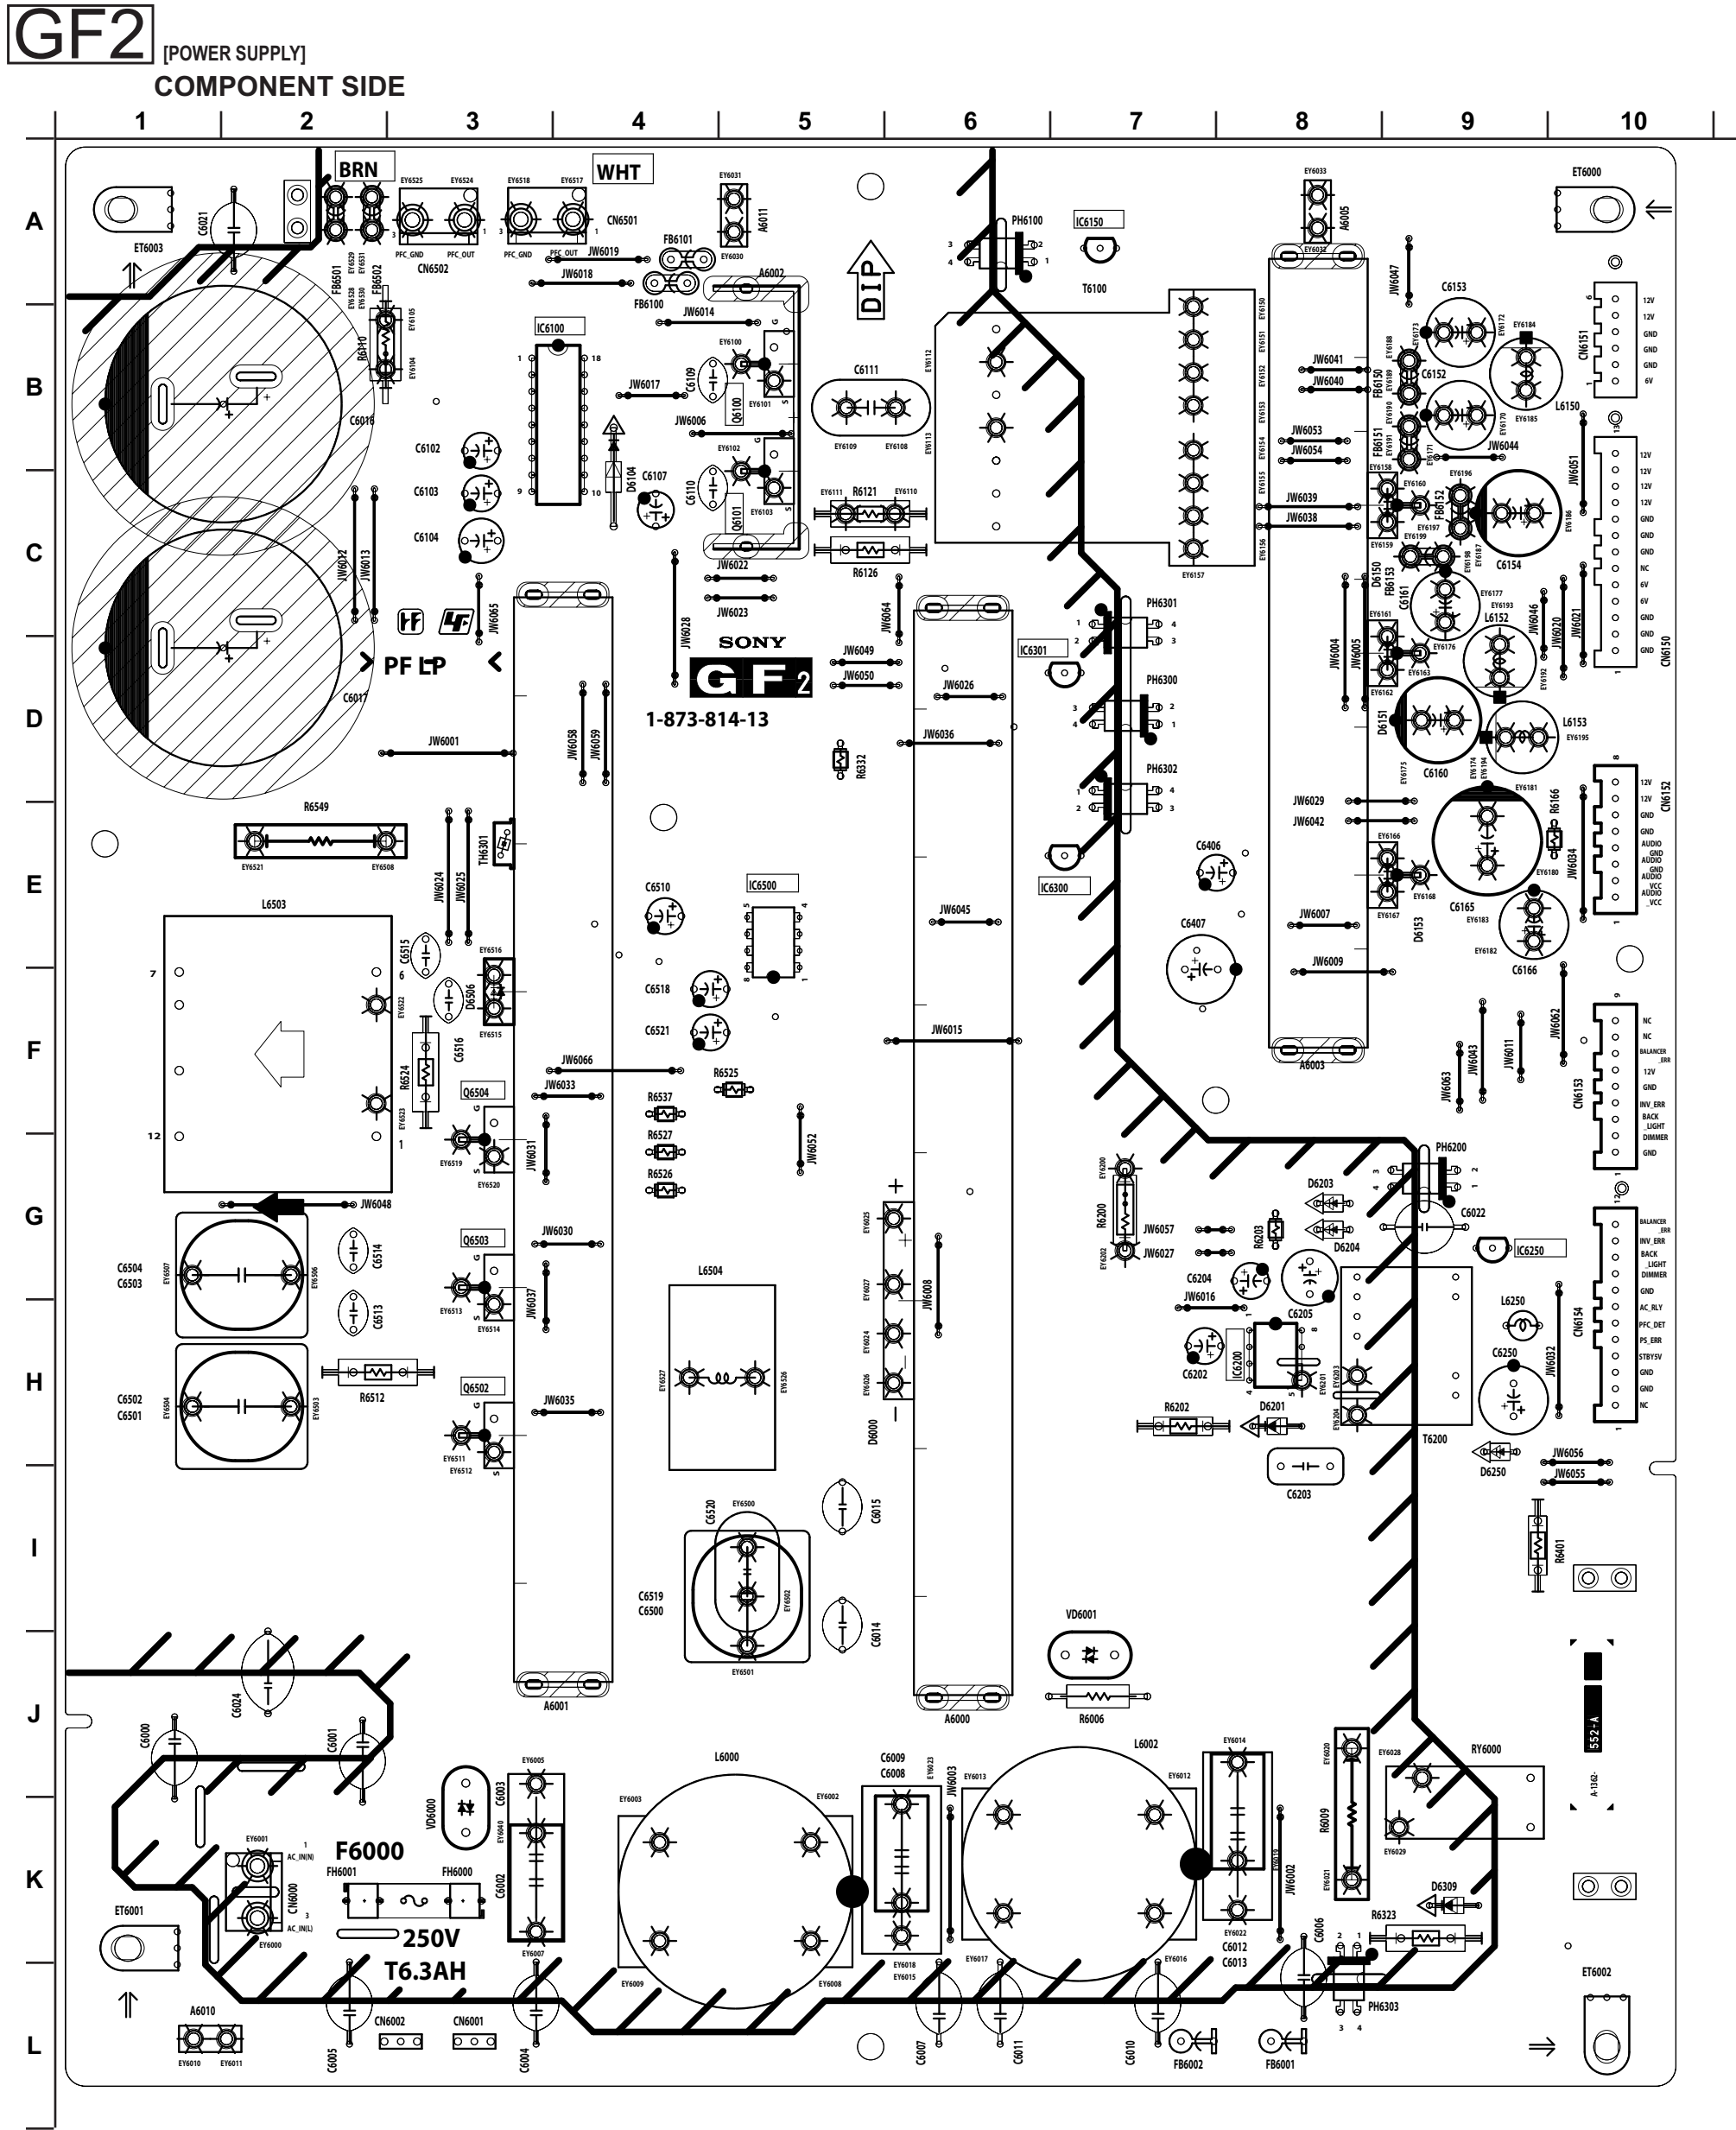


H1 BOARD SCHEMATIC DIAGRAM

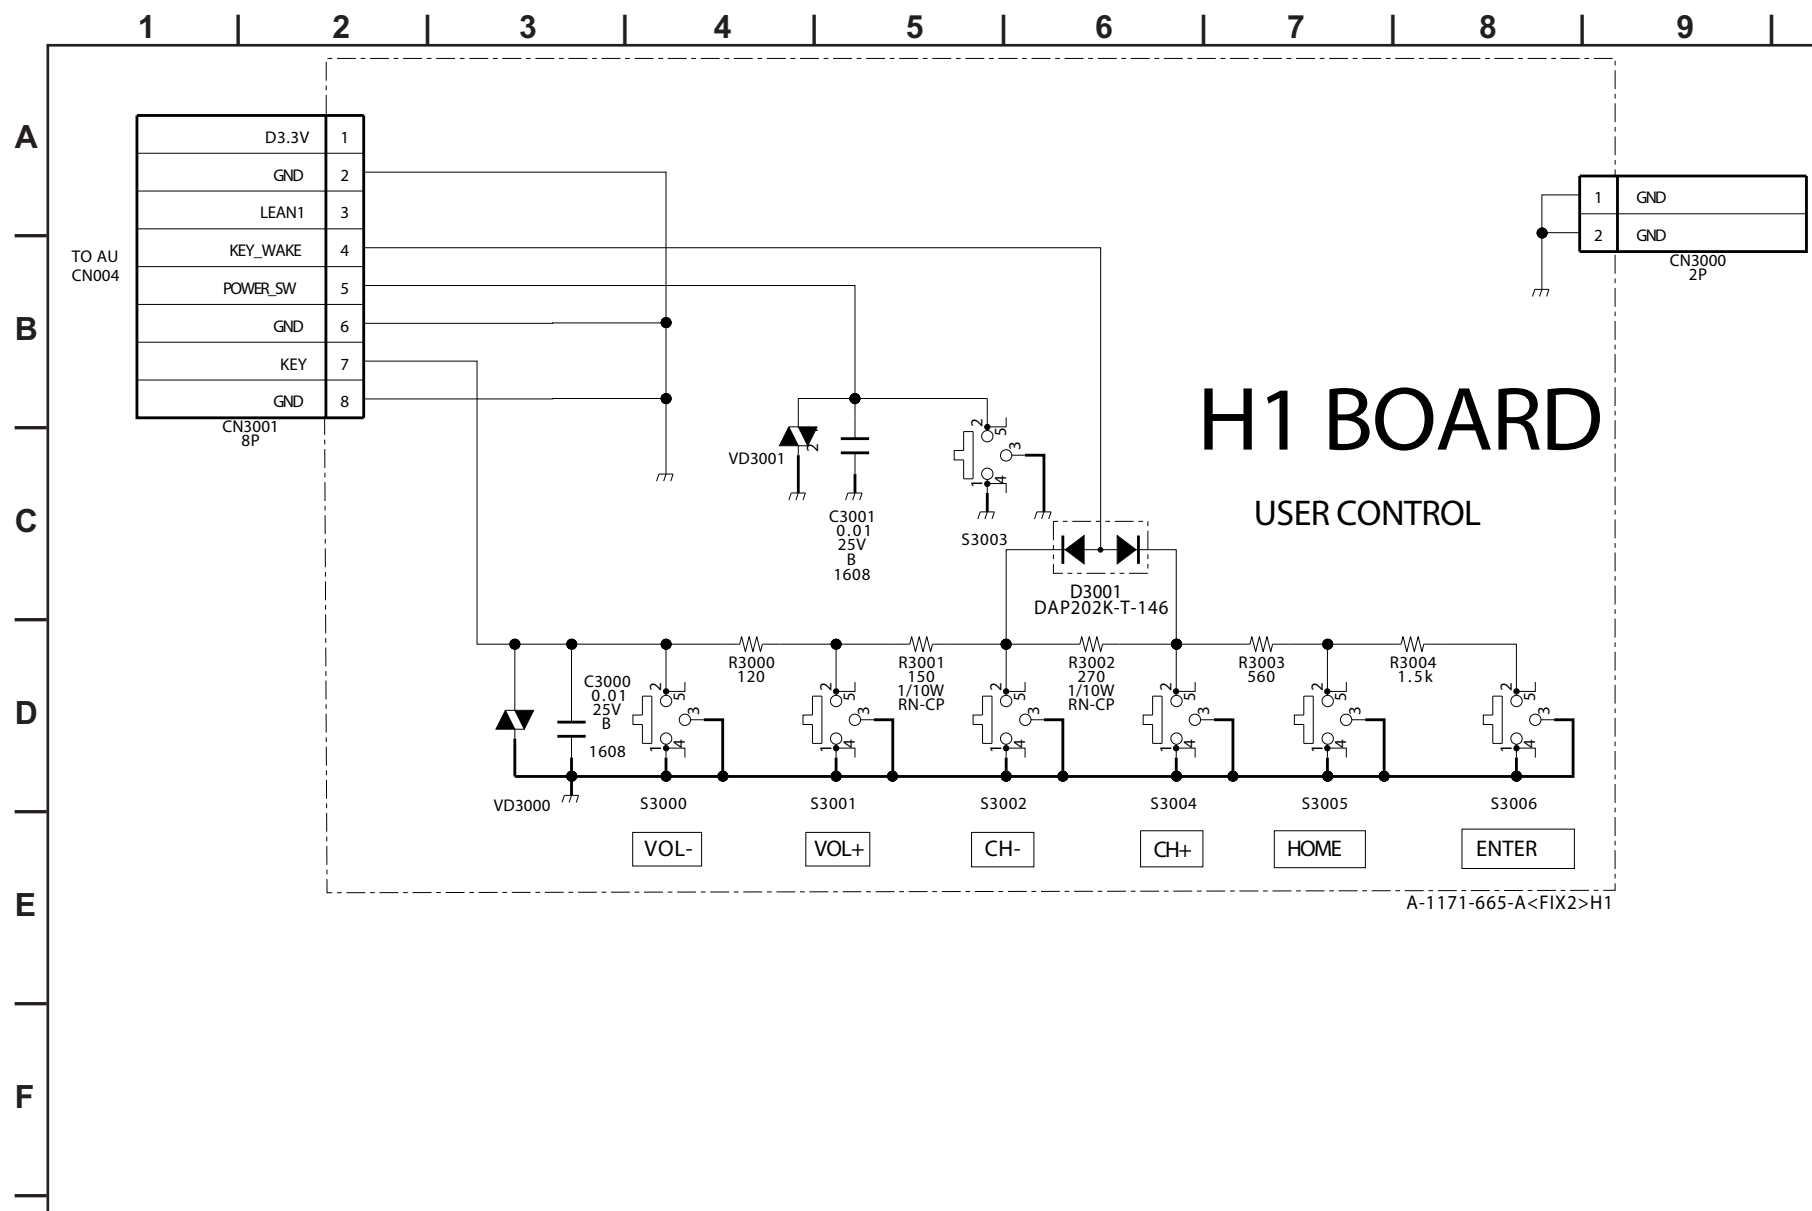


H1 [USER CONTROL] COMPONENT SIDE


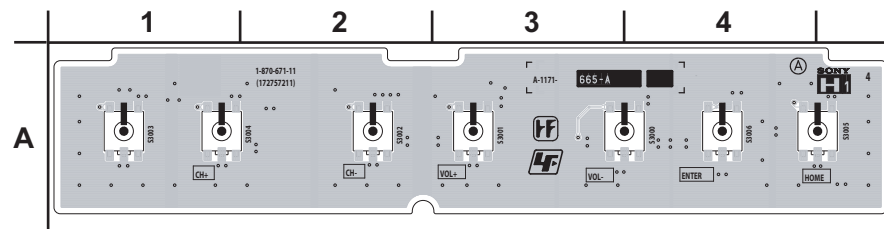


H1 [USER CONTROL] CONDUCTOR SIDE

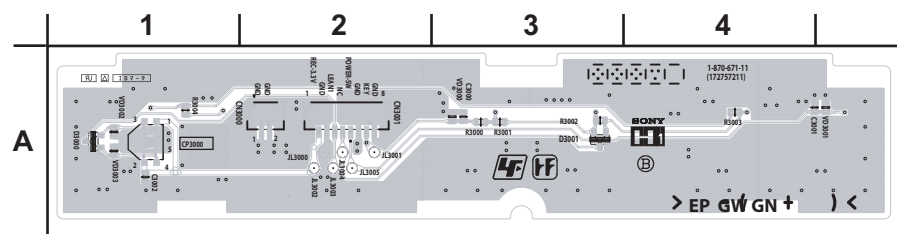


H3 BOARD SCHEMATIC DIAGRAM

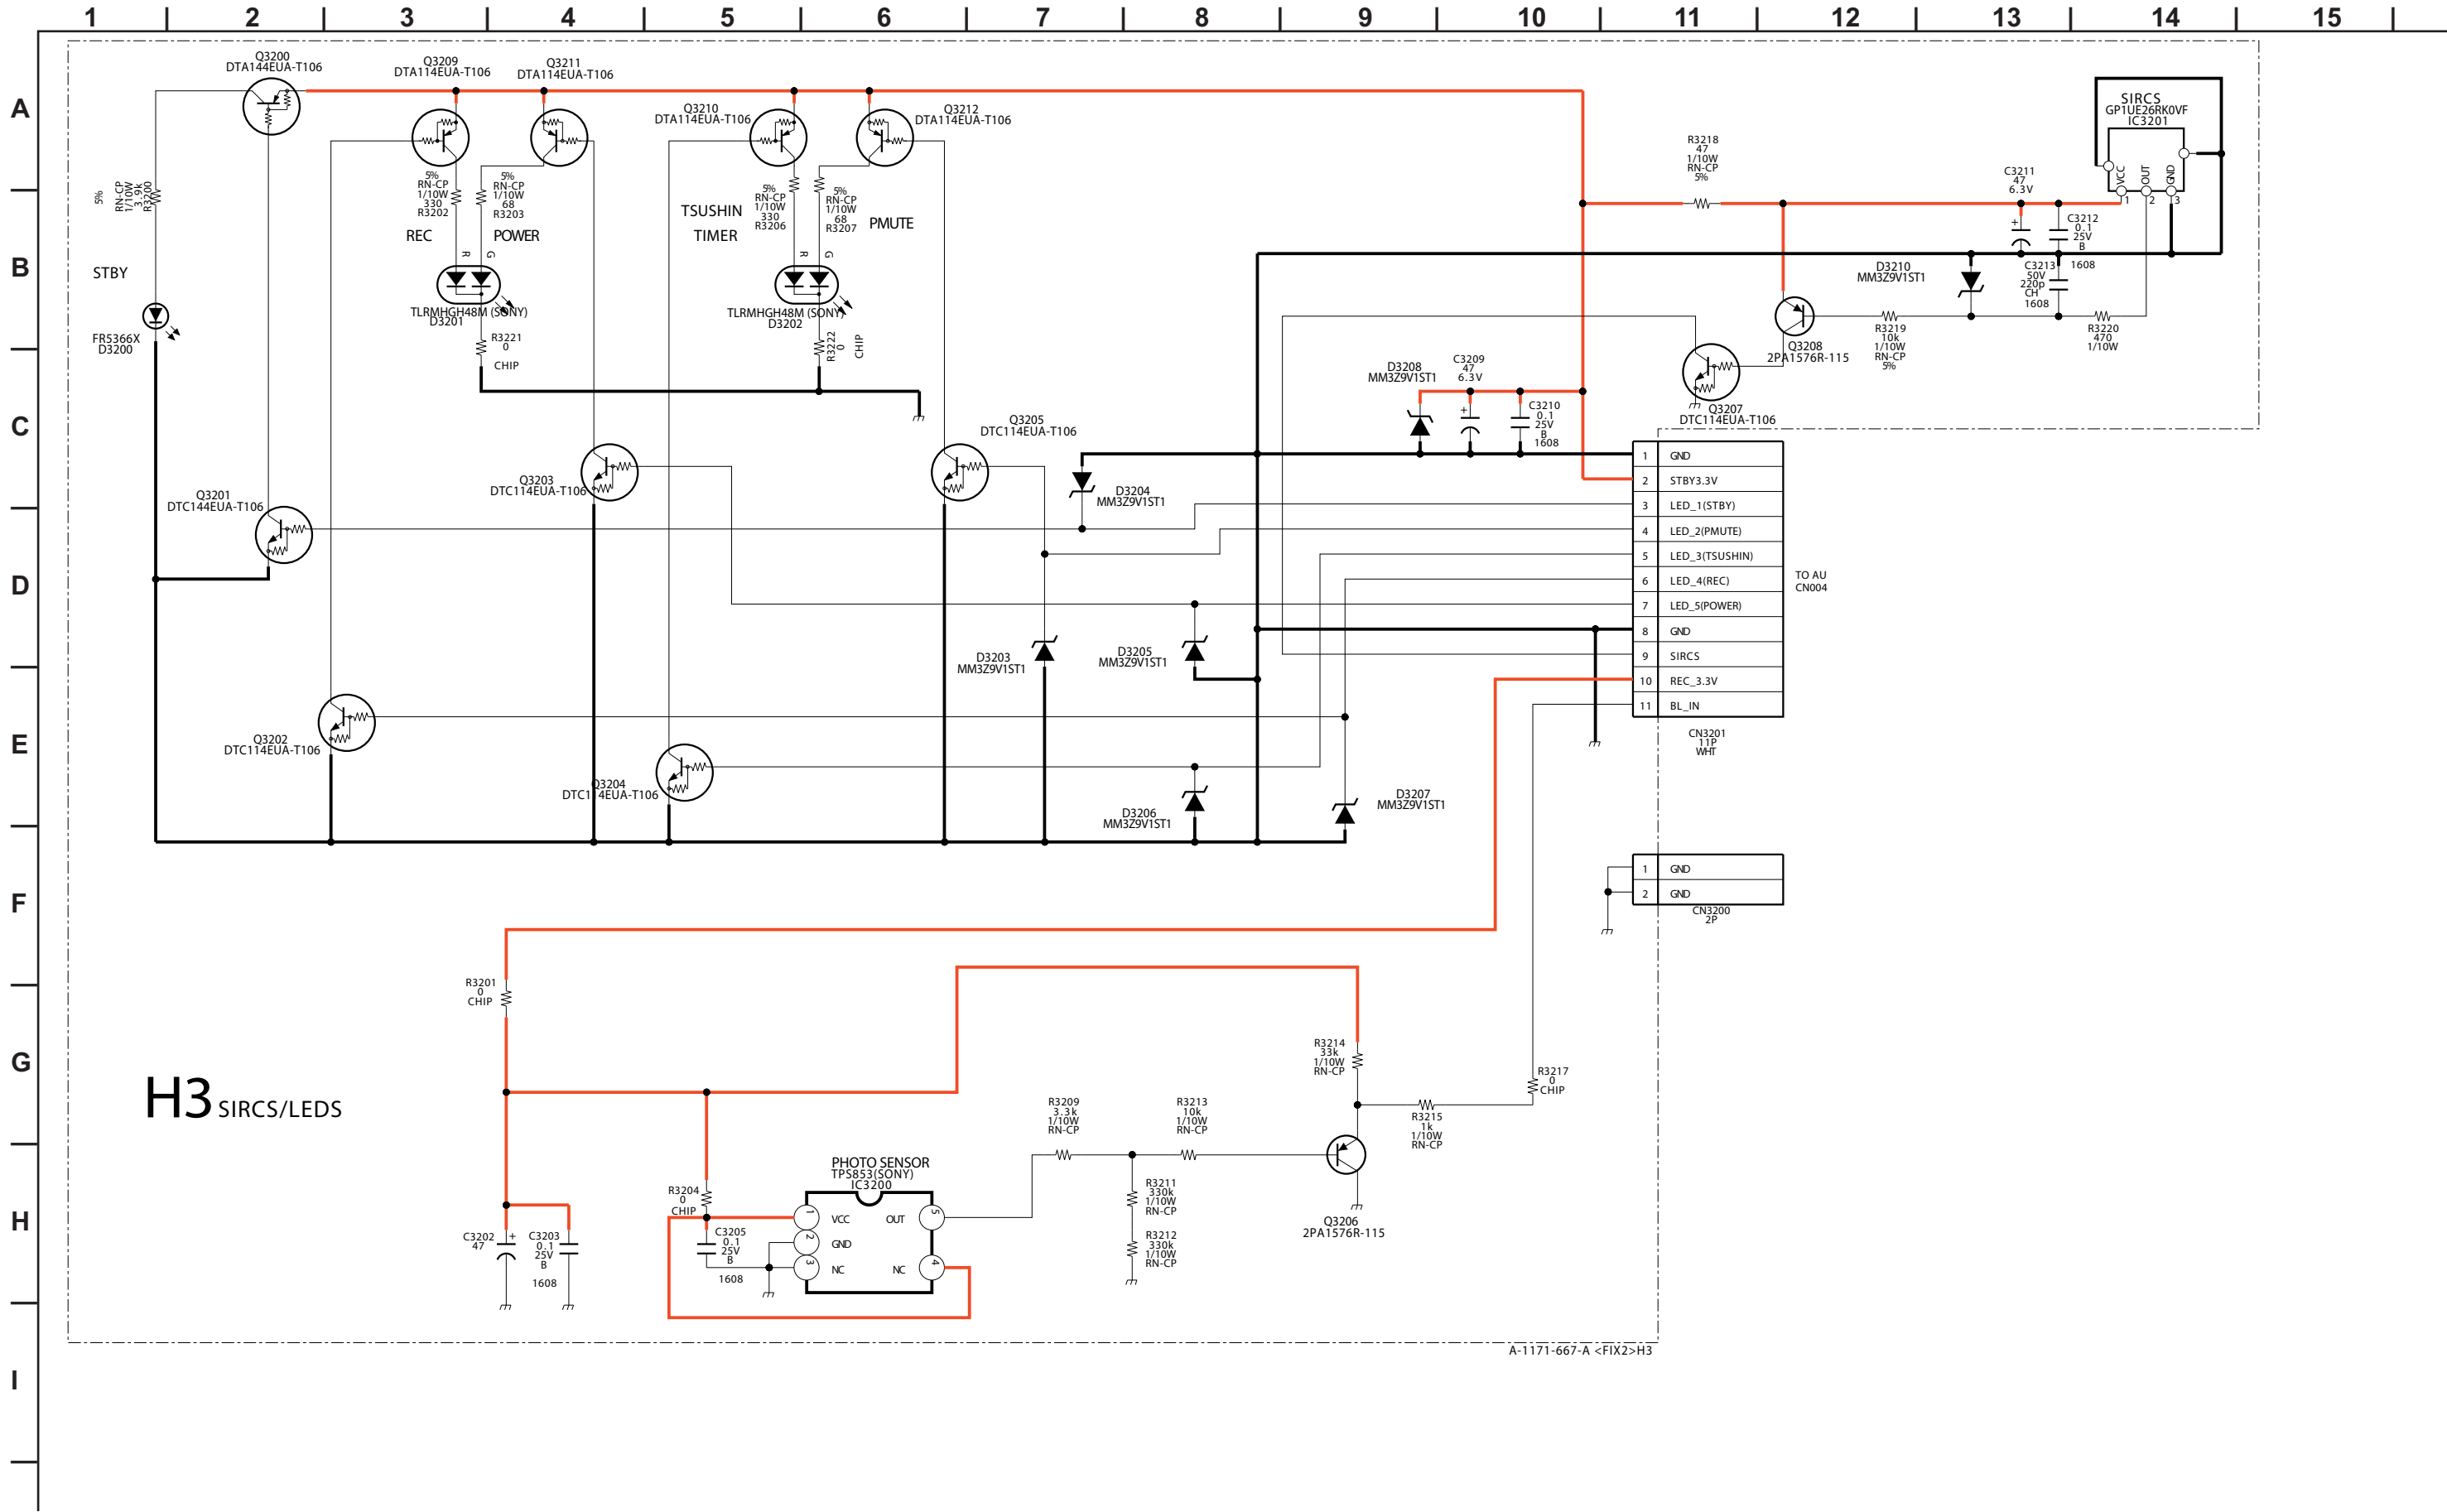

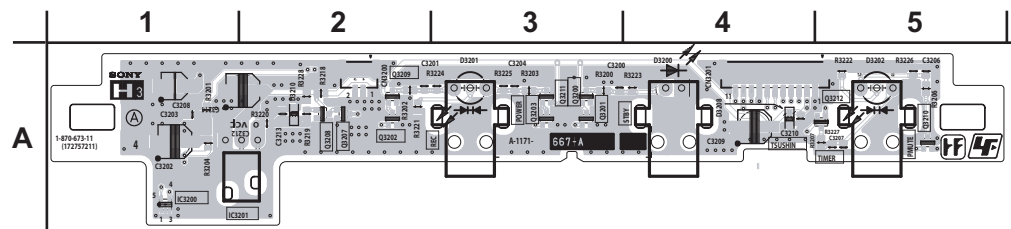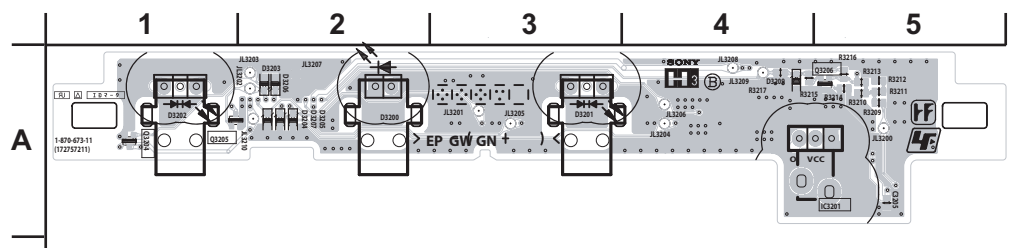
H3[SIRCS/LEDS]
COMPONENT SIDE**H3**[SIRCS/LEDS]
CONDUCTOR SIDE

H4 BOARD SCHEMATIC DIAGRAM

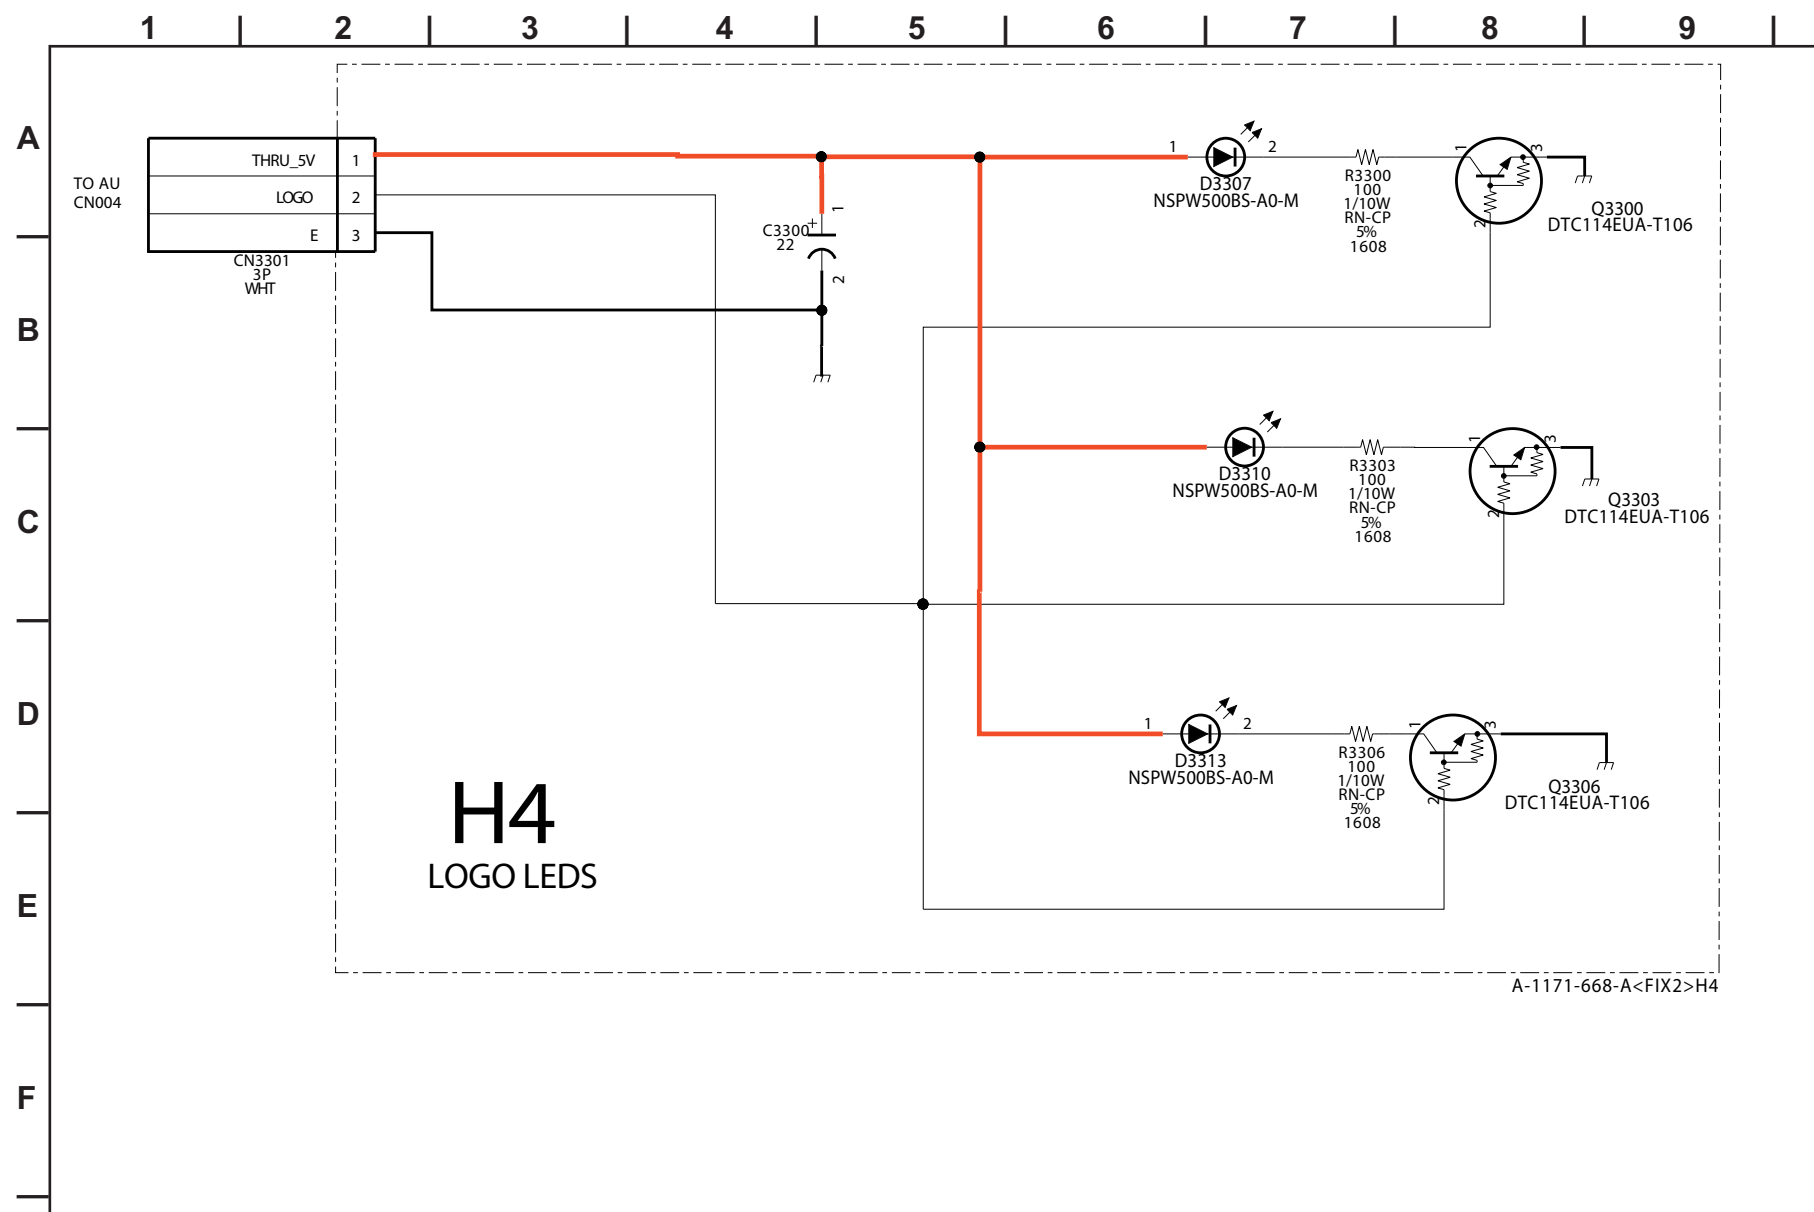


H4


[LOGO LEDS]

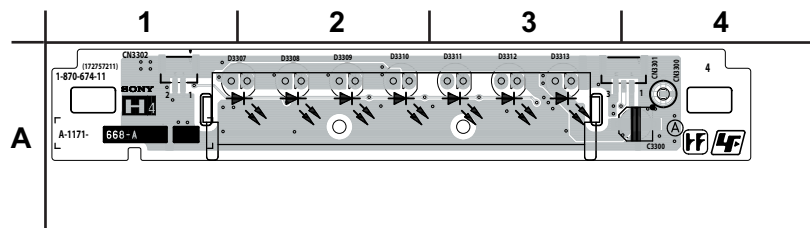COMPONENT SIDE**H4**

[LOGO LEDS]

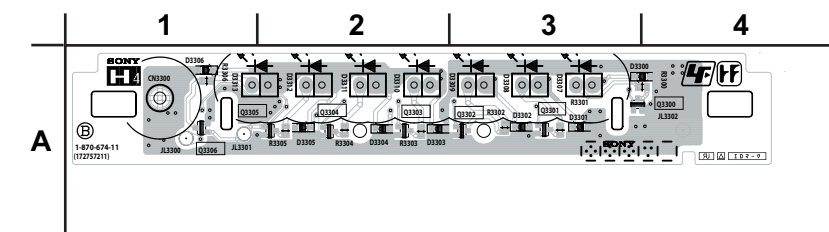CONDUCTOR SIDE


H5 BOARD SCHEMATIC DIAGRAM (KDL-52XBR5 ONLY)

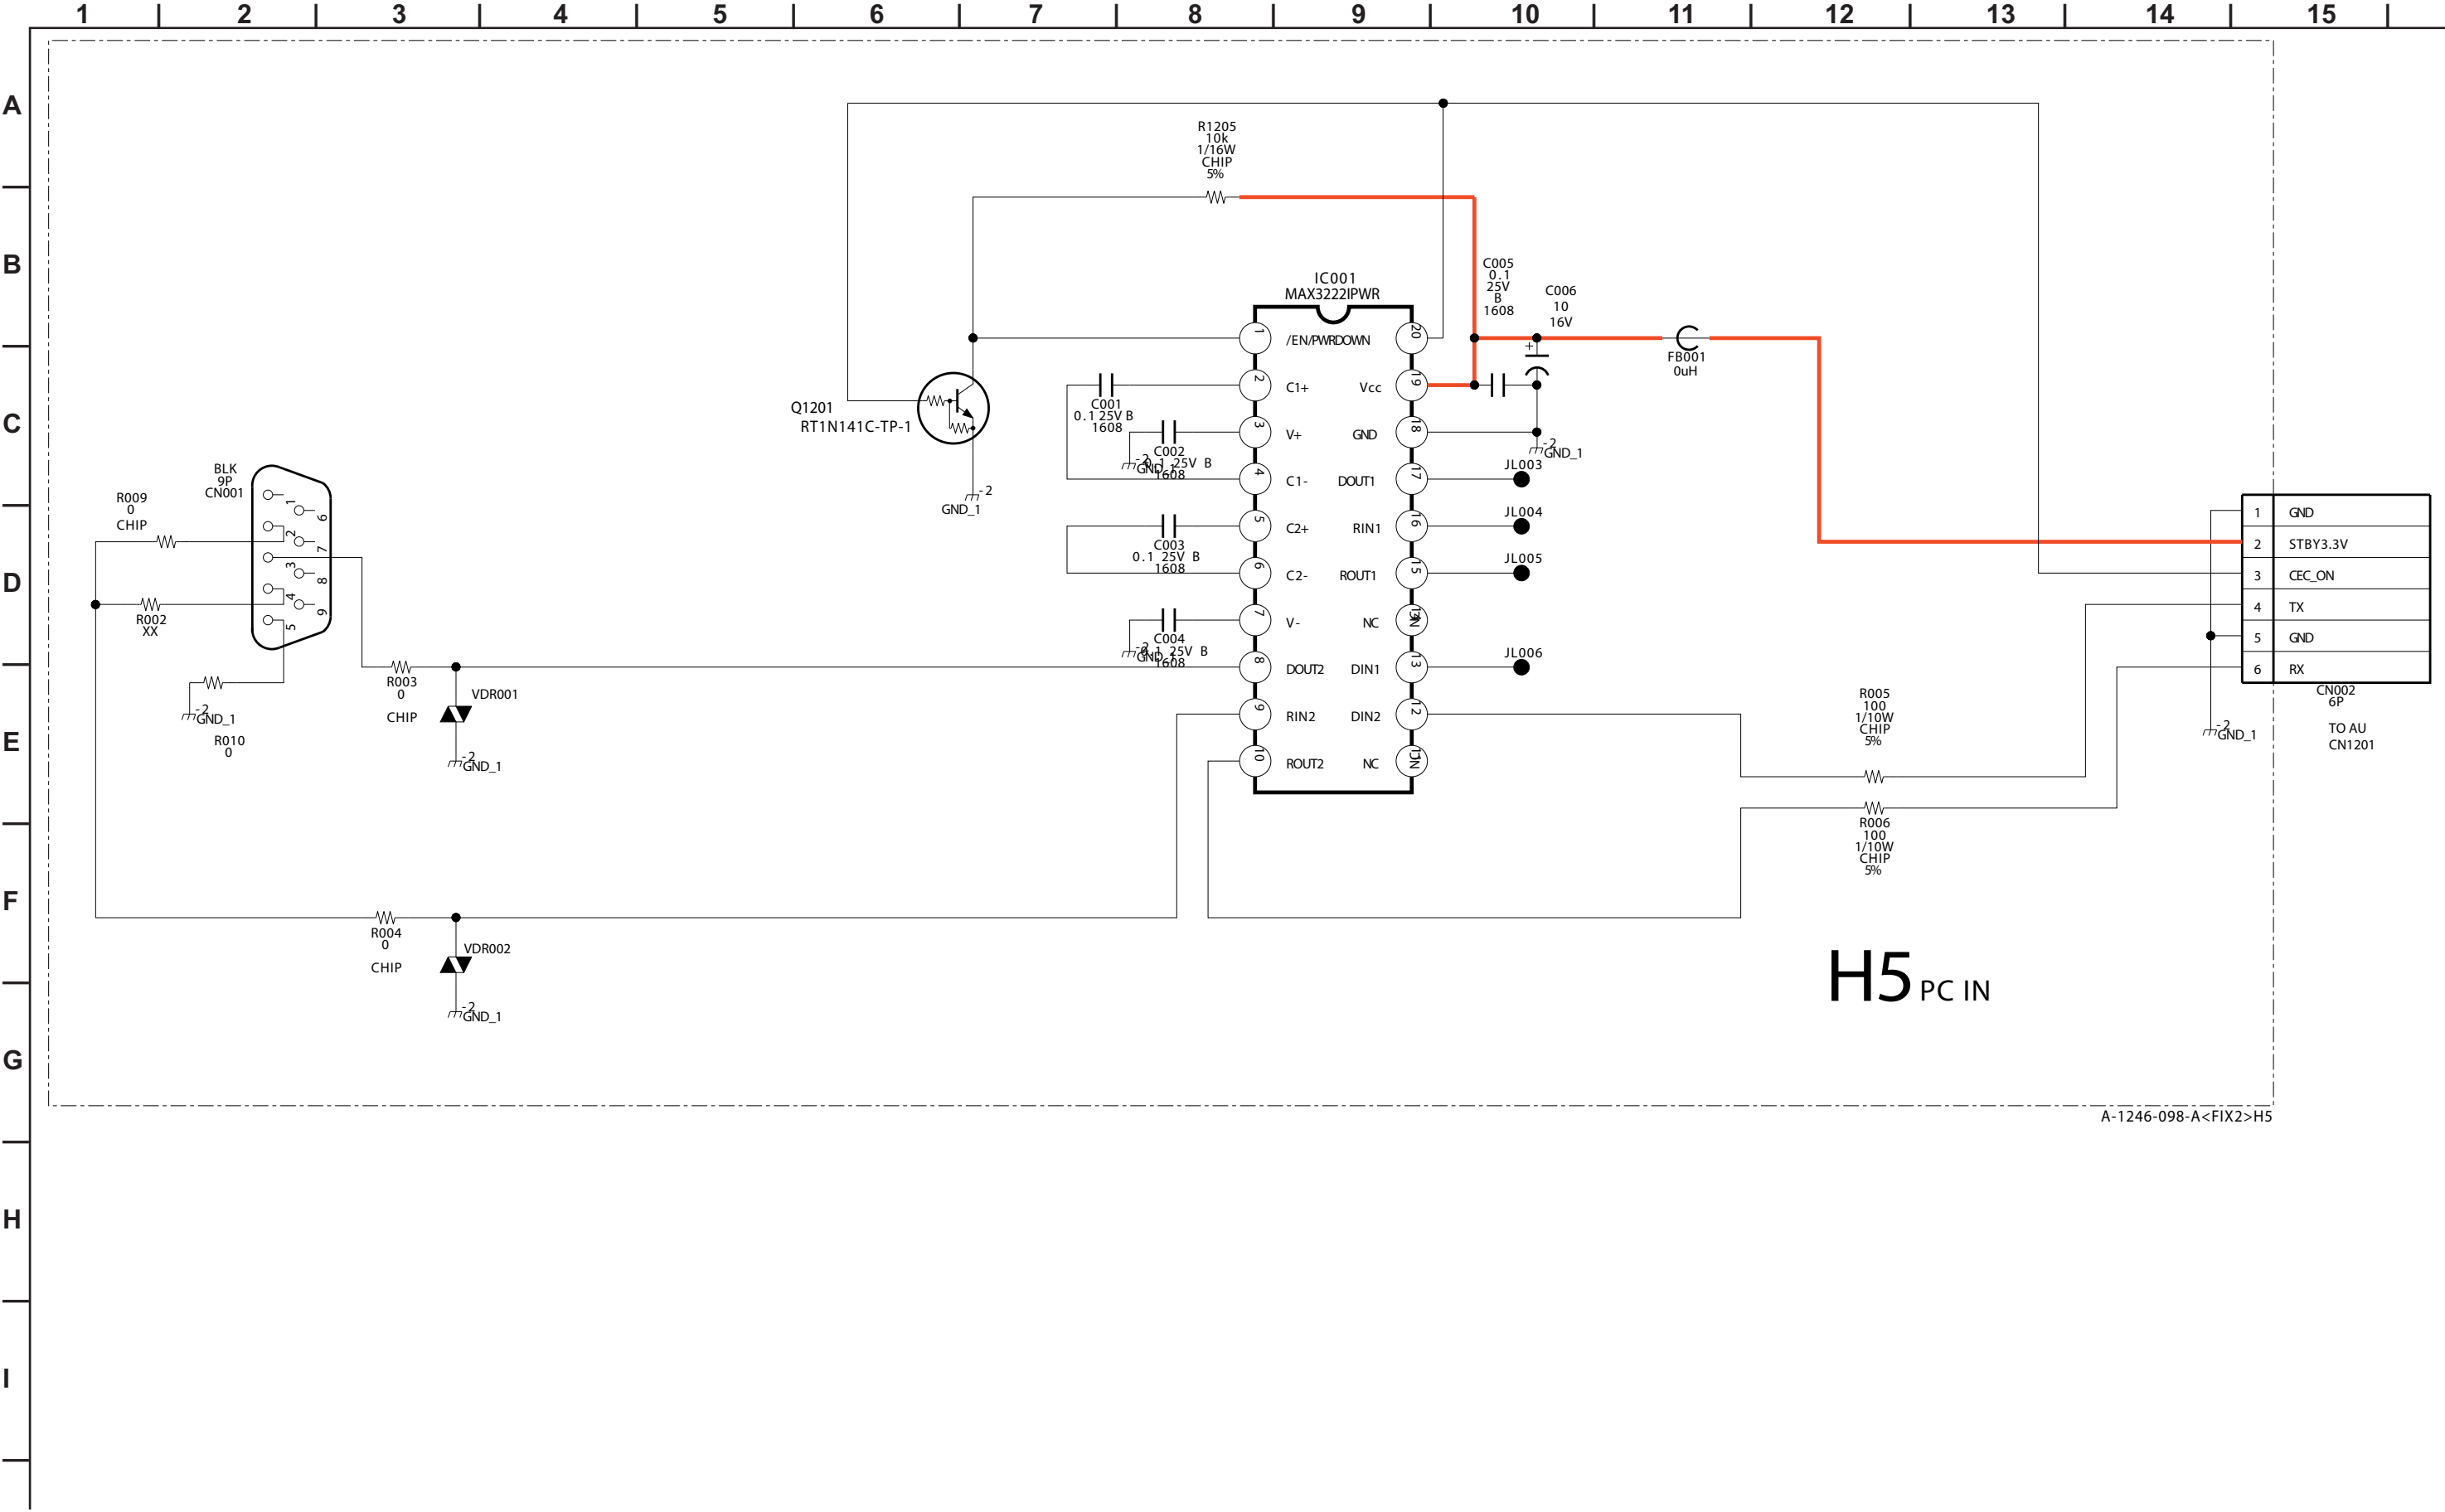

H5

[PC IN]


COMPONENT SIDE (KDL-52XBR5 ONLY)

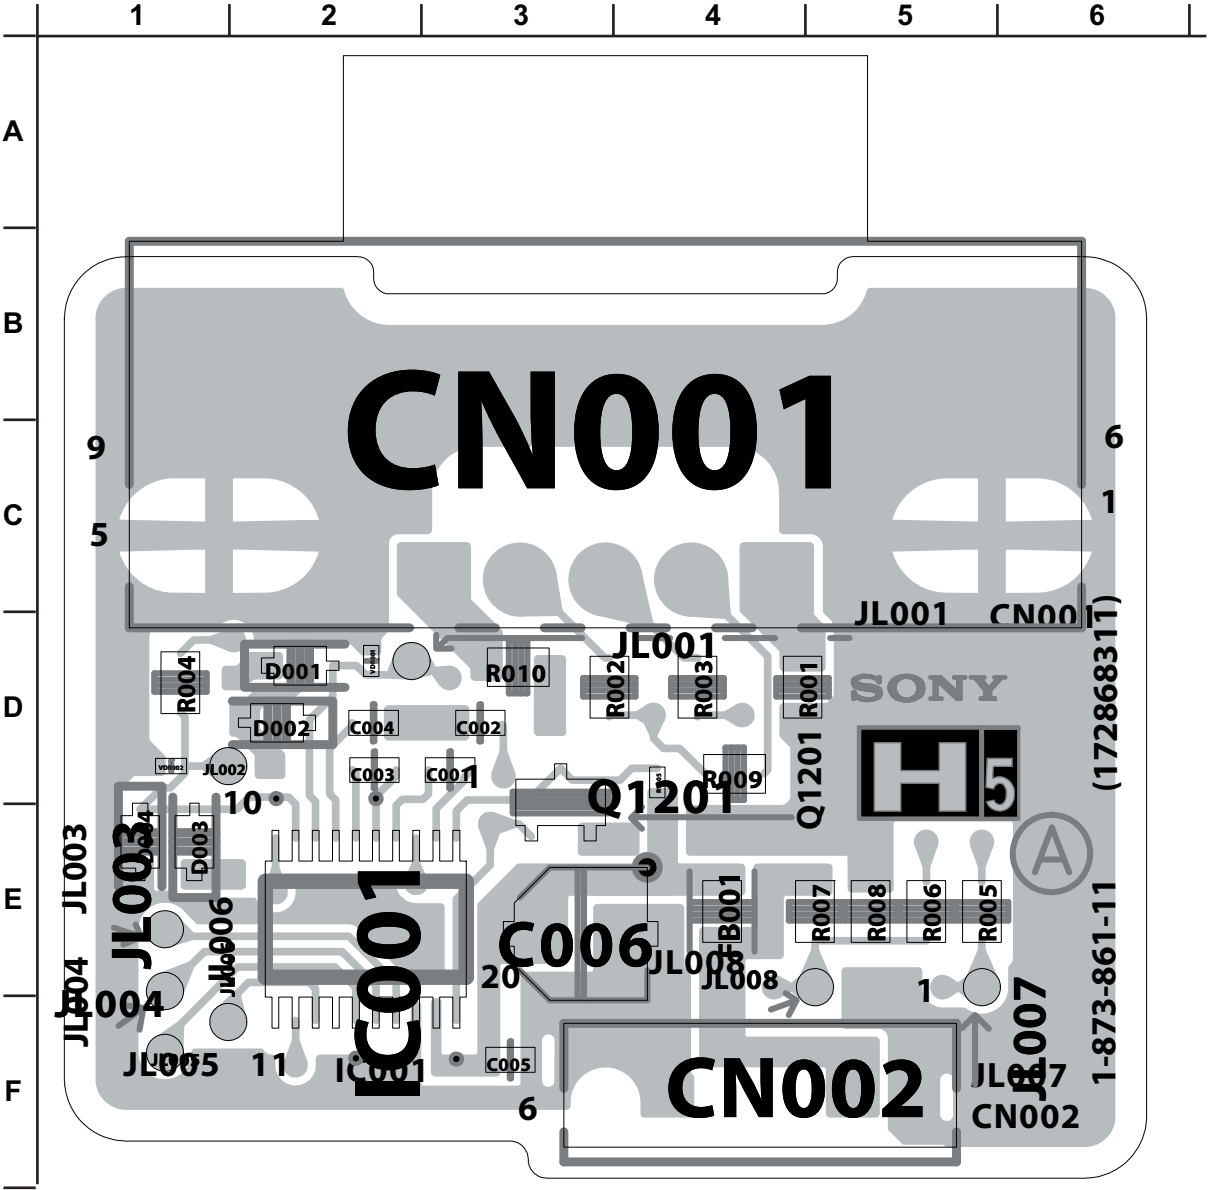


H5

[PC IN]

CONDUCTOR SIDE (KDL-52XBR5 ONLY)

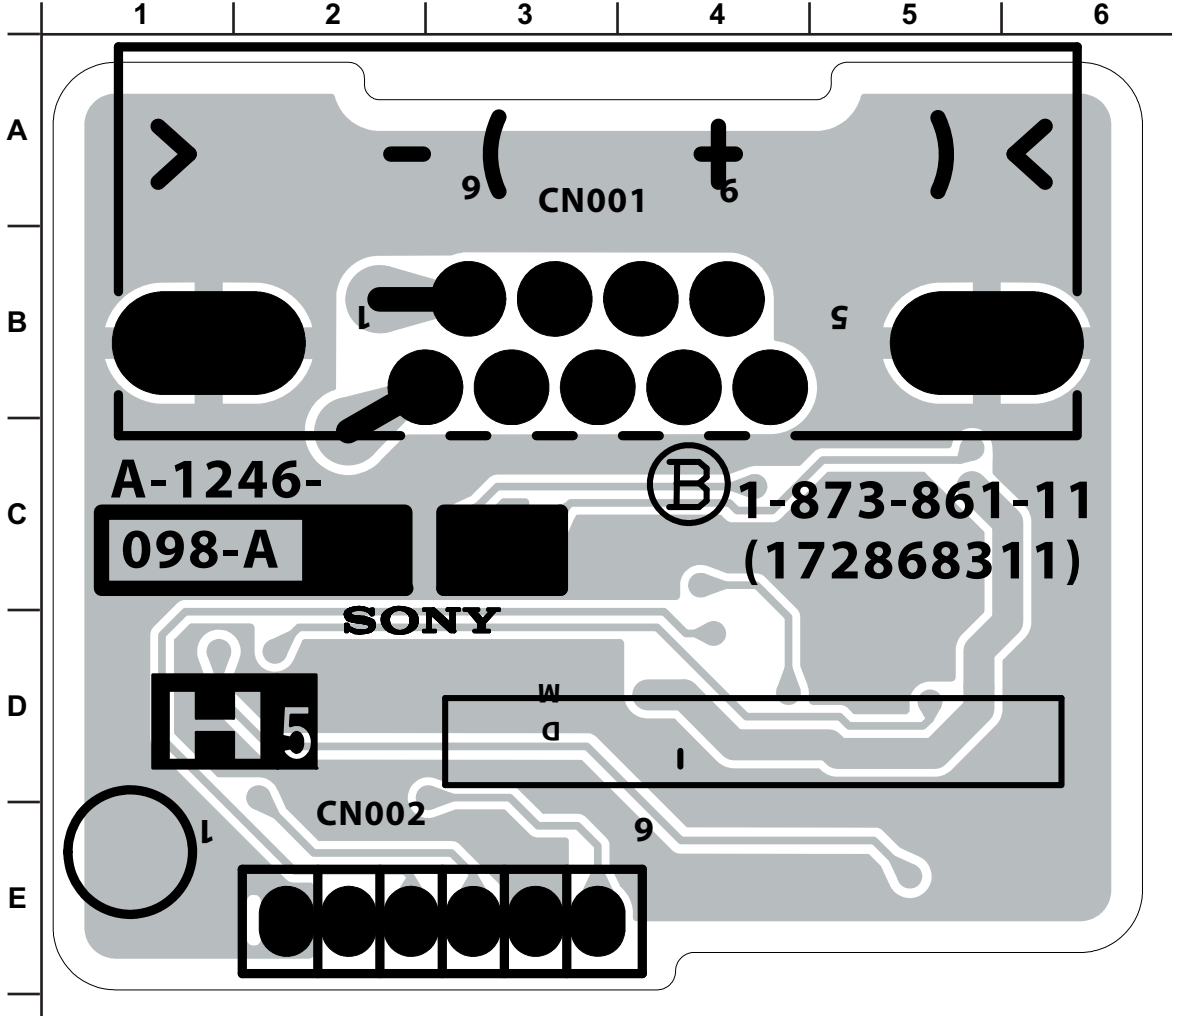

HW2 BOARD SCHEMATIC DIAGRAM (1 OF 2)

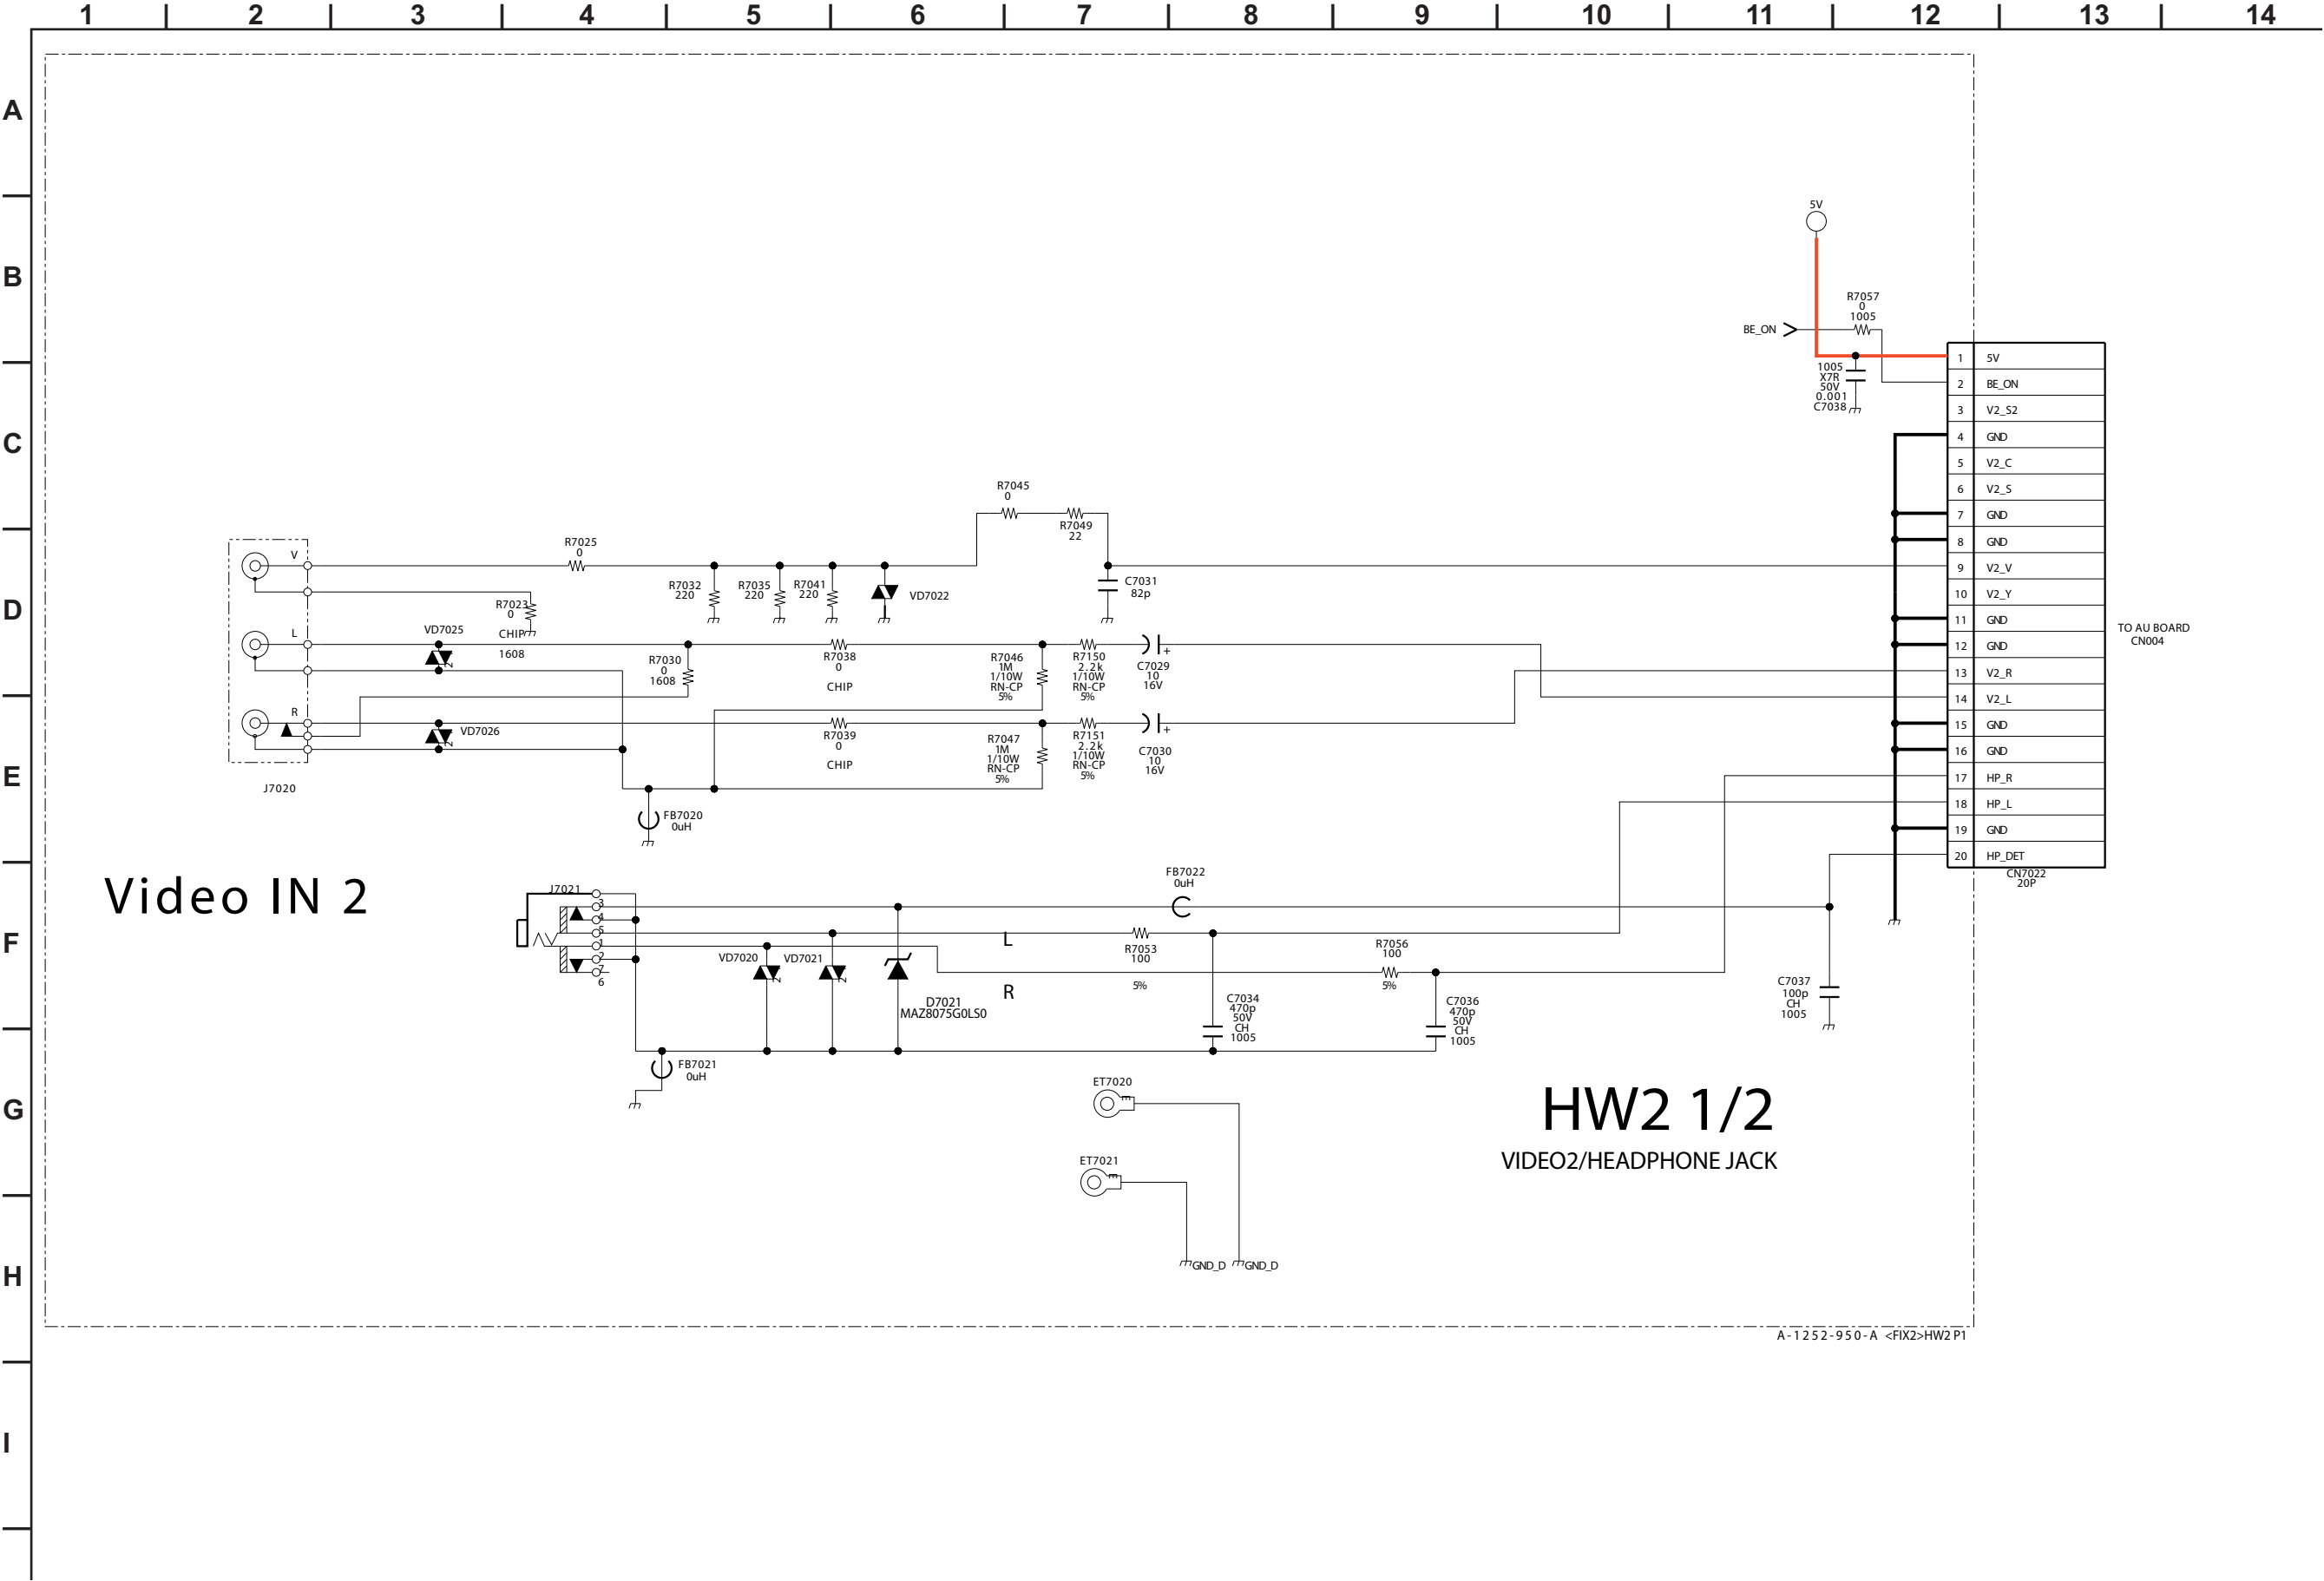




HW2


[VIDEO2, HEADPHONE JACK, VIDEO3, HDMI INPUT]

COMPONENT SIDE

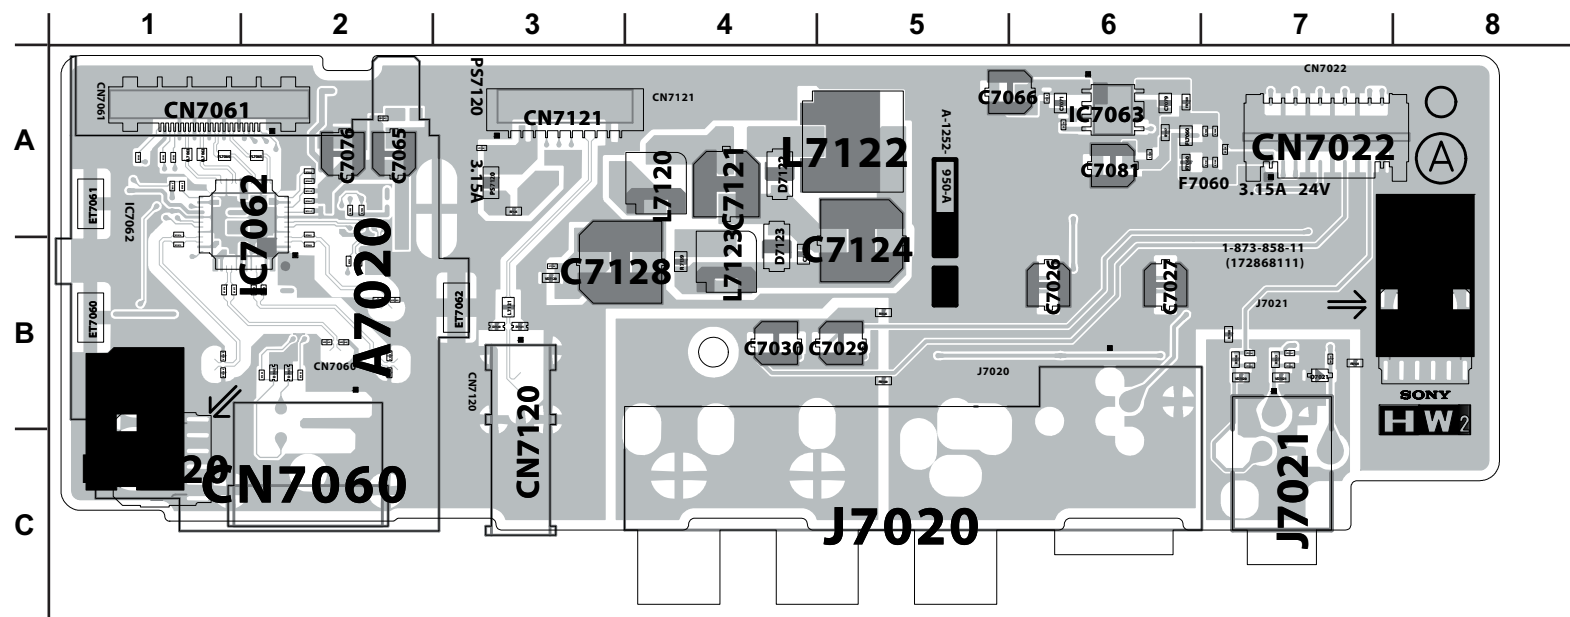


HW2

[VIDEO2, HEADPHONE JACK, VIDEO3, HDMI INPUT]
CONDUCTOR SIDE

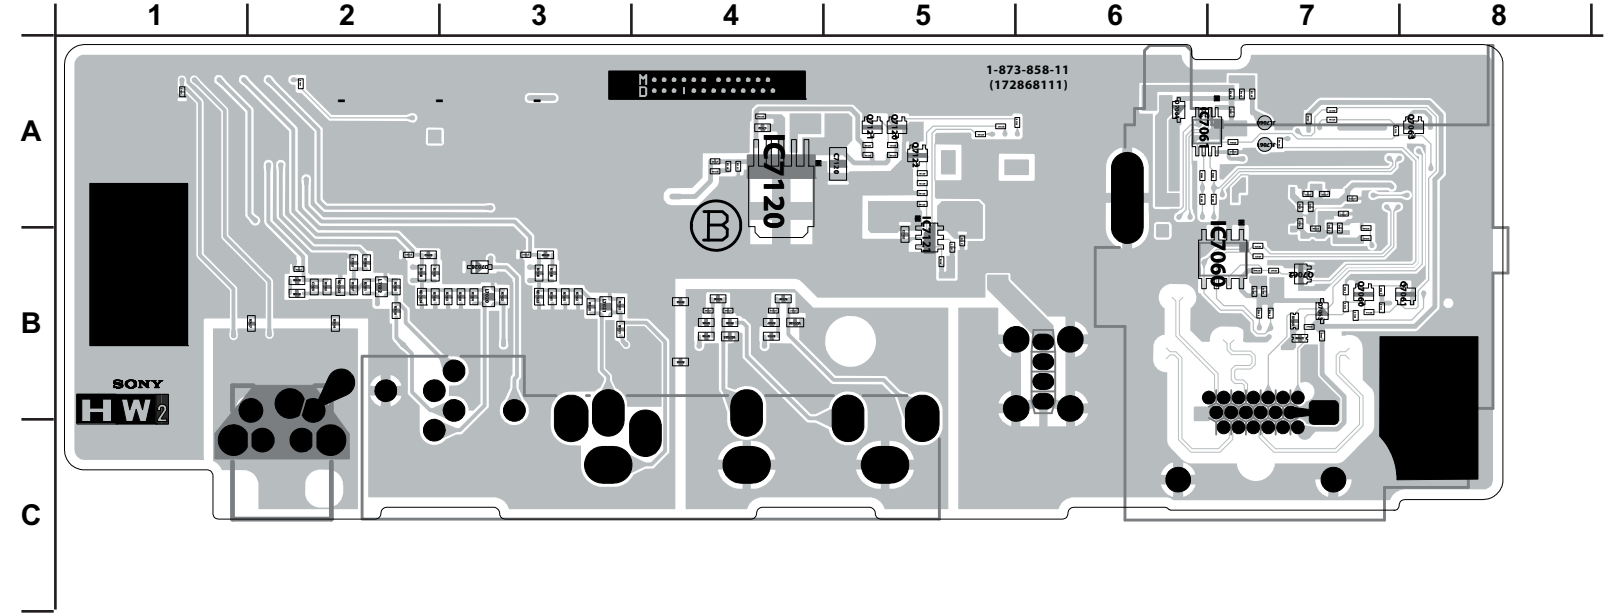


TU02 BOARD SCHEMATIC DIAGRAM (1 OF 2)

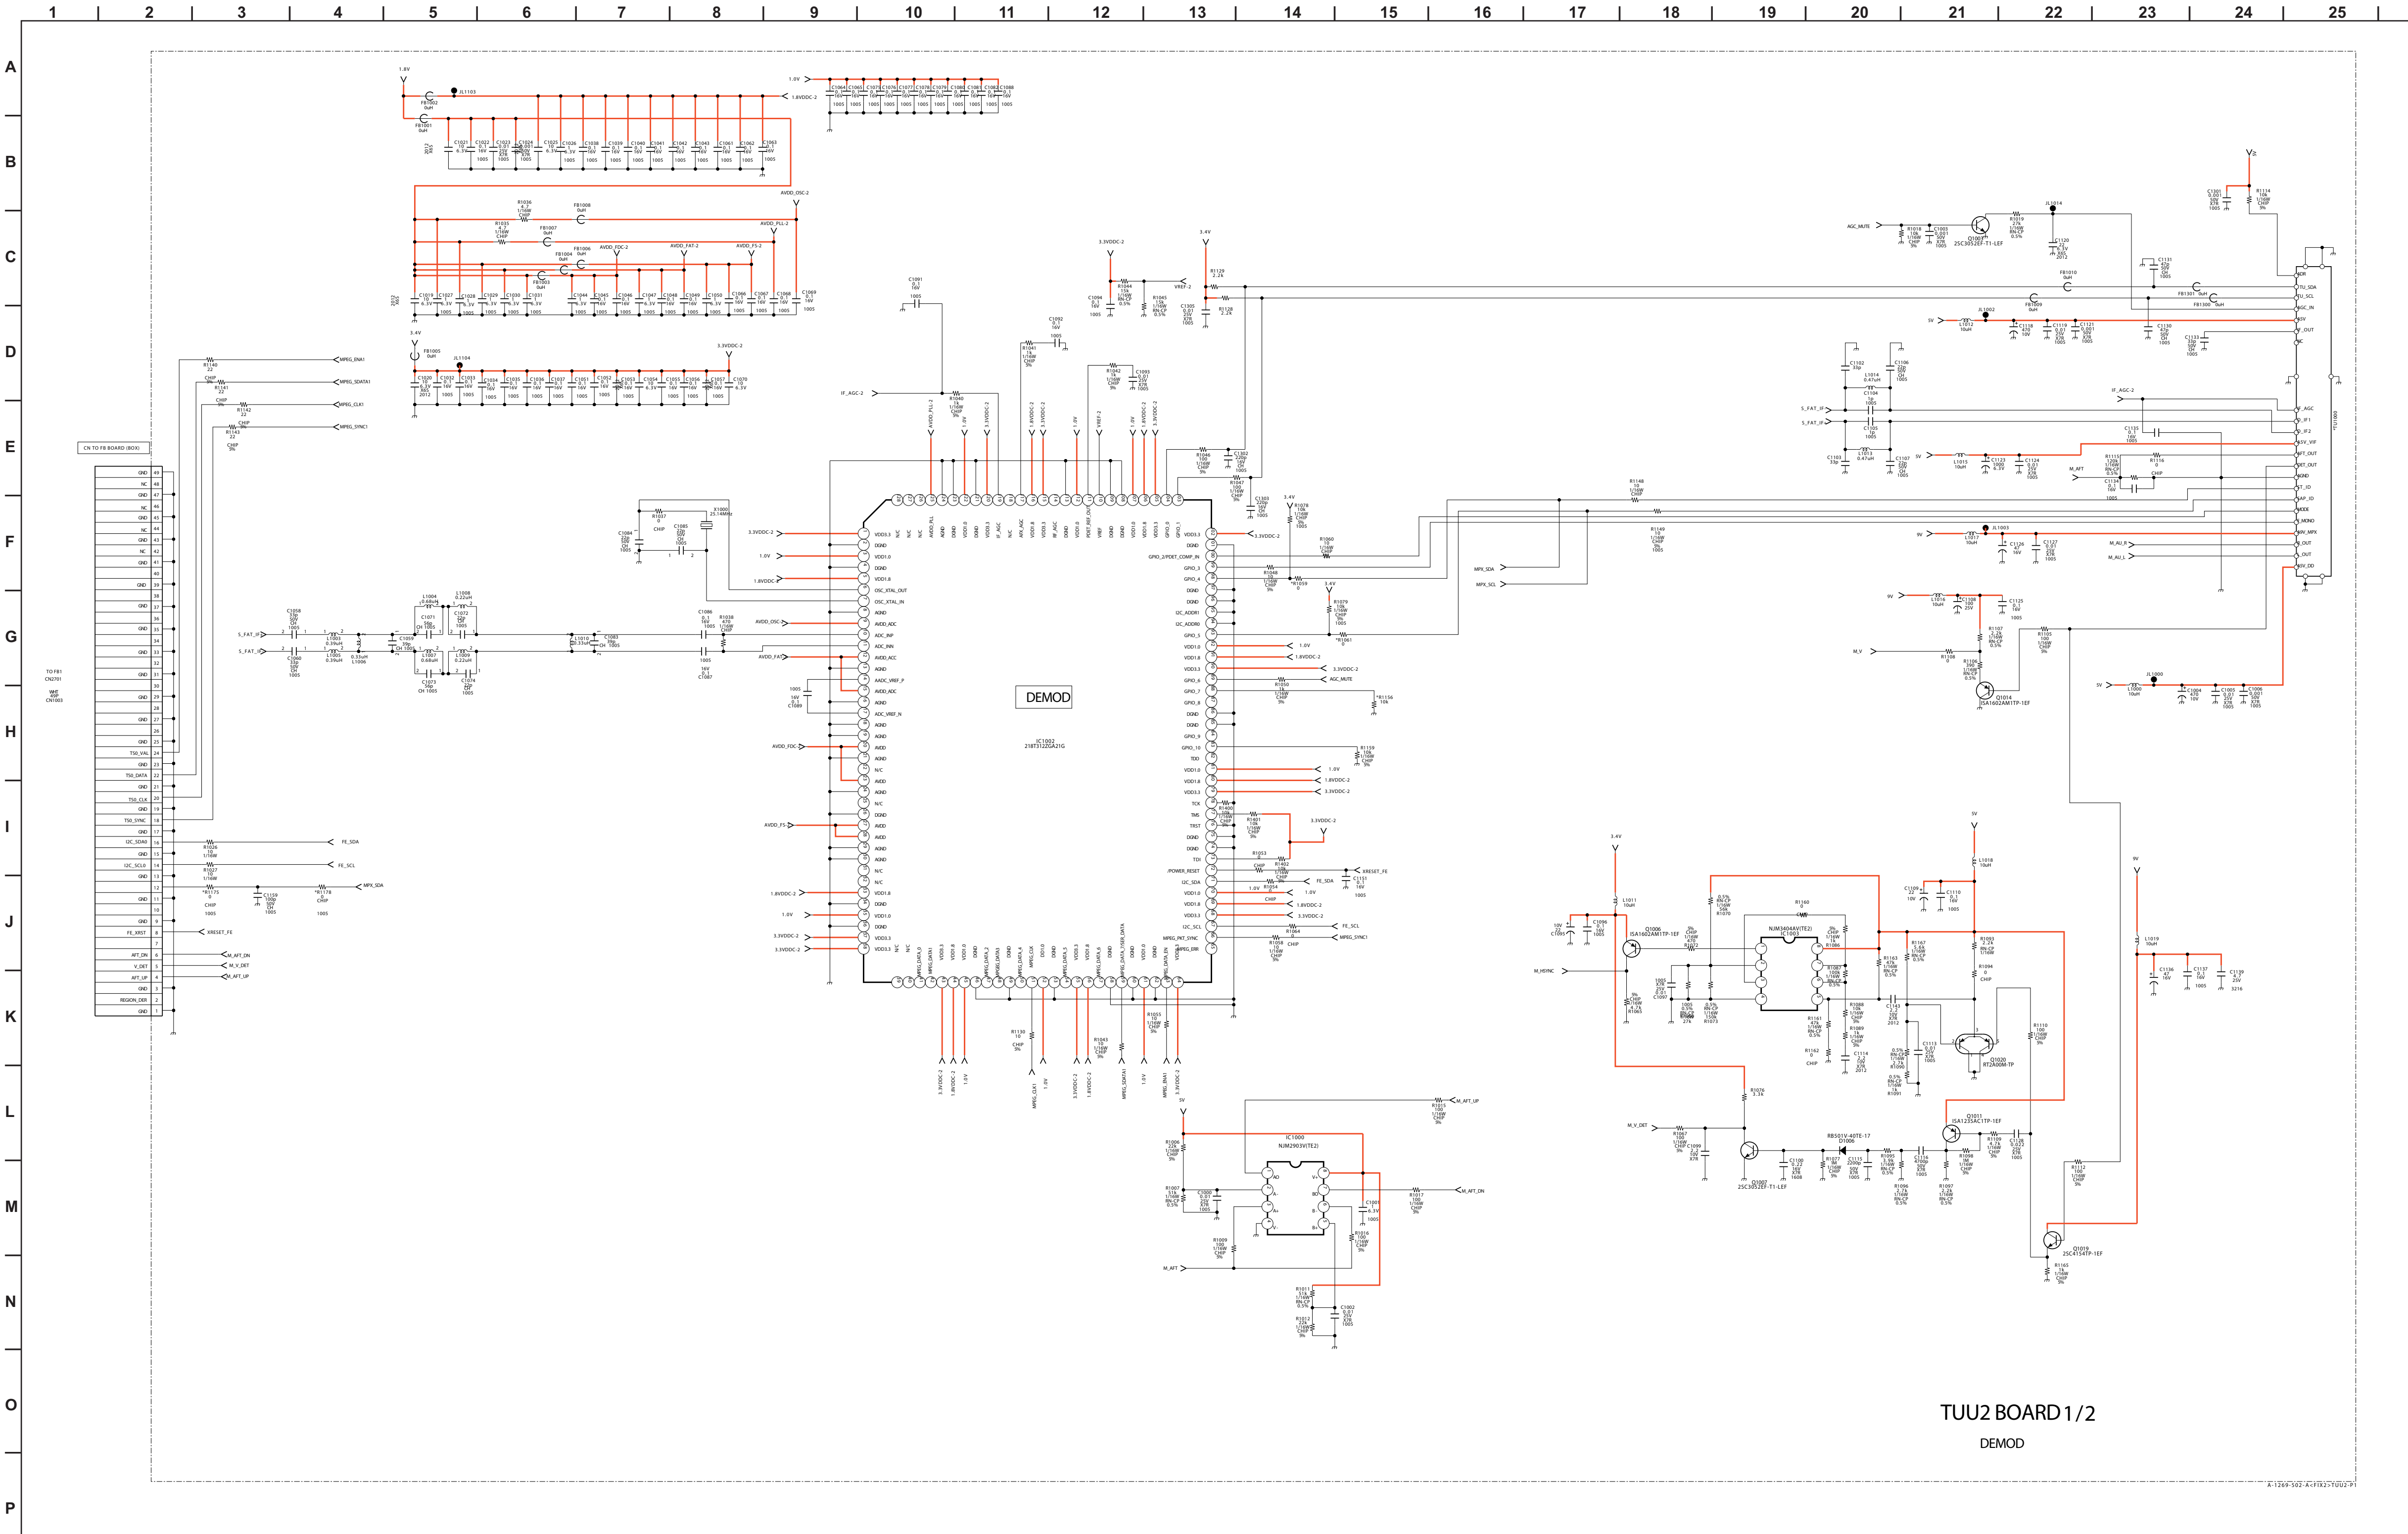

TU02 BOARD 1/2
DEMOM

TUU2 BOARD SCHEMATIC DIAGRAM (2 OF 2)

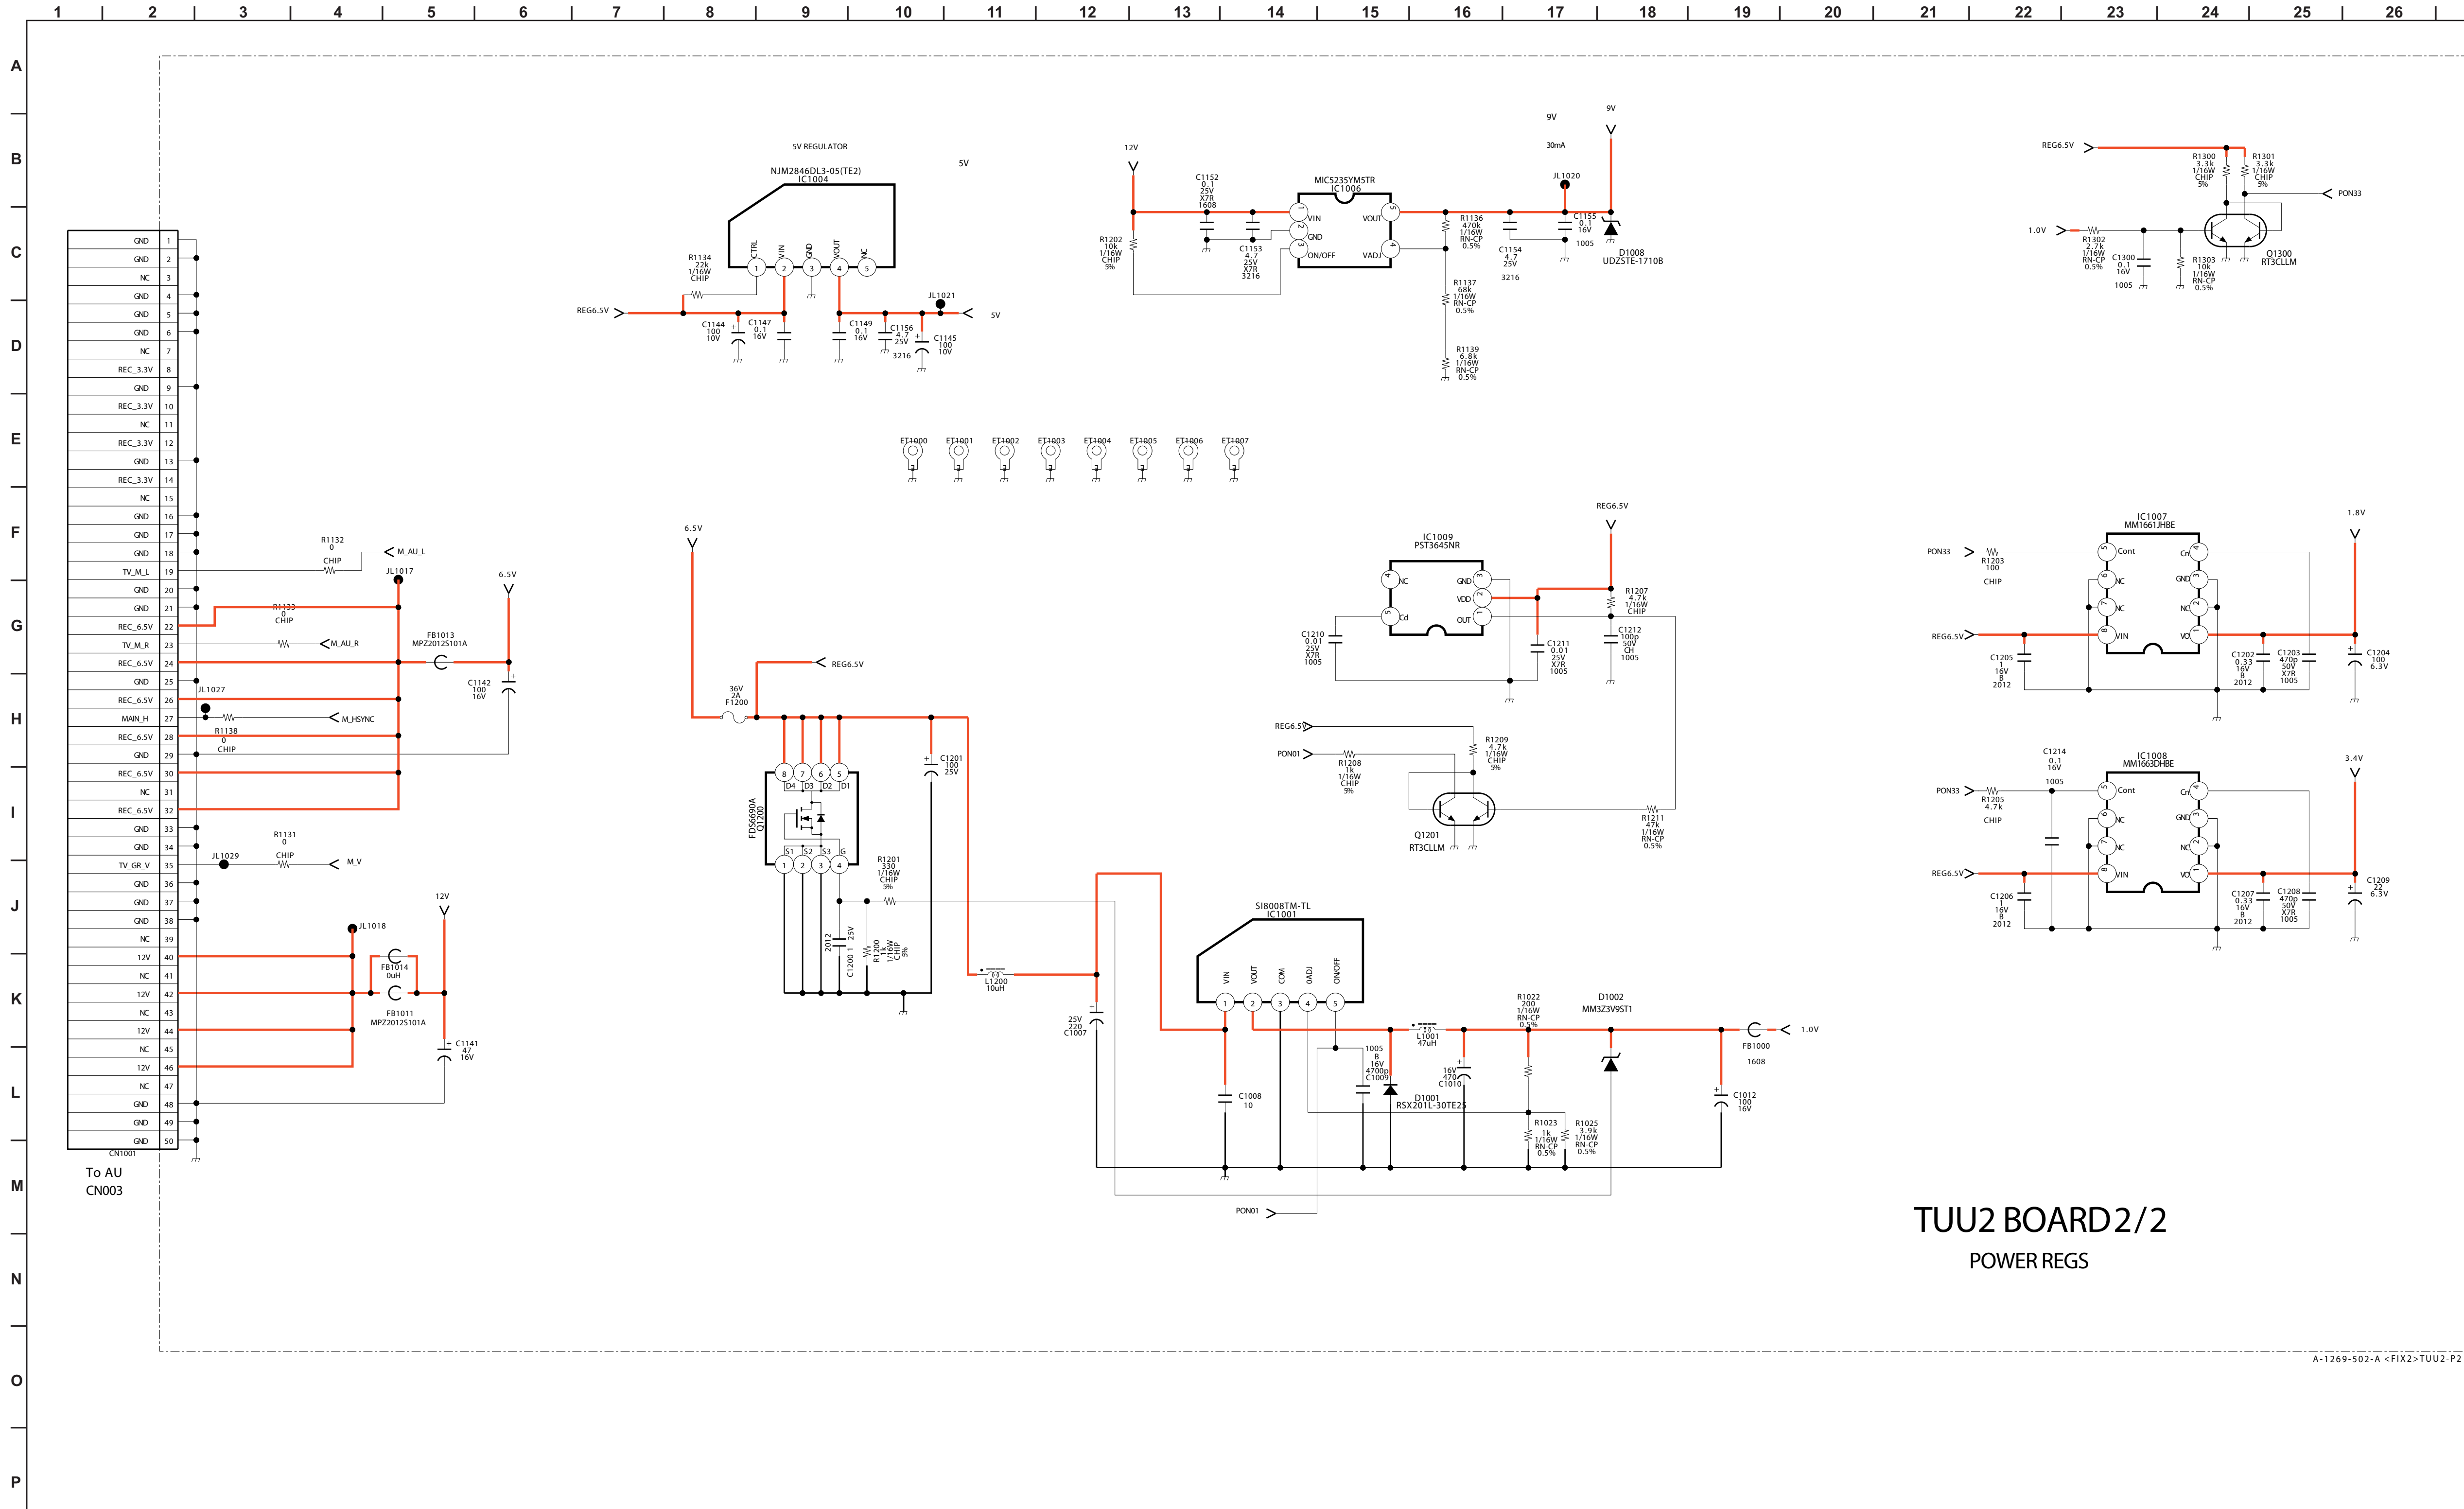


TUU2 BOARD 2/2
POWER REGS

A-1269-502-A <FIX2>TUU2-P2


TU02

[DEMOD, POWER REGS]

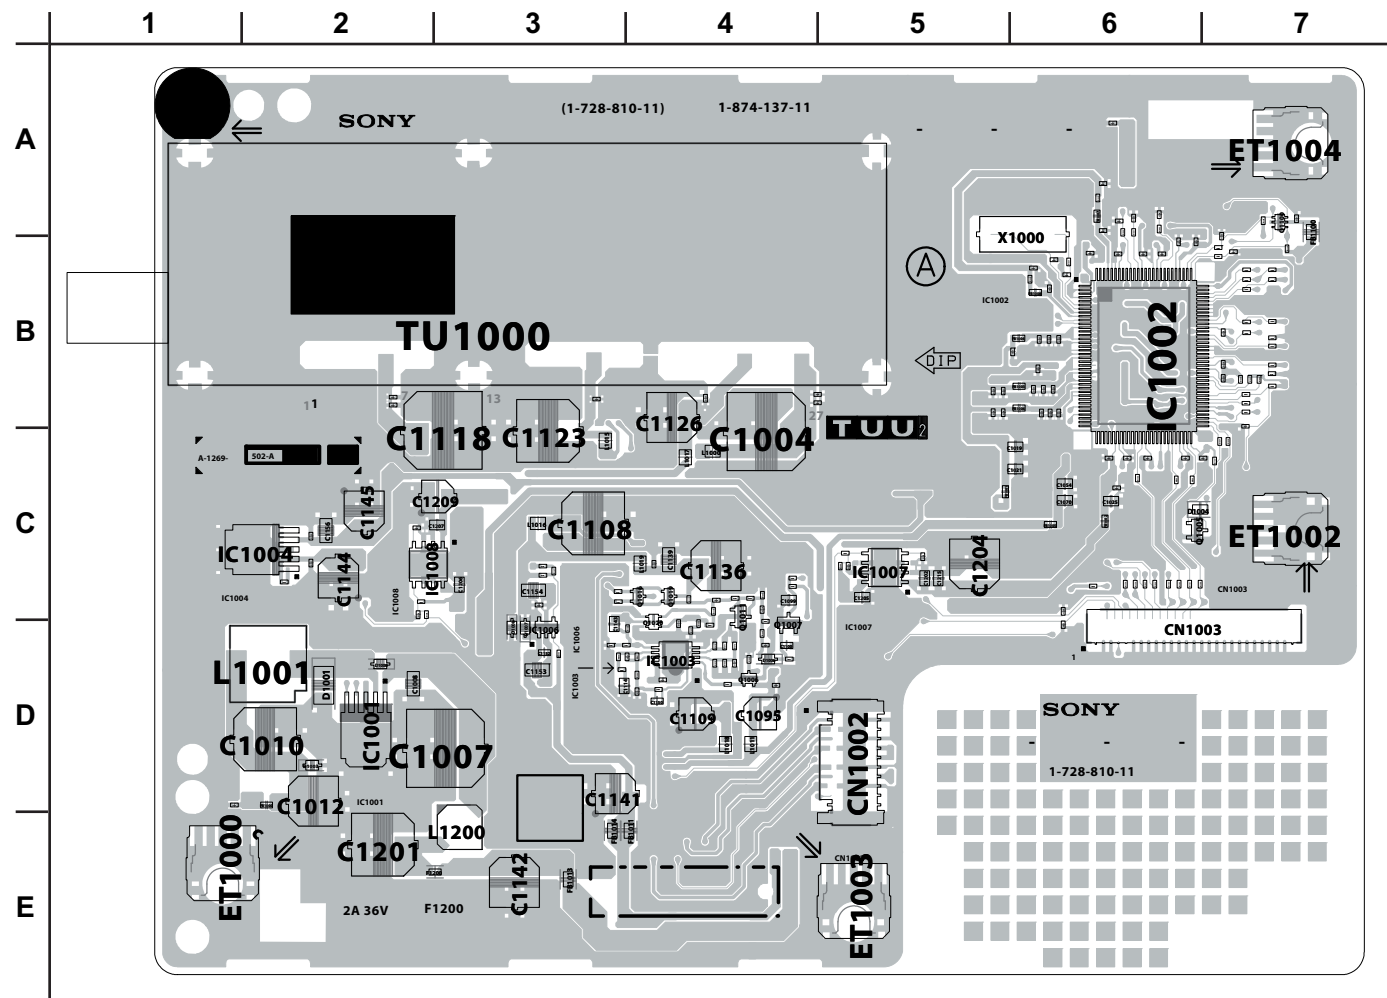COMPONENT SIDE

TUU2


[DEMOM, POWER REGS]
CONDUCTOR SIDE

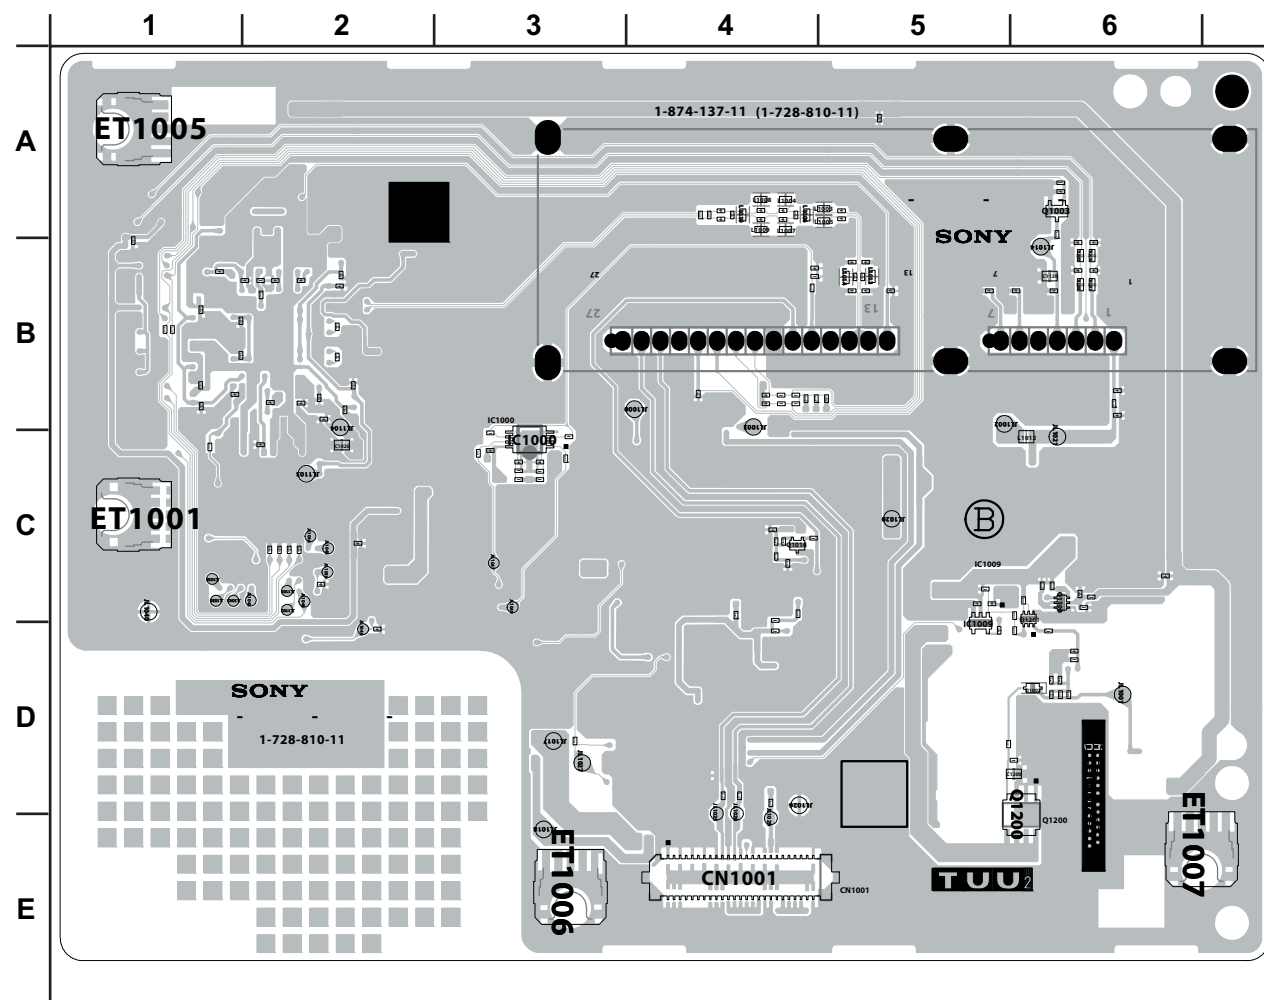


3-5. SEMICONDUCTORS

IC

BA00AST-V5




BA05FP-E2
BA09FP-E2
S-1111B33MC-NYSTFG
S-80928CNMC-G8YT2G
TC7SZ125FU(TE85R)




5Pin CHIP

BA18BC0FP-E2
BA25BC0FP-E2




BR24L02F-WE2
CS4335-KSZR
FA5501N-TE1
LM75CIMX-3
M24128-BWMN6T(A)
M24C02-WMN6T(B)
NJM2521V(TE2)
NJM3414AV(TE2)
RC4558DR
RC4558PWR




8Pin SOP

CD4052BNSR
FMS6418AM16X




16Pin SOP

CXA2188Q-T4




40Pin QFP

EM6A9320BI-5MG

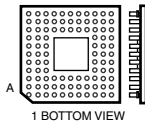


144Pin PGA

HD6433692A39FXV
HD64F3694FXV-DA4
TPA3004D2PHPR




48Pin QFP

HD64F2378-12681-01




144Pin QFP

L88M05T-FA-TL



M52347FP-TE




20Pin SOP


MM1431ATT




NJW1149AFH1

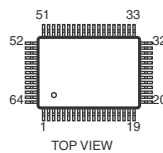


PQ1CY1032ZP




PQ1CZ41H2ZPH

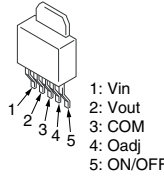

RV5C387A-E2-FB




SIH9993CTG100



100Pin QFP

SN74LV132APWR
SN74LVC14APWR




14Pin SOP

STR-A6169



8Pin DIP


TK11819MTL




6Pin CHIP

TRANSISTOR


DTC114EU
DTC114EUAFT106




DTC114EUA-T106
DTC115EUA-T106
DTC144WKA-T146
DTC314TK-T-146
DTC323TK
DTC323TKT146
MUN2211T1
MUN2212T1
MUN5213T1
PDTC114EK-115
UN2211
2PA1576R-115
2PC4081R-115
2PD601AR-115
2SA1037AK-T146-QR
2SA1037AK-T146-R
2SA1576A-T106-QR
2SA1774R
2SA1774TL-QR
2SC1623-L5L6
2SC2412K-T-146-QR
2SC4081-R
2SC4081T106R
2SC4617R
2SC4617TL-QR
2SD2114K
2SD601A-Q-TX




FDS6690A

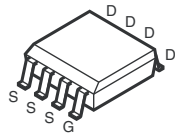


HN1B01FU-TE85R

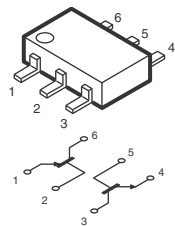


SSM6N15FU(TE85R)

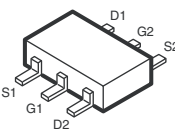


2SB1122-S
2SB1122-ST-TD-E
2SD1621-ST
2SD1621ST-TD-E

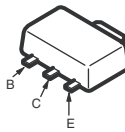

2SD2114KT146




2SK2158-T2B




DIODE


BAS316-115
EP05FA20
MM3Z10VT1
MM3Z11VT1
MM3Z13VT1
MM3Z18VST1
MM3Z22VT1
MM3Z2V4T1
MM3Z5V6ST1
MM3Z6V2ST1
MM3Z6V8ST1
MM3Z8V2ST1

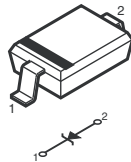

BAT54HT1
DTZ10B
HZU5.6GTRF
MA113-(TX)
MMDL914T1
RD5.6SB-T1
UDZ-TE-17-18B
UDZ-TE-17-6.2B
UDZ-TE-17-6.8B

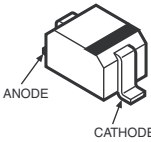


D10SBS4
D10SBS4F
D2SB60A-F04
D4SB60L




D10SC6M




D1NL40-TA2
D1NL40-TR2
ERA22-08




D1NS6
D1NS6-TR
ERA22-06AVRBT
UF4005PKG23
10ERB20-TB3
1N5404TU



EC10QS-04
EC10QS04-TE12L5

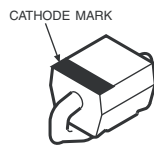


EC21QS03L-TE12L
P6SMBJ30A-5
PTZ-TE25-3.9B

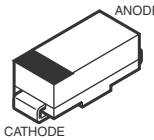


ERA22-08KFLB




FSF05A60

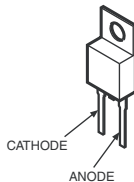


HN1D03FU-TE85L
HN1D03FU-TE85R

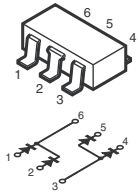


M1FM3

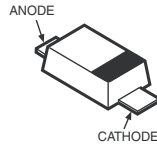


MA132WK
MA132WK-TX
MA151WK-TX
1SS184




UDZSTE-1710B

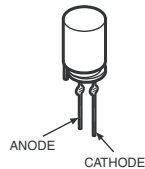


UMZ16NT106




1PS302



SML-020MVT-T86

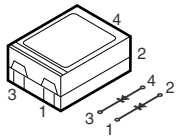

SML-310LTT86

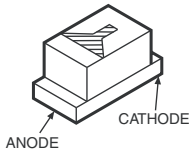



SECTION 4: EXPLODED VIEWS


Components not identified by a part number or description are not stocked because they are seldom required for routine service.

The component parts of an assembly are indicated by the reference numbers in the far right column of the parts list and within the dotted lines of the diagram.

* Items marked with an asterisk are not stocked since they are seldom required for routine service. Expect some delay when ordering these components.


NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


NOTE: The components identified by a red outline and a  mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.


4-1. REAR COVER ASSEMBLY AND STAND ASSEMBLY


(Check the [Sony Electronics Service Information](#) website for any additional service related issues for this model.)

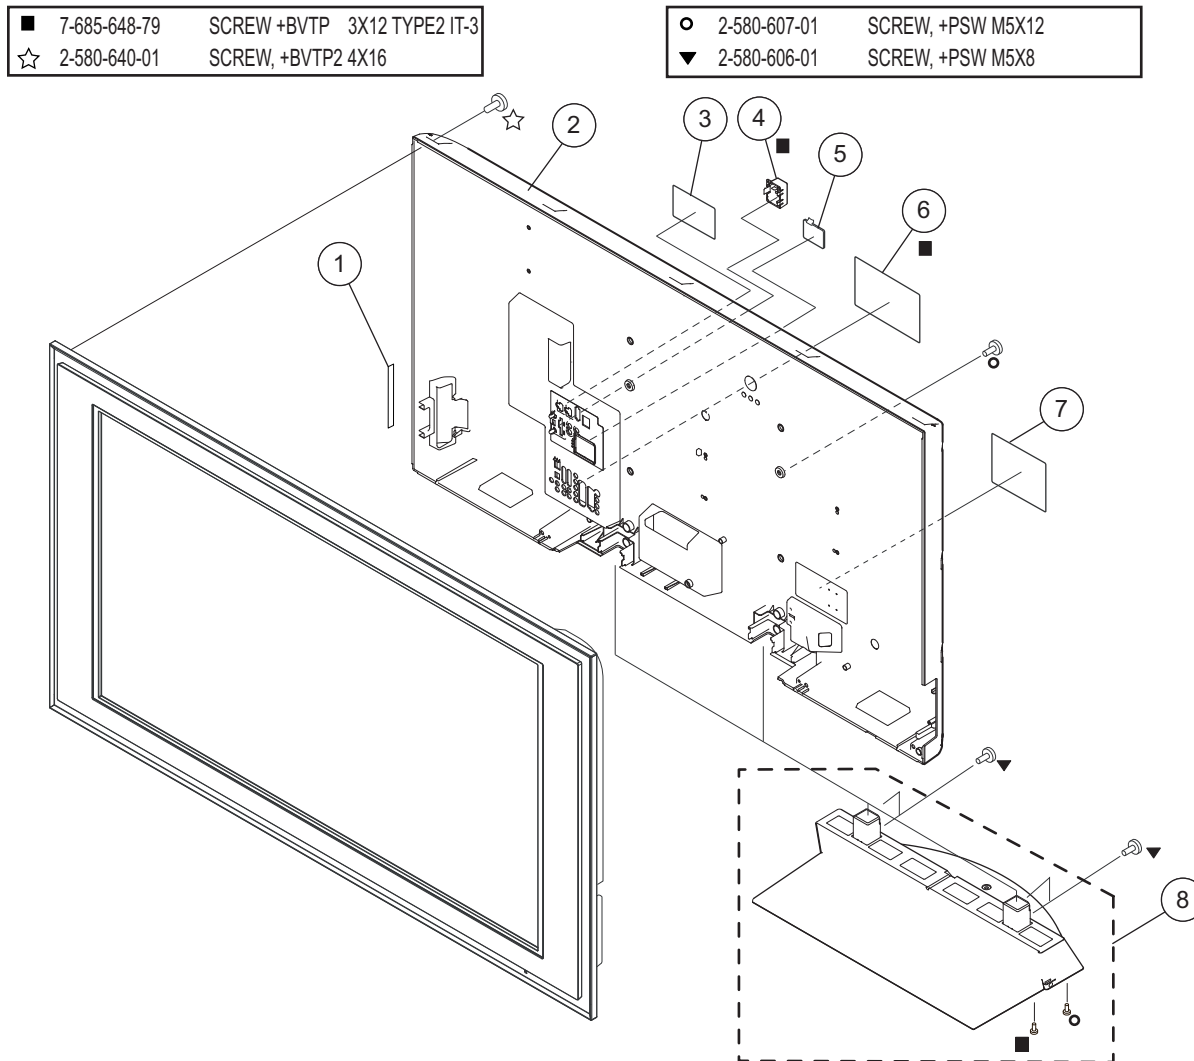

REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
1	3-106-919-01	LABEL, SIDE TERMINAL		6	3-106-918-01	LABEL, REAR TERMINAL	
2	X-2179-518-1	COVER, ASSEMBLY REAR (52)		* 7	3-218-453-01	LABEL, INFORMATION (KDL-52XBR4 ONLY)	
3	3-106-917-01	LABEL, HDMI (KDL-52XBR4 ONLY)		* 7	3-218-454-01	LABEL, INFORMATION (KDL-52XBR5 ONLY)	
3	3-196-406-01	LABEL, HDMI (KDL-52XBR5 ONLY)		8	X-2177-336-1	STAND BASE (L) ASSEMBLY (KDL-52XBR4 ONLY)	
4	3-106-943-01	BRACKET, HOTEL (KDL-52XBR5 ONLY)		8	X-2178-018-1	STAND BASE (L) ASSEMBLY (KDL-52XBR5 ONLY)	
5	2-673-535-11	SERVICE COVER					

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a  mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

4-2. SPEAKERS

(Check the [Sony Electronics Service Information](#) website for any additional service related issues for this model.)

- ▼

2-596-649-01

+KTT 3X10 (S TYPE)
- △

2-580-654-01

SCREW, +PWTP2 4X16
- ★

2-580-591-01


SCREW, +PSW M3X5
- ☆


2-580-640-01


SCREW, +BVTP2 4X16
- 2-580-606-01


SCREW, +PSW M5X8
- 2-580-630-01


SCREW, +BVST 4X8

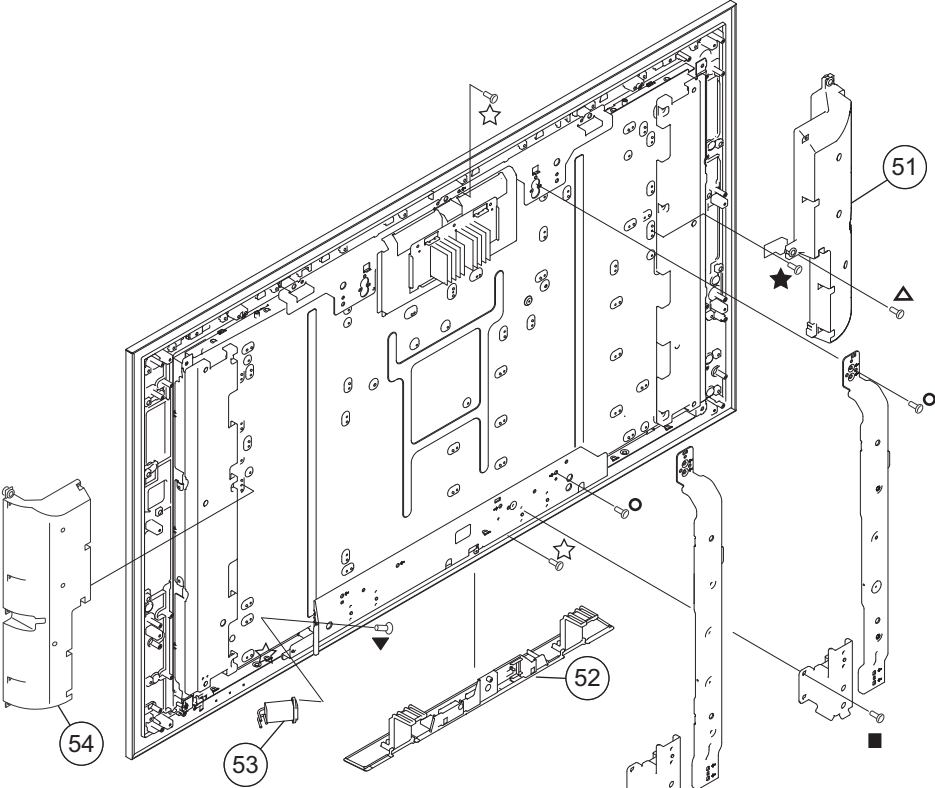

REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
51	1-826-696-11	LOUDSPEAKER		 53	1-819-729-14	INLET, AC (WITH NOISE FILTER)	
52	3-100-425-02	UNDER COVER (L)		54	1-826-696-21	LOUDSPEAKER	

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


NOTE: The components identified by a red outline and a  mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.



4-3. CHASSIS


(Check the [Sony Electronics Service Information](#) website for any additional service related issues for this model.)


- ☆ 2-580-640-01 SCREW, +BVTP2 4X16
- ★ 2-580-629-01 SCREW, +BVST 3X8
- △ 2-580-591-01 SCREW, +PSW M3X5
- 7-685-648-79 SCREW +BVTP 3X12 TYPE2 IT-3
- 2-674-965-51 SCREW, +PSW 3SG

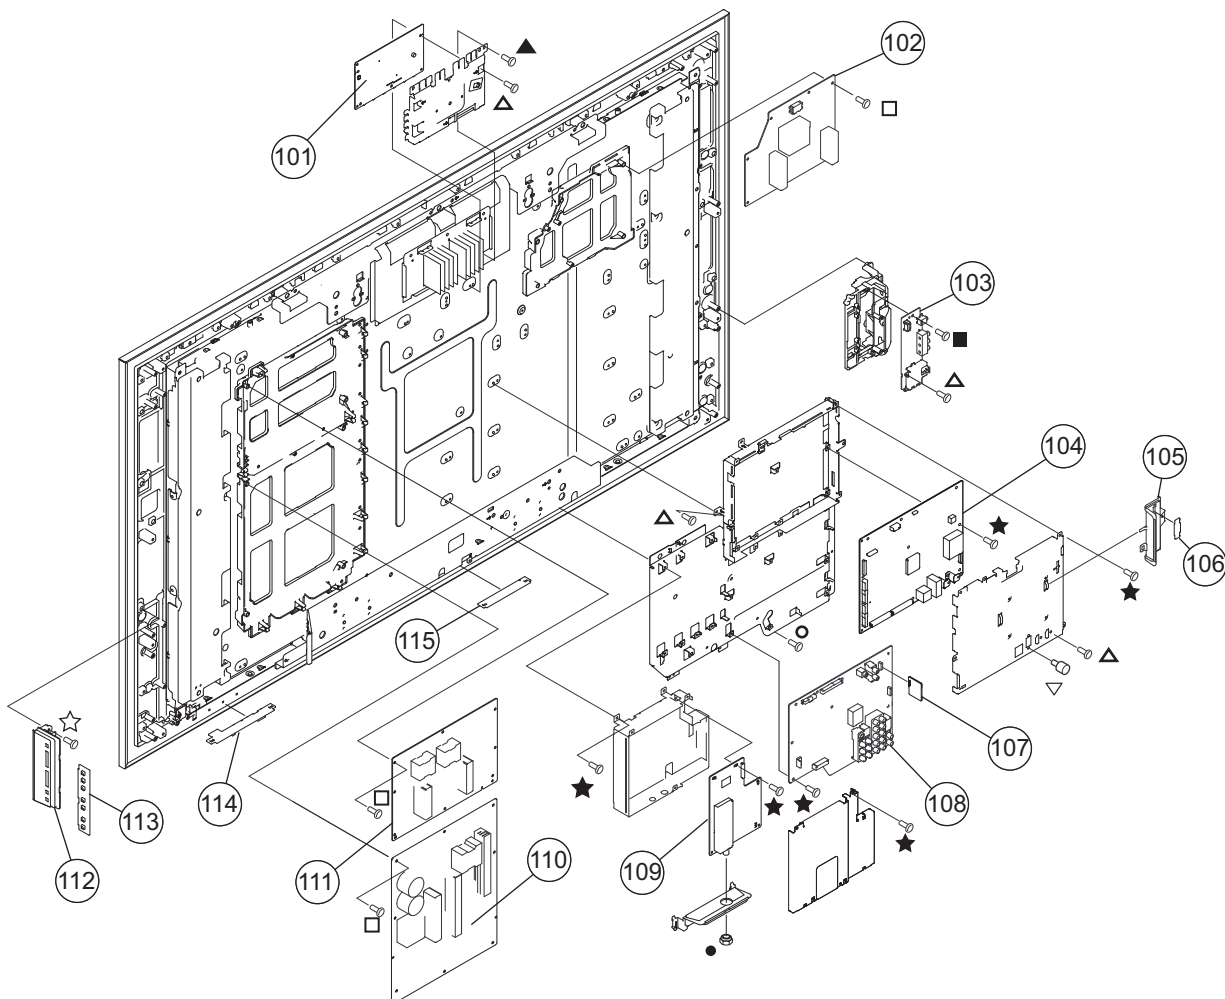
- 3-682-691-00 NUT, WASHER HEXAGON
- ▽ 4-635-966-01 SCREW (HEX)
- ▲ 7-682-948-01 SCREW +PSW 3X8
- 2-580-630-01 SCREW, +BVST 4X8



REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
101	A-1257-224-A	UB1 BOARD, COMPLETE (The UB1 Board contains critical adjustment data, therefore, if service is required, complete board replacement is the repair method.)		107	A-1246-098-A	H5 BOARD, MOUNTED (KDL-52XBR5 ONLY)	
102	A-1253-588-B	DF5 BOARD, MOUNTED		108	A-1433-188-A	AU BOARD, COMPLETE (KDL-52XBR4 ONLY)	
103	A-1361-955-A	HW2 BOARD, COMPLETE		108	A-1433-190-A	AU BOARD, COMPLETE (KDL-52XBR5 ONLY)	
 104	A-1362-640-A	FB1 BOARD, COMPLETE (SN 8,000,001 to 8,099,999 and SN 8,500,001 to 8,599,999 Only)		109	A-1269-502-A	TUU2 BOARD, MOUNTED	
 104	A-1418-997-A	FB1 BOARD, COMPLETE (SN 8,100,001 to 8,499,999 and SN 8,600,001 and Up Only)		* 110	A-1256-162-A	GF2 BOARD, COMPLETE	
105	3-106-942-02	BRACKET, CARD		111	A-1253-587-B	DF4 BOARD, MOUNTED	
106	3-270-441-01	COVER, MS (H)		112	X-2178-520-1	CONTROL BUTTON ASSEMBLY	
				* 113	A-1171-665-A	H1 BOARD, MOUNTED	
				114	A-1171-667-A	H3 BOARD, MOUNTED	
				115	A-1171-668-A	H4 BOARD, MOUNTED	

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.


NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a  mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.


4-4. CONNECTORS


(Check the [Sony Electronics Service Information](#) website for any additional service related issues for this model.)


▼ 2-580-599-01 SCREW, +PSW M4X6

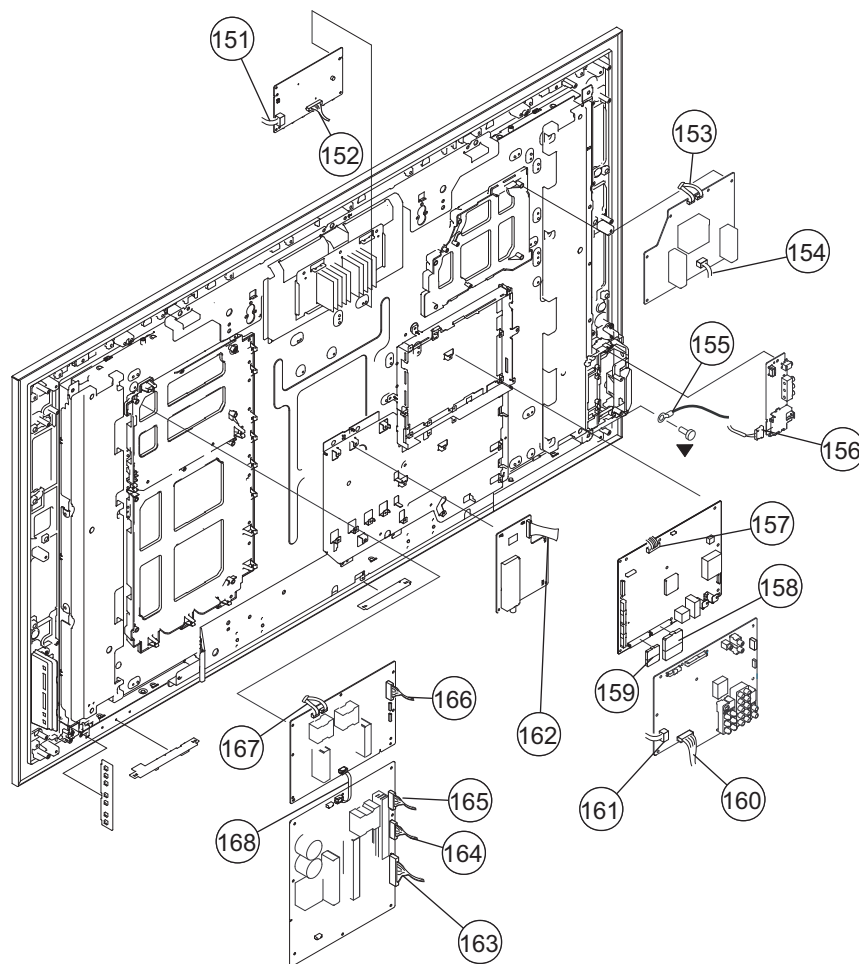

REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
151	1-910-037-04	XA CONNECTOR ASSEMBLY (UB) 6P		161	1-910-037-05	VH CONNECTOR ASSEMBLY (SP) 4P	
152	1-834-417-11	LEAD WIRE WITH CONNECTOR (LVDS)		162	1-910-036-74	FFC CONNECTOR ASSEMBLY (TU) 49P	
153	1-834-262-11	CONNECTOR ASSEMBLY		163	1-910-036-94	XA CONNECTOR ASSEMBLY (A)	
154	1-910-036-99	CONNECTOR ASSEMBLY (DF5)		164	1-910-036-95	XA CONNECTOR ASSEMBLY (DF4) 9P	
* 155	1-910-039-50	FASTEN CONNECTOR ASSEMBLY (HW2)		165	1-910-036-93	XA CONNECTOR ASSEMBLY (FB) 13P	
156	1-834-140-11	LEAD WIRE WITH CONNECTOR (LVDS)		166	1-910-036-92	XA CONNECTOR ASSEMBLY (BL) 7P	
157	1-910-037-40	MO1929 CONNECTOR ASSEMBLY (BF) 20P		167	1-834-264-11	CONNECTOR ASSEMBLY	
158	1-821-375-11	BOARD TO BOARD CONNECTOR 80P		168	1-910-037-32	VH CONNECTOR ASSEMBLY (DF4) 3P	
159	1-821-376-11	BOARD TO BOARD CONNECTOR 50P					
160	1-910-037-35	MO1929 CONNECTOR ASSEMBLY (H) 40P					

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a  mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced.
See Appendix A: Encryption Key Components in the back of this manual.

4-5. BEZEL ASSEMBLY AND LCD PANEL


(Check the [Sony Electronics Service Information](#) website for any additional service related issues for this model.)






- ☆

2-580-607-01

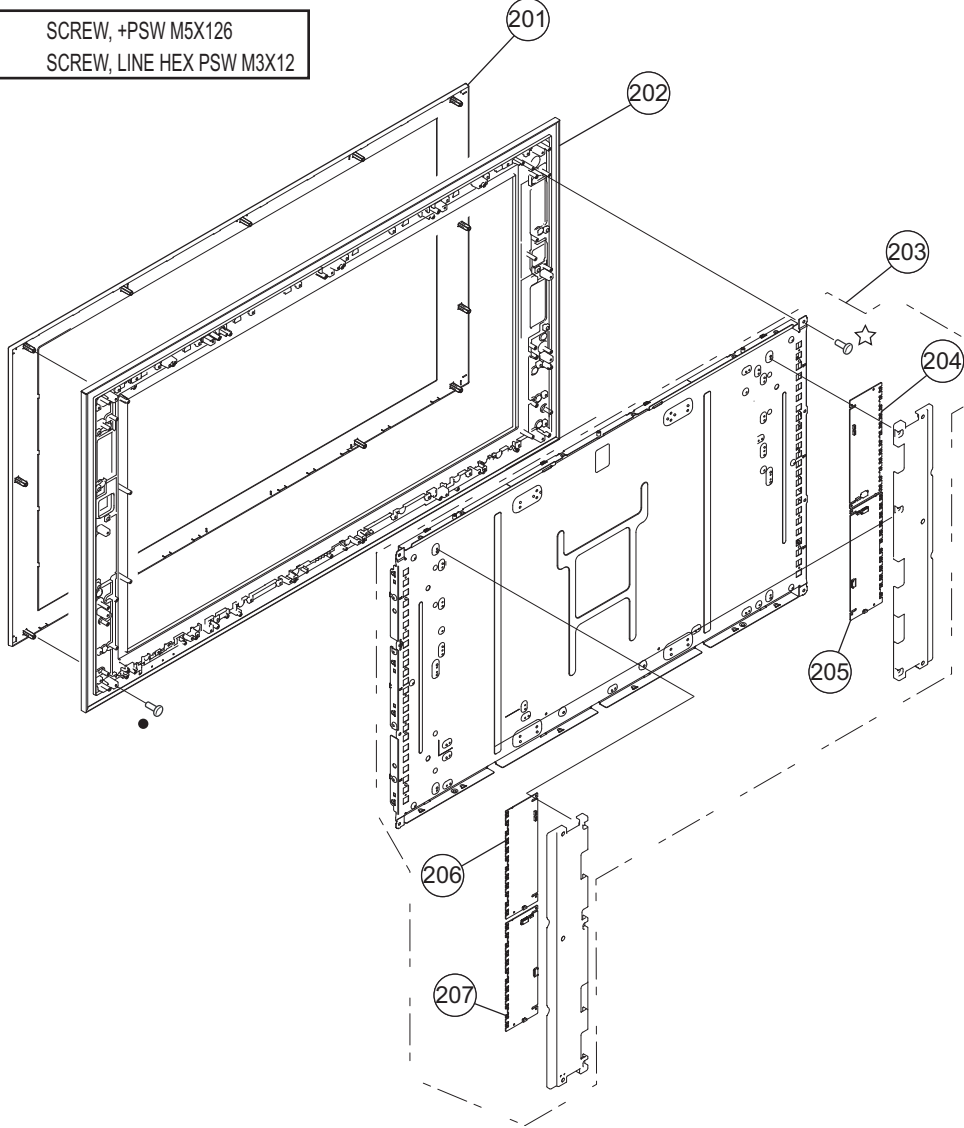SCREW, +PSW M5X126
- 2-687-999-01

SCREW, LINE HEX PSW M3X12



REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
201	X-2186-942-1	BEZEL ASSEMBLY(52) (KDL-52XBR4 ONLY)		Use the following for SN 8,000,001 to 8,099,999 and SN 8,500,001 to 8,599,999 Only			
FOR OPTIONAL COLORED BEZEL ASSEMBLIES FOR THE KDL-52XBR4 MODEL, SEE THE "COLORED BEZEL" SECTION AT THE BACK OF THIS MANUAL.				203	1-802-490-12	LCD PANEL (52 INCH FHD HFR)	[204-207]
201	X-2178-016-2	BEZEL ASSEMBLY(52) (KDL-52XBR5 ONLY)		NOTE: This panel must be used in conjunction with FB1 BOARD, COMPLETE A-1362-640-A			
202	X-2178-861-2	FRONT CABINET PRE ASSEMBLY (52)		204	1-789-841-11	(BALANCER BOARD) ETC-INVERTER MT BOARD (RU)	
				205	1-789-842-11	(BALANCER BOARD) ETC-INVERTER MT BOARD (RL)	
				206	1-789-843-11	(BALANCER BOARD) ETC-INVERTER MT BOARD (LU)	
				207	1-789-844-11	(BALANCER BOARD) ETC-INVERTER MT BOARD (LL)	
				Use the following PNs for SN 8,100,001 to 8,499,999 and SN 8,600,001 and Up Only			
				 203	1-802-490-31	LCD PANEL(52INCH FHD TFT)	[204-207]
				NOTE: This panel must be used in conjunction with FB1 BOARD, COMPLETE A-1418-997-A			
				 204	1-789-946-11	(BALANCER BOARD) ETC-INVERTER MT BOARD (RU)	
				 205	1-789-947-11	(BALANCER BOARD) ETC-INVERTER MT BOARD (RL)	
				 206	1-789-944-11	(BALANCER BOARD) ETC-INVERTER MT BOARD (LU)	
				 207	1-789-945-11	(BALANCER BOARD) ETC-INVERTER MT BOARD (LL)	





REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C456	1-114-330-11	CERAMIC CHIP	2.2μF	10%	16V	C525	1-131-661-21	ELECT CHIP	100μF	20%	10V
C458	1-131-661-21	ELECT CHIP	100μF	20%	10V	C526	1-100-421-21	ELECT CHIP	220μF	20%	6.3V
C464	1-100-912-11	CERAMIC CHIP	1μF	10%	25V	C527	1-110-563-11	CERAMIC CHIP	0.068μF	10%	16V
C466	1-100-421-21	ELECT CHIP	220μF	20%	6.3V	C803	1-131-661-21	ELECT CHIP	100μF	20%	10V
C470	1-126-396-11	ELECT CHIP	47μF	20%	16V	C804	1-100-912-11	CERAMIC CHIP	1μF	10%	25V
C471	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C805	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C472	1-114-330-11	CERAMIC CHIP	2.2μF	10%	16V	C806	1-112-046-11	CERAMIC CHIP	4.7μF	10%	6.3V
C473	1-114-325-11	CERAMIC CHIP	0.1μF	10%	25V	C807	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C474	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C808	1-112-781-11	CERAMIC CHIP	1μF	10%	10V
C475	1-114-330-11	CERAMIC CHIP	2.2μF	10%	16V	C809	1-114-331-11	CERAMIC CHIP	4.7μF	10%	10V
* C478	1-112-298-91	CERAMIC CHIP	1μF	10%	16V	C810	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C485	1-112-781-11	CERAMIC CHIP	1μF	10%	10V	C811	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C486	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C812	1-164-852-11	CERAMIC CHIP	12pF	5%	50V
C487	1-112-781-11	CERAMIC CHIP	1μF	10%	10V	C813	1-112-046-11	CERAMIC CHIP	4.7μF	10%	6.3V
C488	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C814	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C489	1-112-066-11	CERAMIC CHIP	10μF	10%	10V	C815	1-164-852-11	CERAMIC CHIP	12pF	5%	50V
C490	1-112-066-11	CERAMIC CHIP	10μF	10%	10V	C816	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C491	1-112-780-11	CERAMIC CHIP	0.47μF	10%	16V	C820	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C492	1-112-780-11	CERAMIC CHIP	0.47μF	10%	16V	C821	1-126-391-11	ELECT CHIP	47μF	20%	6.3V
C494	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C823	1-128-589-11	ELECT CHIP	47μF	20%	6.3V
C495	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C824	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C498	1-100-421-21	ELECT CHIP	220μF	20%	6.3V	C826	1-112-046-11	CERAMIC CHIP	4.7μF	10%	6.3V
C499	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C828	1-114-331-11	CERAMIC CHIP	4.7μF	10%	10V
C500	1-126-396-11	ELECT CHIP	47μF	20%	16V	C829	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C502	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C830	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C503	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C831	1-114-331-11	CERAMIC CHIP	4.7μF	10%	10V
C504	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C832	1-131-661-21	ELECT CHIP	100μF	20%	10V
C505	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C833	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C506	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C834	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C507	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C835	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C508	1-112-781-11	CERAMIC CHIP	1μF	10%	10V	C837	1-126-391-11	ELECT CHIP	47μF	20%	6.3V
C509	1-112-066-11	CERAMIC CHIP	10μF	10%	10V	C838	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C510	1-112-066-11	CERAMIC CHIP	10μF	10%	10V	C839	1-126-391-11	ELECT CHIP	47μF	20%	6.3V
C511	1-164-866-11	CERAMIC CHIP	47pF	5%	50V	C840	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C512	1-164-866-11	CERAMIC CHIP	47pF	5%	50V	C843	1-126-391-11	ELECT CHIP	47μF	20%	6.3V
C514	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C844	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C515	1-126-394-11	ELECT CHIP	10μF	20%	16V	C845	1-100-904-11	CERAMIC CHIP	330pF	10%	50V
C516	1-126-394-11	ELECT CHIP	10μF	20%	16V	C846	1-100-904-11	CERAMIC CHIP	330pF	10%	50V
C517	1-126-394-11	ELECT CHIP	10μF	20%	16V	C847	1-114-331-11	CERAMIC CHIP	4.7μF	10%	10V
C518	1-126-394-11	ELECT CHIP	10μF	20%	16V	C848	1-114-331-11	CERAMIC CHIP	4.7μF	10%	10V
C519	1-112-780-11	CERAMIC CHIP	0.47μF	10%	16V	C849	1-112-066-11	CERAMIC CHIP	10μF	10%	10V
C520	1-112-780-11	CERAMIC CHIP	0.47μF	10%	16V	C850	1-112-066-11	CERAMIC CHIP	10μF	10%	10V
C521	1-112-780-11	CERAMIC CHIP	0.47μF	10%	16V	C851	1-126-394-11	ELECT CHIP	10μF	20%	16V
C522	1-112-780-11	CERAMIC CHIP	0.47μF	10%	16V	C854	1-162-979-11	CERAMIC CHIP	0.0027μF	10%	50V
C524	1-131-661-21	ELECT CHIP	100μF	20%	10V	C855	1-162-979-11	CERAMIC CHIP	0.0027μF	10%	50V



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C856	1-126-396-11	ELECT CHIP	47μF	20%	16V	C915	1-131-696-11	FILM	0.22μF	5%	50V
C857	1-126-396-11	ELECT CHIP	47μF	20%	16V	C916	1-126-394-11	ELECT CHIP	10μF	20%	16V
C858	1-126-396-11	ELECT CHIP	47μF	20%	16V	C917	1-114-331-11	CERAMIC CHIP	4.7μF	10%	10V
C859	1-126-396-11	ELECT CHIP	47μF	20%	16V	C918	1-114-331-11	CERAMIC CHIP	4.7μF	10%	10V
C860	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C919	1-112-064-11	CERAMIC CHIP	2.2μF	10%	10V
C861	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C920	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C862	1-112-672-81	CERAMIC CHIP	330pF	5%	50V	C921	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C863	1-112-672-81	CERAMIC CHIP	330pF	5%	50V	C922	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C864	1-126-396-11	ELECT CHIP	47μF	20%	16V	C923	1-112-064-11	CERAMIC CHIP	2.2μF	10%	10V
C866	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C924	1-164-874-11	CERAMIC CHIP	100pF	5%	50V
C867	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C925	1-164-874-11	CERAMIC CHIP	100pF	5%	50V
C868	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C926	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V
C870	1-112-064-11	CERAMIC CHIP	2.2μF	10%	10V	C927	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V
C871	1-112-064-11	CERAMIC CHIP	2.2μF	10%	10V	C928	1-126-396-11	ELECT CHIP	47μF	20%	16V
C875	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C929	1-126-396-11	ELECT CHIP	47μF	20%	16V
C879	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C930	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C880	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C931	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C881	1-113-701-21	ELECT CHIP	22μF	20%	16V	C932	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C882	1-113-701-21	ELECT CHIP	22μF	20%	16V	C933	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C883	1-137-893-11	ELECT CHIP	22μF	20%	16V	C934	1-114-325-11	CERAMIC CHIP	0.1μF	10%	25V
C884	1-137-893-11	ELECT CHIP	22μF	20%	16V	C935	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C887	1-114-325-11	CERAMIC CHIP	0.1μF	10%	25V	C936	1-114-325-11	CERAMIC CHIP	0.1μF	10%	25V
C888	1-128-536-11	ELECT CHIP	100μF	20%	25V	C937	1-114-325-11	CERAMIC CHIP	0.1μF	10%	25V
C889	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C938	1-128-589-11	ELECT CHIP	47μF	20%	6.3V
C890	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C952	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C891	1-126-396-11	ELECT CHIP	47μF	20%	16V	C955	1-100-904-11	CERAMIC CHIP	330pF	10%	50V
C893	1-114-326-11	CERAMIC CHIP	0.22μF	10%	25V	C956	1-100-904-11	CERAMIC CHIP	330pF	10%	50V
C894	1-114-326-11	CERAMIC CHIP	0.22μF	10%	25V	C1201	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C895	1-114-326-11	CERAMIC CHIP	0.22μF	10%	25V	C1206	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C896	1-114-326-11	CERAMIC CHIP	0.22μF	10%	25V	C1207	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C897	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	* C1210	1-112-298-91	CERAMIC CHIP	1μF	10%	16V
C898	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	* C1211	1-112-298-91	CERAMIC CHIP	1μF	10%	16V
C899	1-114-325-11	CERAMIC CHIP	0.1μF	10%	25V	C1212	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C901	1-100-912-11	CERAMIC CHIP	1μF	10%	25V	C1213	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C902	1-100-912-11	CERAMIC CHIP	1μF	10%	25V	C1214	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C903	1-114-325-11	CERAMIC CHIP	0.1μF	10%	25V	C1218	1-126-391-11	ELECT CHIP	47μF	20%	6.3V
C905	1-115-670-11	ELECT CHIP	220μF	20%	35V	C1219	1-126-390-11	ELECT CHIP	22μF	20%	6.3V
C906	1-115-670-11	ELECT CHIP	220μF	20%	35V	C1220	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C907	1-131-696-11	FILM	0.22μF	5%	50V	C1221	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C908	1-131-696-11	FILM	0.22μF	5%	50V	C1222	1-126-390-11	ELECT CHIP	22μF	20%	6.3V
C909	1-112-835-11	ELECT	3300μF	20%	25V	C1223	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C911	1-126-396-11	ELECT CHIP	47μF	20%	16V	C1224	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C912	1-131-696-11	FILM	0.22μF	5%	50V	C1225	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C913	1-131-696-11	FILM	0.22μF	5%	50V	C1227	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C914	1-131-696-11	FILM	0.22μF	5%	50V	C1229	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES
C1230	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	CN008	1-779-071-51	CONNECTOR, FFC/FPC	16P
C1231	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	* CN801	1-580-838-11	PIN, CONNECTOR (PC BOARD)	4P
C1232	1-164-856-81	CERAMIC CHIP	18pF	5%	50V	CN1201	1-778-226-21	CONNECTOR, BOARD TO BOARD	6P
C1233	1-164-858-11	CERAMIC CHIP	22pF	5%	50V	CN1602	1-819-337-11	HEADER ASSEMBLY FOR PWB	
C1234	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V				
C1235	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V			DIODE	
C1236	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	* D017	6-501-732-01	DIODE	MAZ8056G0LS0
C1237	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	* D018	6-501-732-01	DIODE	MAZ8056G0LS0
C1238	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	* D019	6-501-732-01	DIODE	MAZ8056G0LS0
C1239	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	D201	6-501-740-01	DIODE	MAZ8068G0LS0
C1241	1-164-848-11	CERAMIC CHIP	8pF	0.50pF	50V	D205	6-501-657-01	DIODE	MA24D5000BS0
C1242	1-164-849-11	CERAMIC CHIP	9pF	0.50pF	50V	D212	6-500-579-01	DIODE	PTZ-TE25-6.8B
C1243	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	D402	6-501-758-01	DIODE	MAZ8100G0LS0
C1244	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	D421	6-500-335-01	DIODE	MC2838-T112-1
C1246	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	D422	6-500-335-01	DIODE	MC2838-T112-1
C1247	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	D423	6-501-817-01	DIODE	MA2J1110GLS0
C1251	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	D424	6-501-817-01	DIODE	MA2J1110GLS0
C1252	1-112-066-11	CERAMIC CHIP	10μF	10%	10V	D803	6-501-749-01	DIODE	MAZ8056G0LS0
C1253	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	D806	6-500-334-01	DIODE	MC2836-T112-1
C1254	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	D807	6-501-817-01	DIODE	MA2J1110GLS0
C1451	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	D808	6-501-817-01	DIODE	MA2J1110GLS0
C1452	1-131-661-21	ELECT CHIP	100μF	20%	10V	* D809	6-501-732-01	DIODE	MAZ8056G0LS0
C1453	1-114-325-11	CERAMIC CHIP	0.1μF	10%	25V	* D810	6-501-732-01	DIODE	MAZ8056G0LS0
C1454	1-164-872-11	CERAMIC CHIP	82pF	5%	50V	* D811	6-501-732-01	DIODE	MAZ8056G0LS0
C1455	1-114-320-11	CERAMIC CHIP	0.22μF	10%	6.3V	* D812	6-501-732-01	DIODE	MAZ8056G0LS0
C1456	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	* D813	6-501-732-01	DIODE	MAZ8056G0LS0
C1457	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	D1205	6-500-334-01	DIODE	MC2836-T112-1
C1601	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V	D1206	6-500-334-01	DIODE	MC2836-T112-1
C1602	1-117-681-11	ELECT CHIP	100μF	20%	16V	D1213	6-500-335-01	DIODE	MC2838-T112-1
C1603	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	D1214	6-500-334-01	DIODE	MC2836-T112-1
C1605	1-112-861-11	ELECT CHIP	150μF	20%	16V	D1601	6-500-701-01	DIODE	PGB1010603NR
C1606	1-112-775-11	CERAMIC CHIP	0.0022μF	10%	50V	D1602	6-500-701-01	DIODE	PGB1010603NR
C1607	1-112-781-11	CERAMIC CHIP	1μF	10%	10V	D1603	6-501-336-01	DIODE	RSX201L-30TE25
C1608	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	D1604	6-501-529-01	DIODE	1SMA5920BT3G
C1609	1-128-360-11	ELECT CHIP	220μF	20%	10V			EARTH TERMINAL	
C1613	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	ET1551	1-780-482-11	EARTH TERMINAL	
		CONNECTOR				ET1552	1-780-482-11	EARTH TERMINAL	
CN001	1-819-339-11	HEADER ASSEMBLY FOR PWB				ET1553	1-780-482-11	EARTH TERMINAL	
* CN004	1-821-077-11	HEADER ASSEMBLY FOR PWB				ET1554	1-780-482-11	EARTH TERMINAL	
CN005	1-821-378-11	BOARD TO BOARD CONNECTOR				ET1555	1-780-482-11	EARTH TERMINAL	
CN006	1-821-377-11	BOARD TO BOARD CONNECTOR				ET1556	1-780-482-11	EARTH TERMINAL	
CN007	1-779-936-51	CONNECTOR, FFC/FPC			18P	ET1557	1-780-482-11	EARTH TERMINAL	



REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
ET1558	1-780-482-11	EARTH TERMINAL		FB035	1-469-082-21	FERRITE	0μH
ET1559	1-780-482-11	EARTH TERMINAL		FB036	1-469-082-21	FERRITE	0μH
ET1560	1-780-482-11	EARTH TERMINAL		FB037	1-469-082-21	FERRITE	0μH
ET1561	1-780-482-11	EARTH TERMINAL		FB038	1-400-089-21	FERRITE	0μH
ET1562	1-780-482-11	EARTH TERMINAL		FB044	1-469-082-21	FERRITE	0μH
ET1563	1-780-482-11	EARTH TERMINAL		FB045	1-400-179-21	FERRITE	0μH
ET1564	1-780-482-11	EARTH TERMINAL		FB046	1-400-179-21	FERRITE	0μH
ET1565	1-780-482-11	EARTH TERMINAL		FB047	1-400-179-21	FERRITE	0μH
<u>FUSE</u>				FB048	1-400-179-21	FERRITE	0μH
F001	1-576-933-21	FUSE	5A 24V	FB051	1-400-179-21	FERRITE	0μH
F201	1-576-603-21	FUSE	3.15A 24V	FB052	1-400-089-21	FERRITE	0μH
F801	1-576-842-11	FUSE	0.63A 32V	FB053	1-400-089-21	FERRITE	0μH
<u>FERRITE BEAD</u>				FB202	1-400-180-21	FERRITE	0μH
FB001	1-400-089-21	FERRITE	0μH	FB206	1-400-794-21	FERRITE	0μH
FB002	1-469-082-21	FERRITE	0μH	FB803	1-400-833-21	FERRITE	0μH
FB006	1-469-082-21	FERRITE	0μH	<u>FILTER</u>			
FB007	1-469-082-21	FERRITE	0μH	FL001	1-234-494-21	FILTER, EMI REMOVAL (SMD)	
FB008	1-469-082-21	FERRITE	0μH	FL002	1-234-494-21	FILTER, EMI REMOVAL (SMD)	
FB009	1-469-082-21	FERRITE	0μH	FL003	1-234-494-21	FILTER, EMI REMOVAL (SMD)	
FB010	1-469-082-21	FERRITE	0μH	<u>IC</u>			
FB011	1-469-082-21	FERRITE	0μH	IC001	6-709-731-01	IC	ADT75ARZ-REEL
FB012	1-469-082-21	FERRITE	0μH	IC205	6-710-922-01	IC	BD9853AFV-E2
FB014	1-469-082-21	FERRITE	0μH	IC206	6-708-603-01	IC	PQ070XNA1ZPH
FB015	1-469-082-21	FERRITE	0μH	IC207	6-708-603-01	IC	PQ070XNA1ZPH
FB016	1-469-082-21	FERRITE	0μH	IC208	6-708-762-01	IC	PQ200WNA1ZPH
FB017	1-469-082-21	FERRITE	0μH	IC210	6-708-603-01	IC	PQ070XNA1ZPH
FB018	1-469-082-21	FERRITE	0μH	IC401	6-709-777-01	IC	ADA4861-3YRZ-RL7
FB019	1-469-082-21	FERRITE	0μH	IC402	8-753-289-65	IC	CXA2240AR-TL
FB020	1-469-082-21	FERRITE	0μH	IC802	6-711-253-01	IC	CXD9890AQ
FB021	1-469-082-21	FERRITE	0μH	IC804	8-759-278-58	IC	NJM4558V-TE2
FB022	1-469-082-21	FERRITE	0μH	IC805	8-759-278-58	IC	NJM4558V-TE2
FB023	1-469-082-21	FERRITE	0μH	IC807	6-709-927-01	IC	RT8H225C-TP-2
FB024	1-469-082-21	FERRITE	0μH	IC808	6-710-904-01	IC	TPA3100D2PHPR
FB025	1-469-082-21	FERRITE	0μH	IC810	8-759-359-49	IC	NJM3414AV(TE2)
FB026	1-469-082-21	FERRITE	0μH	IC811	6-709-927-01	IC	RT8H225C-TP-2
FB027	1-469-082-21	FERRITE	0μH	IC812	6-709-927-01	IC	RT8H225C-TP-2
FB028	1-469-082-21	FERRITE	0μH	IC813	8-759-592-48	IC	TC7SZ32FU(TE85R)
FB029	1-469-082-21	FERRITE	0μH	IC1202	6-709-901-01	IC	MM3121JPLE
FB030	1-469-082-21	FERRITE	0μH	IC1203	6-705-373-01	IC	MM3123DPLE
FB031	1-469-082-21	FERRITE	0μH	IC1204	6-704-607-01	IC	M24C16-WMN6T(B)
FB032	1-469-082-21	FERRITE	0μH	IC1205	6-807-553-01	IC	MB91F314APMC-G-101E1
FB033	1-469-082-21	FERRITE	0μH	IC1206	6-703-175-01	IC	PST3629UL
FB034	1-469-082-21	FERRITE	0μH	IC1208	6-701-185-01	IC	MC74VHC1G125DFT1



REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
IC1209	6-701-185-01	IC	MC74VHC1G125DFT1	Q406	8-729-122-63	TRANSISTOR	2SA1226-E4
IC1601	6-709-441-01	IC	SI8008TM-TL	Q407	8-729-122-63	TRANSISTOR	2SA1226-E4
IC1602	6-711-288-01	IC	MIC2005-0.5YM6TR	Q408	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF
JACK				Q409	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF
* J402	1-819-358-11	PHONO JACK		Q414	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF
* J403	1-819-358-11	PHONO JACK		Q415	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF
J404	1-507-792-00	JACK		Q416	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF
J405	1-821-064-11	PHONO JACK	10P	Q419	8-729-027-43	TRANSISTOR	DTC114EKA-T146
COIL				Q420	6-550-832-01	TRANSISTOR	SI2301BDS-T1
L203	1-424-922-21	INDUCTOR	10μH	Q421	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF
L403	1-481-234-21	INDUCTOR	10μH	Q422	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF
L404	1-481-234-21	INDUCTOR	10μH	Q423	8-729-027-43	TRANSISTOR	DTC114EKA-T146
L405	1-481-234-21	INDUCTOR	10μH	Q424	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF
L406	1-481-234-21	INDUCTOR	10μH	Q803	8-729-038-28	TRANSISTOR	RT1N441C-TP-1
L407	1-481-234-21	INDUCTOR	10μH	Q804	6-551-364-01	TRANSISTOR	DTC614TUT106
L803	1-469-555-21	INDUCTOR	10μH	Q805	6-551-364-01	TRANSISTOR	DTC614TUT106
L804	1-469-555-21	INDUCTOR	10μH	Q806	6-551-321-01	TRANSISTOR	RT3WLMM-TP-1F
L805	1-469-555-21	INDUCTOR	10μH	Q809	6-551-271-01	TRANSISTOR	RT3AMMM
L809	1-469-555-21	INDUCTOR	10μH	Q810	6-551-271-01	TRANSISTOR	RT3AMMM
L810	1-481-083-11	INDUCTOR	22μH	Q811	8-729-027-43	TRANSISTOR	DTC114EKA-T146
L811	1-457-485-11	INDUCTOR	22μH	Q812	6-551-364-01	TRANSISTOR	DTC614TUT106
L812	1-457-485-11	INDUCTOR	22μH	Q813	6-551-364-01	TRANSISTOR	DTC614TUT106
L813	1-457-485-11	INDUCTOR	22μH	Q824	8-729-027-43	TRANSISTOR	DTC114EKA-T146
L814	1-457-485-11	INDUCTOR	22μH	Q826	8-729-027-43	TRANSISTOR	DTC114EKA-T146
L1201	1-469-555-21	INDUCTOR	10μH	Q827	8-729-027-43	TRANSISTOR	DTC114EKA-T146
L1202	1-469-555-21	INDUCTOR	10μH	Q828	6-551-551-01	TRANSISTOR	RT3N77M-TP-1
L1203	1-469-555-21	INDUCTOR	10μH	Q829	6-551-690-01	TRANSISTOR	RT3N11M-TP-1
L1205	1-481-234-21	INDUCTOR	10μH	Q1208	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF
L1451	1-469-555-21	INDUCTOR	10μH	Q1213	8-729-027-43	TRANSISTOR	DTC114EKA-T146
L1452	1-400-179-21	FERRITE	0μH	Q1214	8-729-038-28	TRANSISTOR	RT1N441C-TP-1
L1601	1-416-344-11	INDUCTOR	10μH	Q1215	8-729-027-23	TRANSISTOR	DTA114EKA-T146
* L1602	1-813-308-11	INDUCTOR	0μH	Q1216	8-729-027-43	TRANSISTOR	DTC114EKA-T146
L1603	1-416-606-11	INDUCTOR	47μH	Q1217	6-551-456-01	TRANSISTOR	RTR020P02TL
IC LINK				Q1218	8-729-027-43	TRANSISTOR	DTC114EKA-T146
PS1601	1-576-736-41	IC LINK	3.15A 24V	Q1220	6-551-271-01	TRANSISTOR	RT3AMMM
TRANSISTOR				Q1221	6-551-271-01	TRANSISTOR	RT3AMMM
Q207	6-551-382-01	TRANSISTOR	RSS040P03FD5TB	Q1222	6-551-321-01	TRANSISTOR	RT3WLMM-TP-1F
Q210	8-729-027-43	TRANSISTOR	DTC114EKA-T146	Q1224	6-551-693-01	TRANSISTOR	RT3T11M-TP-1
Q212	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF	Q1451	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF
Q214	6-551-321-01	TRANSISTOR	RT3WLMM-TP-1F	Q1452	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF
Q403	8-729-122-63	TRANSISTOR	2SA1226-E4	Q1601	8-729-038-28	TRANSISTOR	RT1N441C-TP-1
				Q1602	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF



REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
RESISTOR				R088	1-218-990-81	SHORT CHIP	
R012	1-218-990-81	SHORT CHIP		R089	1-218-990-81	SHORT CHIP	
R013	1-218-990-81	SHORT CHIP		R090	1-218-990-81	SHORT CHIP	
R014	1-218-990-81	SHORT CHIP		R091	1-218-990-81	SHORT CHIP	
R016	1-218-990-81	SHORT CHIP		R092	1-218-990-81	SHORT CHIP	
R026	1-218-990-81	SHORT CHIP		R093	1-218-990-81	SHORT CHIP	
R027	1-218-990-81	SHORT CHIP		R094	1-218-990-81	SHORT CHIP	
R028	1-218-990-81	SHORT CHIP		R096	1-218-990-81	SHORT CHIP	
R029	1-218-990-81	SHORT CHIP		R098	1-218-990-81	SHORT CHIP	
R030	1-218-990-81	SHORT CHIP		R104	1-218-990-81	SHORT CHIP	
R031	1-218-990-81	SHORT CHIP		R105	1-218-990-81	SHORT CHIP	
R032	1-218-990-81	SHORT CHIP		R106	1-218-990-81	SHORT CHIP	
R033	1-218-990-81	SHORT CHIP		R108	1-218-990-81	SHORT CHIP	
R034	1-218-990-81	SHORT CHIP		R109	1-218-990-81	SHORT CHIP	
R035	1-218-990-81	SHORT CHIP		R110	1-218-990-81	SHORT CHIP	
R036	1-218-990-81	SHORT CHIP		R115	1-218-933-11	RES-CHIP	22 5% 1/16W
R037	1-218-990-81	SHORT CHIP		R117	1-218-933-11	RES-CHIP	22 5% 1/16W
R039	1-218-990-81	SHORT CHIP		R133	1-218-990-81	SHORT CHIP	
R041	1-218-990-81	SHORT CHIP		R146	1-216-864-11	SHORT CHIP	
R046	1-218-990-81	SHORT CHIP		R201	1-218-965-11	RES-CHIP	10K 5% 1/16W
R048	1-218-990-81	SHORT CHIP		R204	1-218-965-11	RES-CHIP	10K 5% 1/16W
R050	1-218-990-81	SHORT CHIP		R206	1-218-953-11	RES-CHIP	1K 5% 1/16W
R056	1-218-990-81	SHORT CHIP		R207	1-218-965-11	RES-CHIP	10K 5% 1/16W
R057	1-218-990-81	SHORT CHIP		R218	1-218-990-81	SHORT CHIP	
R058	1-218-990-81	SHORT CHIP		R233	1-218-990-81	SHORT CHIP	
R059	1-218-990-81	SHORT CHIP		R237	1-208-909-11	METAL CHIP	8.2K 0.50% 1/16W
R060	1-218-990-81	SHORT CHIP		R246	1-218-965-11	RES-CHIP	10K 5% 1/16W
R061	1-218-990-81	SHORT CHIP		R249	1-218-990-81	SHORT CHIP	
R062	1-218-990-81	SHORT CHIP		R251	1-218-990-81	SHORT CHIP	
R071	1-218-990-81	SHORT CHIP		R252	1-216-799-11	METAL CHIP	15 5% 1/10W
R073	1-218-990-81	SHORT CHIP		R258	1-208-911-11	METAL CHIP	10K 0.50% 1/16W
R074	1-218-990-81	SHORT CHIP		R259	1-216-799-11	METAL CHIP	15 5% 1/10W
R075	1-218-990-81	SHORT CHIP		R260	1-216-799-11	METAL CHIP	15 5% 1/10W
R076	1-218-990-81	SHORT CHIP		R262	1-218-990-81	SHORT CHIP	
R077	1-218-990-81	SHORT CHIP		R265	1-218-886-11	METAL CHIP	43K 0.50% 1/10W
R078	1-218-990-81	SHORT CHIP		R266	1-218-982-11	RES-CHIP	270K 5% 1/16W
R079	1-218-990-81	SHORT CHIP		R267	1-208-927-11	METAL CHIP	47K 0.50% 1/16W
R080	1-218-990-81	SHORT CHIP		R268	1-208-929-81	METAL CHIP	56K 0.50% 1/16W
R081	1-218-990-81	SHORT CHIP		R269	1-216-864-11	SHORT CHIP	
R083	1-218-990-81	SHORT CHIP		R270	1-216-864-11	SHORT CHIP	
R084	1-218-990-81	SHORT CHIP		R271	1-216-864-11	SHORT CHIP	
R085	1-218-990-81	SHORT CHIP		R272	1-216-864-11	SHORT CHIP	
R086	1-218-990-81	SHORT CHIP		R273	1-218-953-11	RES-CHIP	1K 5% 1/16W
R087	1-218-990-81	SHORT CHIP		R274	1-218-953-11	RES-CHIP	1K 5% 1/16W



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R275	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R444	1-218-855-11	METAL CHIP	2.2K	0.50%	1/10W
R276	1-218-948-11	RES-CHIP	390	5%	1/16W	R445	1-218-855-11	METAL CHIP	2.2K	0.50%	1/10W
R277	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R446	1-218-855-11	METAL CHIP	2.2K	0.50%	1/10W
R278	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R447	1-211-989-11	METAL CHIP	68	0.50%	1/10W
R279	1-218-948-11	RES-CHIP	390	5%	1/16W	R448	1-211-989-11	METAL CHIP	68	0.50%	1/10W
R280	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R449	1-211-989-11	METAL CHIP	68	0.50%	1/10W
R281	1-218-965-11	RES-CHIP	10K	5%	1/16W	R451	1-218-839-11	METAL CHIP	470	0.50%	1/10W
R283	1-218-990-81	SHORT CHIP				R453	1-216-864-11	SHORT CHIP			
R287	1-218-965-11	RES-CHIP	10K	5%	1/16W	R455	1-218-839-11	METAL CHIP	470	0.50%	1/10W
R289	1-218-990-81	SHORT CHIP				R461	1-218-839-11	METAL CHIP	470	0.50%	1/10W
R291	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W	R465	1-211-969-11	METAL CHIP	10	0.50%	1/10W
R292	1-218-941-11	RES-CHIP	100	5%	1/16W	R466	1-211-969-11	METAL CHIP	10	0.50%	1/10W
R293	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R467	1-211-969-11	METAL CHIP	10	0.50%	1/10W
R294	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R471	1-218-983-11	RES-CHIP	330K	5%	1/16W
R299	1-218-990-81	SHORT CHIP				R472	1-218-983-11	RES-CHIP	330K	5%	1/16W
R300	1-216-864-11	SHORT CHIP				R473	1-218-983-11	RES-CHIP	330K	5%	1/16W
R301	1-216-864-11	SHORT CHIP				R474	1-216-815-11	METAL CHIP	330	5%	1/10W
R302	1-218-953-11	RES-CHIP	1K	5%	1/16W	R475	1-218-933-11	RES-CHIP	22	5%	1/16W
R303	1-208-883-81	METAL CHIP	680	0.50%	1/16W	R476	1-211-969-11	METAL CHIP	10	0.50%	1/10W
R304	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R477	1-211-969-11	METAL CHIP	10	0.50%	1/10W
R305	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R478	1-216-815-11	METAL CHIP	330	5%	1/10W
R306	1-216-864-11	SHORT CHIP				R481	1-218-933-11	RES-CHIP	22	5%	1/16W
R307	1-216-864-11	SHORT CHIP				R486	1-216-815-11	METAL CHIP	330	5%	1/10W
R308	1-216-864-11	SHORT CHIP				R492	1-218-941-81	RES-CHIP	100	5%	1/16W
R415	1-218-990-81	SHORT CHIP				R493	1-218-941-81	RES-CHIP	100	5%	1/16W
R416	1-218-990-81	SHORT CHIP				R494	1-218-941-81	RES-CHIP	100	5%	1/16W
R424	1-218-989-11	RES-CHIP	1M	5%	1/16W	R495	1-218-941-81	RES-CHIP	100	5%	1/16W
R425	1-218-989-11	RES-CHIP	1M	5%	1/16W	R498	1-218-941-81	RES-CHIP	100	5%	1/16W
R427	1-218-989-11	RES-CHIP	1M	5%	1/16W	R507	1-218-941-81	RES-CHIP	100	5%	1/16W
R428	1-218-989-11	RES-CHIP	1M	5%	1/16W	R508	1-218-941-81	RES-CHIP	100	5%	1/16W
R429	1-218-989-11	RES-CHIP	1M	5%	1/16W	R509	1-218-941-81	RES-CHIP	100	5%	1/16W
R430	1-218-989-11	RES-CHIP	1M	5%	1/16W	R510	1-216-864-11	SHORT CHIP			
R431	1-218-855-11	METAL CHIP	2.2K	0.50%	1/10W	R511	1-216-815-11	METAL CHIP	330	5%	1/10W
R432	1-218-855-11	METAL CHIP	2.2K	0.50%	1/10W	R512	1-218-933-11	RES-CHIP	22	5%	1/16W
R433	1-218-855-11	METAL CHIP	2.2K	0.50%	1/10W	R515	1-216-815-11	METAL CHIP	330	5%	1/10W
R435	1-218-855-11	METAL CHIP	2.2K	0.50%	1/10W	R516	1-218-933-11	RES-CHIP	22	5%	1/16W
R436	1-218-855-11	METAL CHIP	2.2K	0.50%	1/10W	R517	1-218-933-11	RES-CHIP	22	5%	1/16W
R437	1-218-855-11	METAL CHIP	2.2K	0.50%	1/10W	R522	1-218-941-81	RES-CHIP	100	5%	1/16W
R439	1-218-989-11	RES-CHIP	1M	5%	1/16W	R527	1-211-983-11	METAL CHIP	39	0.50%	1/10W
R440	1-218-989-11	RES-CHIP	1M	5%	1/16W	R528	1-211-983-11	METAL CHIP	39	0.50%	1/10W
R441	1-218-855-11	METAL CHIP	2.2K	0.50%	1/10W	R529	1-211-983-11	METAL CHIP	39	0.50%	1/10W
R442	1-218-855-11	METAL CHIP	2.2K	0.50%	1/10W	R530	1-218-941-81	RES-CHIP	100	5%	1/16W
R443	1-218-855-11	METAL CHIP	2.2K	0.50%	1/10W	R531	1-218-941-81	RES-CHIP	100	5%	1/16W
						R532	1-216-814-11	METAL CHIP	270	5%	1/10W
						R537	1-216-814-11	METAL CHIP	270	5%	1/10W



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R541	1-218-941-81	RES-CHIP	100	5%	1/16W	R629	1-218-990-81	SHORT CHIP			
R542	1-216-814-11	METAL CHIP	270	5%	1/10W	R630	1-218-990-81	SHORT CHIP			
R543	1-218-933-11	RES-CHIP	22	5%	1/16W	R631	1-218-990-81	SHORT CHIP			
R546	1-218-933-11	RES-CHIP	22	5%	1/16W	R632	1-218-990-81	SHORT CHIP			
R548	1-218-933-11	RES-CHIP	22	5%	1/16W	R633	1-218-990-81	SHORT CHIP			
R552	1-218-975-11	RES-CHIP	68K	5%	1/16W	R634	1-218-990-81	SHORT CHIP			
R553	1-218-975-11	RES-CHIP	68K	5%	1/16W	R637	1-216-814-11	METAL CHIP	270	5%	1/10W
R557	1-218-941-81	RES-CHIP	100	5%	1/16W	R638	1-216-814-11	METAL CHIP	270	5%	1/10W
R558	1-218-941-81	RES-CHIP	100	5%	1/16W	R639	1-216-814-11	METAL CHIP	270	5%	1/10W
R572	1-218-990-81	SHORT CHIP				R813	1-218-937-11	RES-CHIP	47	5%	1/16W
R573	1-218-990-81	SHORT CHIP				R815	1-218-937-11	RES-CHIP	47	5%	1/16W
R574	1-208-911-11	METAL CHIP	10K	0.50%	1/16W	R816	1-218-937-11	RES-CHIP	47	5%	1/16W
R575	1-218-941-81	RES-CHIP	100	5%	1/16W	R824	1-208-855-81	METAL CHIP	47	0.50%	1/16W
R578	1-218-937-11	RES-CHIP	47	5%	1/16W	R825	1-208-855-81	METAL CHIP	47	0.50%	1/16W
R579	1-218-937-11	RES-CHIP	47	5%	1/16W	R833	1-218-945-11	RES-CHIP	220	5%	1/16W
R581	1-218-941-81	RES-CHIP	100	5%	1/16W	R834	1-218-989-11	RES-CHIP	1M	5%	1/16W
R582	1-218-941-81	RES-CHIP	100	5%	1/16W	R835	1-218-990-81	SHORT CHIP			
R583	1-218-990-81	SHORT CHIP				R837	1-218-990-81	SHORT CHIP			
R584	1-218-990-81	SHORT CHIP				R838	1-218-990-81	SHORT CHIP			
R586	1-218-941-81	RES-CHIP	100	5%	1/16W	R839	1-218-990-81	SHORT CHIP			
R587	1-218-941-81	RES-CHIP	100	5%	1/16W	R842	1-218-990-81	SHORT CHIP			
R589	1-218-990-81	SHORT CHIP				R843	1-218-965-11	RES-CHIP	10K	5%	1/16W
R590	1-218-965-11	RES-CHIP	10K	5%	1/16W	R846	1-218-965-11	RES-CHIP	10K	5%	1/16W
R591	1-218-965-11	RES-CHIP	10K	5%	1/16W	R849	1-218-965-11	RES-CHIP	10K	5%	1/16W
R592	1-218-965-11	RES-CHIP	10K	5%	1/16W	R850	1-218-990-81	SHORT CHIP			
R593	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R853	1-218-941-81	RES-CHIP	100	5%	1/16W
R594	1-218-965-11	RES-CHIP	10K	5%	1/16W	R854	1-218-965-11	RES-CHIP	10K	5%	1/16W
R595	1-218-949-11	RES-CHIP	470	5%	1/16W	R855	1-218-953-11	RES-CHIP	1K	5%	1/16W
R596	1-218-949-11	RES-CHIP	470	5%	1/16W	R858	1-208-855-81	METAL CHIP	47	0.50%	1/16W
R597	1-216-864-11	SHORT CHIP				R859	1-208-855-81	METAL CHIP	47	0.50%	1/16W
R598	1-216-864-11	SHORT CHIP				R860	1-208-855-81	METAL CHIP	47	0.50%	1/16W
R599	1-216-864-11	SHORT CHIP				R861	1-208-855-81	METAL CHIP	47	0.50%	1/16W
R600	1-216-864-11	SHORT CHIP				R862	1-218-990-81	SHORT CHIP			
R601	1-218-989-11	RES-CHIP	1M	5%	1/16W	R863	1-218-990-81	SHORT CHIP			
R602	1-218-989-11	RES-CHIP	1M	5%	1/16W	R866	1-208-923-11	METAL CHIP	33K	0.50%	1/16W
R603	1-218-989-11	RES-CHIP	1M	5%	1/16W	R868	1-208-923-11	METAL CHIP	33K	0.50%	1/16W
R604	1-218-989-11	RES-CHIP	1M	5%	1/16W	R869	1-208-923-11	METAL CHIP	33K	0.50%	1/16W
R613	1-218-941-81	RES-CHIP	100	5%	1/16W	R870	1-208-923-11	METAL CHIP	33K	0.50%	1/16W
R614	1-218-941-81	RES-CHIP	100	5%	1/16W	R871	1-220-199-81	RES-CHIP	24K	5%	1/16W
R615	1-218-941-81	RES-CHIP	100	5%	1/16W	R872	1-208-923-11	METAL CHIP	33K	0.50%	1/16W
R616	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R873	1-208-923-11	METAL CHIP	33K	0.50%	1/16W
R617	1-216-864-11	SHORT CHIP				R874	1-208-923-11	METAL CHIP	33K	0.50%	1/16W
R618	1-216-864-11	SHORT CHIP				R875	1-208-923-11	METAL CHIP	33K	0.50%	1/16W
R627	1-211-990-11	METAL CHIP	75	0.50%	1/10W	R878	1-208-923-11	METAL CHIP	33K	0.50%	1/16W
R628	1-211-990-11	METAL CHIP	75	0.50%	1/10W	R879	1-208-923-11	METAL CHIP	33K	0.50%	1/16W




REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R880	1-208-923-11	METAL CHIP	33K	0.50%	1/16W	R944	1-208-927-11	METAL CHIP	47K	0.50%	1/16W
R881	1-208-923-11	METAL CHIP	33K	0.50%	1/16W	R945	1-208-927-11	METAL CHIP	47K	0.50%	1/16W
R882	1-208-923-11	METAL CHIP	33K	0.50%	1/16W	R946	1-218-978-11	RES-CHIP	120K	5%	1/16W
R883	1-208-923-11	METAL CHIP	33K	0.50%	1/16W	R947	1-218-978-11	RES-CHIP	120K	5%	1/16W
R884	1-208-923-11	METAL CHIP	33K	0.50%	1/16W	R948	1-218-977-11	RES-CHIP	100K	5%	1/16W
R885	1-208-923-11	METAL CHIP	33K	0.50%	1/16W	R949	1-218-965-11	RES-CHIP	10K	5%	1/16W
R886	1-208-905-11	METAL CHIP	5.6K	0.50%	1/16W	R950	1-218-965-11	RES-CHIP	10K	5%	1/16W
R887	1-208-905-11	METAL CHIP	5.6K	0.50%	1/16W	R951	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R888	1-218-973-11	RES-CHIP	47K	5%	1/16W	R952	1-216-295-91	SHORT CHIP			
R889	1-218-973-11	RES-CHIP	47K	5%	1/16W	R953	1-216-295-91	SHORT CHIP			
R892	1-218-965-11	RES-CHIP	10K	5%	1/16W	R954	1-216-295-91	SHORT CHIP			
R893	1-218-965-11	RES-CHIP	10K	5%	1/16W	R955	1-216-295-91	SHORT CHIP			
R894	1-218-973-11	RES-CHIP	47K	5%	1/16W	R956	1-216-813-11	METAL CHIP	220	5%	1/10W
R895	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W	R957	1-216-813-11	METAL CHIP	220	5%	1/10W
R898	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W	R958	1-218-965-11	RES-CHIP	10K	5%	1/16W
R899	1-208-711-11	METAL CHIP	15K	0.50%	1/16W	R959	1-218-977-11	RES-CHIP	100K	5%	1/16W
R900	1-208-697-11	METAL CHIP	3.9K	0.50%	1/16W	R960	1-218-977-11	RES-CHIP	100K	5%	1/16W
R901	1-208-697-11	METAL CHIP	3.9K	0.50%	1/16W	R961	1-218-973-11	RES-CHIP	47K	5%	1/16W
R903	1-218-973-11	RES-CHIP	47K	5%	1/16W	R962	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R904	1-208-711-11	METAL CHIP	15K	0.50%	1/16W	R969	1-216-813-11	METAL CHIP	220	5%	1/10W
R905	1-218-965-11	RES-CHIP	10K	5%	1/16W	R974	1-218-977-11	RES-CHIP	100K	5%	1/16W
R907	1-208-711-11	METAL CHIP	15K	0.50%	1/16W	R975	1-218-965-11	RES-CHIP	10K	5%	1/16W
R908	1-218-965-11	RES-CHIP	10K	5%	1/16W	R976	1-218-941-81	RES-CHIP	100	5%	1/16W
R909	1-208-703-11	METAL CHIP	6.8K	0.50%	1/16W	R977	1-218-953-11	RES-CHIP	1K	5%	1/16W
R910	1-208-703-11	METAL CHIP	6.8K	0.50%	1/16W	R979	1-218-965-11	RES-CHIP	10K	5%	1/16W
R911	1-208-711-11	METAL CHIP	15K	0.50%	1/16W	R980	1-218-941-81	RES-CHIP	100	5%	1/16W
R915	1-218-985-11	RES-CHIP	470K	5%	1/16W	R981	1-218-941-81	RES-CHIP	100	5%	1/16W
R916	1-218-985-11	RES-CHIP	470K	5%	1/16W	R982	1-218-965-11	RES-CHIP	10K	5%	1/16W
R918	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W	R986	1-216-813-11	METAL CHIP	220	5%	1/10W
R919	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W	R997	1-218-990-81	SHORT CHIP			
R920	1-218-965-11	RES-CHIP	10K	5%	1/16W	R998	1-218-990-81	SHORT CHIP			
R923	1-218-973-11	RES-CHIP	47K	5%	1/16W	R1202	1-218-941-81	RES-CHIP	100	5%	1/16W
R927	1-218-969-11	RES-CHIP	22K	5%	1/16W	R1203	1-218-941-81	RES-CHIP	100	5%	1/16W
R928	1-218-969-11	RES-CHIP	22K	5%	1/16W	R1207	1-218-965-11	RES-CHIP	10K	5%	1/16W
R930	1-218-973-11	RES-CHIP	47K	5%	1/16W	R1210	1-218-965-11	RES-CHIP	10K	5%	1/16W
R931	1-218-973-11	RES-CHIP	47K	5%	1/16W	R1211	1-218-977-11	RES-CHIP	100K	5%	1/16W
R932	1-218-977-11	RES-CHIP	100K	5%	1/16W	R1212	1-218-965-11	RES-CHIP	10K	5%	1/16W
R933	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R1213	1-218-965-11	RES-CHIP	10K	5%	1/16W
R935	1-208-935-11	METAL CHIP	100K	0.50%	1/16W	R1214	1-218-977-11	RES-CHIP	100K	5%	1/16W
R938	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W	R1215	1-218-965-11	RES-CHIP	10K	5%	1/16W
R939	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W	R1216	1-218-977-11	RES-CHIP	100K	5%	1/16W
R940	1-208-911-11	METAL CHIP	10K	0.50%	1/16W	R1217	1-218-937-11	RES-CHIP	47	5%	1/16W
R941	1-218-973-11	RES-CHIP	47K	5%	1/16W	R1219	1-218-990-81	SHORT CHIP			
R942	1-218-973-11	RES-CHIP	47K	5%	1/16W	R1220	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R943	1-208-911-11	METAL CHIP	10K	0.50%	1/16W	R1221	1-218-937-11	RES-CHIP	47	5%	1/16W




REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R1222	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R1294	1-218-941-81	RES-CHIP	100	5%	1/16W
R1223	1-218-937-11	RES-CHIP	47	5%	1/16W	R1295	1-218-941-81	RES-CHIP	100	5%	1/16W
R1225	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1296	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1226	1-218-990-81	SHORT CHIP				R1297	1-218-941-81	RES-CHIP	100	5%	1/16W
R1228	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1300	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1231	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1301	1-218-937-11	RES-CHIP	47	5%	1/16W
R1232	1-218-949-11	RES-CHIP	470	5%	1/16W	R1302	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1233	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1303	1-218-941-81	RES-CHIP	100	5%	1/16W
R1234	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1305	1-218-937-11	RES-CHIP	47	5%	1/16W
R1236	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1307	1-218-941-81	RES-CHIP	100	5%	1/16W
R1237	1-218-937-11	RES-CHIP	47	5%	1/16W	R1309	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1238	1-218-937-11	RES-CHIP	47	5%	1/16W	R1312	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1247	1-218-941-81	RES-CHIP	100	5%	1/16W	R1315	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1248	1-218-941-81	RES-CHIP	100	5%	1/16W	R1320	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1249	1-218-941-81	RES-CHIP	100	5%	1/16W	R1321	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R1257	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1322	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1258	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1325	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1259	1-218-977-11	RES-CHIP	100K	5%	1/16W	R1326	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1260	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1327	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1261	1-218-989-11	RES-CHIP	1M	5%	1/16W	R1328	1-218-941-81	RES-CHIP	100	5%	1/16W
R1263	1-218-977-11	RES-CHIP	100K	5%	1/16W	R1329	1-218-941-81	RES-CHIP	100	5%	1/16W
R1264	1-218-949-11	RES-CHIP	470	5%	1/16W	R1336	1-218-949-11	RES-CHIP	470	5%	1/16W
R1265	1-218-937-11	RES-CHIP	47	5%	1/16W	R1337	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1266	1-218-941-81	RES-CHIP	100	5%	1/16W	R1338	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1268	1-218-937-11	RES-CHIP	47	5%	1/16W	R1339	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1269	1-218-937-11	RES-CHIP	47	5%	1/16W	R1340	1-245-604-11	METAL CHIP	10M	5%	1/16W
R1270	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1342	1-218-981-91	RES-CHIP	220K	5%	1/16W
R1272	1-218-937-11	RES-CHIP	47	5%	1/16W	R1344	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1273	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1346	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1274	1-218-937-11	RES-CHIP	47	5%	1/16W	R1352	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1275	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1353	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R1278	1-218-937-11	RES-CHIP	47	5%	1/16W	R1360	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1280	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1362	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1281	1-218-941-81	RES-CHIP	100	5%	1/16W	R1363	1-218-990-81	SHORT CHIP			
R1283	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1364	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1284	1-218-941-81	RES-CHIP	100	5%	1/16W	R1451	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R1285	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1452	1-218-990-81	SHORT CHIP			
R1286	1-218-937-11	RES-CHIP	47	5%	1/16W	R1453	1-208-869-11	METAL CHIP	180	0.50%	1/16W
R1287	1-218-941-81	RES-CHIP	100	5%	1/16W	R1454	1-208-671-11	METAL CHIP	330	0.50%	1/16W
R1288	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1455	1-218-990-81	SHORT CHIP			
R1289	1-218-941-81	RES-CHIP	100	5%	1/16W	R1456	1-208-677-11	METAL CHIP	560	0.50%	1/16W
R1290	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1458	1-208-911-11	METAL CHIP	10K	0.50%	1/16W
R1291	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1460	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W
R1292	1-218-941-81	RES-CHIP	100	5%	1/16W	R1461	1-218-990-81	SHORT CHIP			
R1293	1-218-941-81	RES-CHIP	100	5%	1/16W	R1462	1-218-990-81	SHORT CHIP			



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES	
R1463	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	RB1202	1-234-944-21	RES, NETWORK 47	(1005X4)	
R1464	1-208-647-11	METAL CHIP	33	0.50%	1/16W	RB1203	1-234-378-11	RES, NETWORK 10K	(1005X4)	
R1469	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB1204	1-234-378-11	RES, NETWORK 10K	(1005X4)	
R1601	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB1205	1-234-945-21	RES, NETWORK 100	(1005X4)	
R1602	1-218-990-81	SHORT CHIP				RB1206	1-234-945-21	RES, NETWORK 100	(1005X4)	
R1604	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	RB1207	1-234-945-21	RES, NETWORK 100	(1005X4)	
R1606	1-216-864-11	SHORT CHIP				RB1208	1-234-945-21	RES, NETWORK 100	(1005X4)	
R1607	1-218-990-81	SHORT CHIP				RB1209	1-234-945-21	RES, NETWORK 100	(1005X4)	
R1608	1-218-990-81	SHORT CHIP				RB1210	1-234-945-21	RES, NETWORK 100	(1005X4)	
R1609	1-218-990-81	SHORT CHIP				RB1211	1-234-945-21	RES, NETWORK 100	(1005X4)	
R1610	1-208-697-11	METAL CHIP	3.9K	0.50%	1/16W	RB1212	1-234-375-21	RES, NETWORK 1K	(1005X4)	
R1611	1-208-675-11	METAL CHIP	470	0.50%	1/16W	RB1213	1-234-375-21	RES, NETWORK 1K	(1005X4)	
R1612	1-208-885-11	METAL CHIP	820	0.50%	1/16W	RB1214	1-234-375-21	RES, NETWORK 1K	(1005X4)	
R1613	1-218-953-11	RES-CHIP	1K	5%	1/16W	RB1215	1-239-690-81	RESISTOR, NETWORK		2.2K
R1620	1-216-864-11	SHORT CHIP				RB1216	1-239-698-11	RESISTOR, NETWORK		10K
R1625	1-216-295-91	SHORT CHIP				TRANSFORMER				
R1626	1-218-965-11	RES-CHIP	10K	5%	1/16W	TB401	1-780-487-11	S TERMINAL BLOCK		
RESISTOR BRIDGE						TB404	1-821-026-11	OPTICAL OUT TERMINAL		
RB001	1-234-943-21	RES, NETWORK 22	(1005X4)			VARISTOR				
RB002	1-234-943-21	RES, NETWORK 22	(1005X4)			VD016	1-802-090-21	VARISTOR, CHIP		
RB003	1-234-943-21	RES, NETWORK 22	(1005X4)			VD017	1-802-090-21	VARISTOR, CHIP		
RB004	1-234-711-21	RES, CHIP NETWORK	22X8 (3816)			VD018	1-802-090-21	VARISTOR, CHIP		
RB005	1-239-666-81	RESISTOR, NETWORK 22				VD019	1-802-090-21	VARISTOR, CHIP		
RB401	1-246-204-21	RES, CHIP NETWORK	600X8 (3816)			VD020	1-802-090-21	VARISTOR, CHIP		
RB402	1-246-204-21	RES, CHIP NETWORK	600X8 (3816)			VD021	1-802-090-21	VARISTOR, CHIP		
RB403	1-246-204-21	RES, CHIP NETWORK	600X8 (3816)			VD022	1-802-090-21	VARISTOR, CHIP		
RB404	1-246-204-21	RES, CHIP NETWORK	600X8 (3816)			VD023	1-802-090-21	VARISTOR, CHIP		
RB405	1-246-204-21	RES, CHIP NETWORK	600X8 (3816)			VD024	1-802-090-21	VARISTOR, CHIP		
RB406	1-246-204-21	RES, CHIP NETWORK	600X8 (3816)			VD025	1-802-090-21	VARISTOR, CHIP		
RB407	1-246-204-21	RES, CHIP NETWORK	600X8 (3816)			VD026	1-802-090-21	VARISTOR, CHIP		
RB408	1-246-204-21	RES, CHIP NETWORK	600X8 (3816)			VD027	1-802-090-21	VARISTOR, CHIP		
RB409	1-246-204-21	RES, CHIP NETWORK	600X8 (3816)			VD028	1-802-090-21	VARISTOR, CHIP		
RB410	1-246-204-21	RES, CHIP NETWORK	600X8 (3816)			VD029	1-802-090-21	VARISTOR, CHIP		
RB801	1-239-698-11	RESISTOR, NETWORK 10K				VD030	1-802-090-21	VARISTOR, CHIP		
RB802	1-234-381-21	RES, NETWORK 100K	(1005X4)			VD031	1-802-090-21	VARISTOR, CHIP		
RB803	1-234-378-11	RES, NETWORK 10K	(1005X4)			VD032	1-802-090-21	VARISTOR, CHIP		
RB804	1-234-378-11	RES, NETWORK 10K	(1005X4)			VD033	1-802-090-21	VARISTOR, CHIP		
RB805	1-239-674-81	RESISTOR, NETWORK 100				VD440	1-802-090-21	VARISTOR, CHIP		
RB807	1-234-944-21	RES, NETWORK 47	(1005X4)			VD441	1-802-090-21	VARISTOR, CHIP		
RB808	1-239-698-11	RESISTOR, NETWORK 10K				VD442	1-802-090-21	VARISTOR, CHIP		
RB810	1-239-674-81	RESISTOR, NETWORK 100				VD443	1-802-090-21	VARISTOR, CHIP		
RB811	1-239-698-11	RESISTOR, NETWORK 10K				VD444	1-802-090-21	VARISTOR, CHIP		
RB1201	1-234-944-21	RES, NETWORK 47	(1005X4)			VD445	1-802-090-21	VARISTOR, CHIP		
						VD446	1-802-090-21	VARISTOR, CHIP		

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

AU **DF4** **DF5**

REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES	
VD447	1-802-090-21	VARISTOR, CHIP		<div>DF4</div> <div>DF5</div>				
VD448	1-802-090-21	VARISTOR, CHIP						
VD449	1-802-090-21	VARISTOR, CHIP						
VD450	1-802-090-21	VARISTOR, CHIP						
VD451	1-802-090-21	VARISTOR, CHIP						
VD452	1-802-090-21	VARISTOR, CHIP						
VD453	1-802-090-21	VARISTOR, CHIP						
VD454	1-802-090-21	VARISTOR, CHIP						
VD455	1-802-090-21	VARISTOR, CHIP						
VD456	1-802-090-21	VARISTOR, CHIP						
VD457	1-802-090-21	VARISTOR, CHIP		<div>A-1253-587-B</div> <div>A-1253-588-B</div> <div>The following are the components of the DF4 and the DF5 Boards.</div> <div>2-580-592-01</div> <div>2-580-592-01</div> <div>SCREW, +PSW M3X8</div> <div>SCREW, +PSW M3X8</div>				
VD458	1-802-090-21	VARISTOR, CHIP						
VD459	1-802-090-21	VARISTOR, CHIP						
VD460	1-802-090-21	VARISTOR, CHIP						
VD461	1-802-090-21	VARISTOR, CHIP						
VD462	1-802-090-21	VARISTOR, CHIP						
VD463	1-802-090-21	VARISTOR, CHIP						
VD464	1-802-090-21	VARISTOR, CHIP						
VD465	1-802-090-21	VARISTOR, CHIP						
VD466	1-802-090-21	VARISTOR, CHIP						
VD467	1-802-090-21	VARISTOR, CHIP		<div>CAPACITOR</div>				
VD468	1-802-090-21	VARISTOR, CHIP						
VD469	1-802-090-21	VARISTOR, CHIP						
VD1602	1-802-090-21	VARISTOR, CHIP						
<div>CRYSTAL</div>								
X401	1-813-124-21	VIBRATOR, CERAMIC		24.576MHZ				
X801	1-813-462-11	VIBRATOR, CRYSTAL						
X1201	1-813-999-11	VIBRATOR, CRYSTAL						
X1202	1-814-004-11	VIBRATOR, CRYSTAL						

NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

DF4 **DF5**

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C6701	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V	C6758	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C6702	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V	C6759	1-162-927-11	CERAMIC CHIP	100pF	5%	50V
C6703	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V	C6760	1-162-927-11	CERAMIC CHIP	100pF	5%	50V
C6706	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	C6761	1-107-882-91	ELECT	100μF	20%	16V
C6707	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	C6762	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C6709	1-112-740-91	CERAMIC	10pF	5%	3KV	C6763	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C6710	1-164-730-11	CERAMIC CHIP	0.0012μF	10%	50V	C6764	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
C6711	1-112-740-91	CERAMIC	10pF	5%	3KV	C6785	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C6712	1-164-730-11	CERAMIC CHIP	0.0012μF	10%	50V	C6794	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C6715	1-125-891-11	CERAMIC CHIP	0.47μF	10%	10V	C6795	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C6716	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	C6796	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
C6717	1-164-217-11	CERAMIC CHIP	150pF	5%	50V	⚠ C6797	1-112-744-61	MYLAR	1μF	10%	450V
C6718	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	⚠ C6798	1-112-744-61	MYLAR	1μF	10%	450V
C6719	1-162-962-11	CERAMIC CHIP	470pF	10%	50V	C6799	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C6720	1-112-740-91	CERAMIC	10pF	5%	3KV	CONNECTOR					
C6721	1-165-908-11	CERAMIC CHIP	1μF	10%	10V	⚠ * CN6400	1-793-660-11	PIN, CONNECTOR (PC BOARD)			
C6722	1-112-740-91	CERAMIC	10pF	5%	3KV	* CN6503	1-793-236-11	PIN, CONNECTOR (PC BOARD)	14P		
C6723	1-165-908-11	CERAMIC CHIP	1μF	10%	10V	* CN6504	1-779-944-21	PIN, CONNECTOR (PC BOARD)	4P		
C6724	1-127-804-91	CERAMIC CHIP	100pF	1%	50V	* CN6505	1-785-701-21	PIN, CONNECTOR (PC BOARD)			
C6725	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V	⚠ * CN6600	1-793-660-11	PIN, CONNECTOR (PC BOARD)			
C6726	1-127-573-11	CERAMIC CHIP	1μF	10%	16V	* CN6704	1-793-236-11	PIN, CONNECTOR (PC BOARD)	14P		
C6727	1-165-908-11	CERAMIC CHIP	1μF	10%	10V	* CN6707	1-779-944-21	PIN, CONNECTOR (PC BOARD)	4P		
C6729	1-107-882-91	ELECT	100μF	20%	16V	* CN6708	1-785-701-21	PIN, CONNECTOR (PC BOARD)			
C6730	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	DIODE					
C6732	1-100-591-91	CERAMIC CHIP	1μF	10%	25V	D6400	6-501-497-01	DIODE	S3L60F		
C6735	1-112-737-11	CERAMIC	27pF	5%	6.3KV	D6401	6-501-497-01	DIODE	S3L60F		
C6738	1-165-908-11	CERAMIC CHIP	1μF	10%	10V	D6402	6-501-818-01	DIODE	MA2J1130GLS0		
C6739	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	D6403	6-501-818-01	DIODE	MA2J1130GLS0		
C6740	1-107-882-91	ELECT	100μF	20%	16V	D6404	6-501-497-01	DIODE	S3L60F		
C6741	1-165-908-11	CERAMIC CHIP	1μF	10%	10V	D6405	6-501-497-01	DIODE	S3L60F		
C6742	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V	D6406	6-501-818-01	DIODE	MA2J1130GLS0		
C6743	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V	D6407	6-501-818-01	DIODE	MA2J1130GLS0		
C6744	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V	D6412	6-501-497-01	DIODE	S3L60F		
C6745	1-107-877-11	ELECT	1000μF	20%	10V	D6413	6-501-497-01	DIODE	S3L60F		
C6746	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V	D6414	6-501-497-01	DIODE	S3L60F		
C6747	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V	D6415	6-501-497-01	DIODE	S3L60F		
C6748	1-165-908-11	CERAMIC CHIP	1μF	10%	10V	D6420	8-719-083-57	DIODE	UDZSNPTE-173.6B		
C6749	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V	D6421	8-719-083-57	DIODE	UDZSNPTE-173.6B		
C6750	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	D6422	8-719-083-57	DIODE	UDZSNPTE-173.6B		
C6751	1-112-737-11	CERAMIC	27pF	5%	6.3KV	D6423	8-719-083-57	DIODE	UDZSNPTE-173.6B		
C6753	1-107-906-11	ELECT	10μF	20%	50V	D6500	6-501-817-01	DIODE	MA2J1110GLS0		
C6754	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V	D6501	6-501-817-01	DIODE	MA2J1110GLS0		
C6755	1-115-416-11	CERAMIC CHIP	0.001μF	5%	25V	D6502	8-719-062-51	DIODE	1PS226-115		
C6756	1-107-882-91	ELECT	100μF	20%	16V	D6503	8-719-062-51	DIODE	1PS226-115		
C6757	1-165-176-11	CERAMIC CHIP	0.047μF	10%	16V						

95

NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


DF4 **DF5**


REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
JR6720	1-216-864-11	SHORT CHIP		R6424	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
JR6721	1-216-864-11	SHORT CHIP		R6425	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
JR6722	1-216-296-11	SHORT CHIP		R6500	1-243-831-71	METAL OXIDE	12 5% 1W
JR6723	1-216-296-11	SHORT CHIP		R6501	1-243-831-71	METAL OXIDE	12 5% 1W
JR6724	1-216-296-11	SHORT CHIP		R6502	1-243-831-71	METAL OXIDE	12 5% 1W
COIL				R6503	1-243-831-71	METAL OXIDE	12 5% 1W
\triangle L6400	1-406-976-11	INDUCTOR	68 μ H	R6504	1-216-793-11	METAL CHIP	4.7 5% 1/10W
\triangle L6600	1-406-976-11	INDUCTOR	68 μ H	R6505	1-216-793-11	METAL CHIP	4.7 5% 1/10W
TRANSISTOR				R6506	1-216-793-11	METAL CHIP	4.7 5% 1/10W
Q6402	8-729-804-41	TRANSISTOR	2SB1122-S	R6507	1-216-793-11	METAL CHIP	4.7 5% 1/10W
Q6403	8-729-804-41	TRANSISTOR	2SB1122-S	R6508	1-216-793-11	METAL CHIP	4.7 5% 1/10W
Q6404	8-729-804-41	TRANSISTOR	2SB1122-S	R6509	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q6405	8-729-804-41	TRANSISTOR	2SB1122-S	R6510	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q6600	8-729-804-41	TRANSISTOR	2SB1122-S	R6511	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q6601	8-729-804-41	TRANSISTOR	2SB1122-S	R6512	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q6604	8-729-804-41	TRANSISTOR	2SB1122-S	R6514	1-216-864-11	SHORT CHIP	
Q6605	8-729-804-41	TRANSISTOR	2SB1122-S	R6519	1-216-864-11	SHORT CHIP	
Q6704	8-729-028-27	TRANSISTOR	2SK2009(TE85L)	R6520	1-216-864-11	SHORT CHIP	
Q6705	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF	R6521	1-216-864-11	SHORT CHIP	
Q6711	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF	R6522	1-216-864-11	SHORT CHIP	
Q6712	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF	R6600	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
Q6714	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF	R6601	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
RESISTOR				R6602	1-249-403-11	CARBON	68 5% 1/4W
R6400	1-249-403-11	CARBON	68 5% 1/4W	R6603	1-249-403-11	CARBON	68 5% 1/4W
R6401	1-216-793-11	METAL CHIP	4.7 5% 1/10W	R6604	1-216-793-11	METAL CHIP	4.7 5% 1/10W
R6402	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R6605	1-216-793-11	METAL CHIP	4.7 5% 1/10W
R6403	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6606	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6404	1-249-403-11	CARBON	68 5% 1/4W	R6607	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6405	1-216-793-11	METAL CHIP	4.7 5% 1/10W	R6610	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R6406	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R6611	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R6407	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6612	1-249-403-11	CARBON	68 5% 1/4W
R6408	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R6613	1-249-403-11	CARBON	68 5% 1/4W
R6409	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R6614	1-216-793-11	METAL CHIP	4.7 5% 1/10W
R6410	1-249-403-11	CARBON	68 5% 1/4W	R6615	1-216-793-11	METAL CHIP	4.7 5% 1/10W
R6411	1-249-403-11	CARBON	68 5% 1/4W	R6616	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6412	1-216-793-11	METAL CHIP	4.7 5% 1/10W	R6617	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6413	1-216-793-11	METAL CHIP	4.7 5% 1/10W	R6619	1-216-857-11	METAL CHIP	1M 5% 1/10W
R6414	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6624	1-216-857-11	METAL CHIP	1M 5% 1/10W
R6415	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6625	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R6420	1-216-857-11	METAL CHIP	1M 5% 1/10W	R6626	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R6421	1-216-857-11	METAL CHIP	1M 5% 1/10W	R6627	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R6422	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R6628	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R6423	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R6630	1-216-864-11	SHORT CHIP	
				R6632	1-216-864-11	SHORT CHIP	
				R6634	1-216-864-11	SHORT CHIP	

DF4

DF5

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R6636	1-216-864-11	SHORT CHIP				R6764	1-211-987-11	METAL CHIP	56	0.50%	1/10W
R6700	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6766	1-216-864-11	SHORT CHIP			
R6701	1-216-793-11	METAL CHIP	4.7	5%	1/10W						
R6702	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6769	1-216-864-11	SHORT CHIP			
R6703	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6770	1-218-863-11	METAL CHIP	4.7K	0.50%	1/10W
						R6771	1-218-871-11	METAL CHIP	10K	0.50%	1/10W
R6704	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6772	1-218-871-11	METAL CHIP	10K	0.50%	1/10W
R6705	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6773	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6706	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R6707	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6774	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6708	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6775	1-218-895-11	METAL CHIP	100K	0.50%	1/10W
						R6776	1-218-847-11	METAL CHIP	1K	0.50%	1/10W
R6710	1-243-831-71	METAL OXIDE	12	5%	1W	R6777	1-218-895-11	METAL CHIP	100K	0.50%	1/10W
R6711	1-243-831-71	METAL OXIDE	12	5%	1W	R6778	1-218-895-11	METAL CHIP	100K	0.50%	1/10W
R6712	1-243-831-71	METAL OXIDE	12	5%	1W						
R6713	1-243-831-71	METAL OXIDE	12	5%	1W	R6779	1-218-871-11	METAL CHIP	10K	0.50%	1/10W
R6714	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6780	1-216-864-11	SHORT CHIP			
						R6782	1-216-842-11	METAL CHIP	56K	5%	1/10W
R6715	1-216-835-11	METAL CHIP	15K	5%	1/10W	R6783	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6716	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6784	1-216-864-11	SHORT CHIP			
R6721	1-218-839-11	METAL CHIP	470	0.50%	1/10W						
R6722	1-218-897-11	METAL CHIP	120K	0.50%	1/10W	R6786	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R6723	1-218-871-11	METAL CHIP	10K	0.50%	1/10W	R6787	1-216-817-11	METAL CHIP	470	5%	1/10W
						R6788	1-216-864-11	SHORT CHIP			
R6724	1-216-864-11	SHORT CHIP				R6789	1-218-887-11	METAL CHIP	47K	0.50%	1/10W
R6725	1-218-891-11	METAL CHIP	68K	0.50%	1/10W	R6790	1-218-883-11	METAL CHIP	33K	0.50%	1/10W
R6727	1-218-887-11	METAL CHIP	47K	0.50%	1/10W						
R6729	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R6791	1-216-864-11	SHORT CHIP			
R6730	1-218-863-11	METAL CHIP	4.7K	0.50%	1/10W	R6792	1-216-837-11	METAL CHIP	22K	5%	1/10W
						R6793	1-218-871-11	METAL CHIP	10K	0.50%	1/10W
R6731	1-216-837-11	METAL CHIP	22K	5%	1/10W	R6794	1-218-871-11	METAL CHIP	10K	0.50%	1/10W
R6732	1-218-891-11	METAL CHIP	68K	0.50%	1/10W	R6795	1-216-841-11	METAL CHIP	47K	5%	1/10W
R6733	1-218-863-11	METAL CHIP	4.7K	0.50%	1/10W						
R6734	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6802	1-218-871-11	METAL CHIP	10K	0.50%	1/10W
R6736	1-218-885-11	METAL CHIP	39K	0.50%	1/10W	R6804	1-249-381-11	CARBON	1	5%	1/4W
						R6805	1-216-793-11	METAL CHIP	4.7	5%	1/10W
R6737	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6808	1-218-446-11	METAL CHIP	1	5%	1/10W
R6742	1-216-830-11	METAL CHIP	5.6K	5%	1/10W	R6809	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R6750	1-218-895-11	METAL CHIP	100K	0.50%	1/10W						
R6751	1-218-871-11	METAL CHIP	10K	0.50%	1/10W	R6810	1-218-875-11	METAL CHIP	15K	0.50%	1/10W
R6752	1-211-983-11	METAL CHIP	39	0.50%	1/10W	R6811	1-218-871-11	METAL CHIP	10K	0.50%	1/10W
						R6820	1-216-864-11	SHORT CHIP			
R6754	1-211-987-11	METAL CHIP	56	0.50%	1/10W	R6909	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6756	1-211-987-11	METAL CHIP	56	0.50%	1/10W	R6911	1-216-845-11	METAL CHIP	100K	5%	1/10W
R6757	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R6758	1-211-987-11	METAL CHIP	56	0.50%	1/10W	R6913	1-216-864-11	SHORT CHIP			
R6760	1-218-847-11	METAL CHIP	1K	0.50%	1/10W	R6914	1-218-847-11	METAL CHIP	1K	0.50%	1/10W
						R6915	1-216-861-11	METAL CHIP	2.2M	5%	1/10W
R6761	1-218-853-11	METAL CHIP	1.8K	0.50%	1/10W						
R6762	1-211-987-11	METAL CHIP	56	0.50%	1/10W						
R6763	1-218-863-11	METAL CHIP	4.7K	0.50%	1/10W						

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: The components identified by a red outline and a  mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced.
See Appendix A: Encryption Key Components in the back of this manual.

FB1
DF4 **DF5**

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
TRANSFORMER						C2129	1-164-874-11	CERAMIC CHIP	100pF	5%	50V
△	T6400	8-597-059-00	TRANSFORMER, HIGH-VOLTAGE			C2130	1-164-874-11	CERAMIC CHIP	100pF	5%	50V
△	T6401	8-597-059-00	TRANSFORMER, HIGH-VOLTAGE			C2131	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
△	T6600	8-597-059-00	TRANSFORMER, HIGH-VOLTAGE			C2132	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
△	T6601	8-597-059-00	TRANSFORMER, HIGH-VOLTAGE			C2133	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
GROUND TERMINAL BOARD						C2300	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
TK6500	1-537-770-21	TERMINAL BOARD, GROUND			C2301	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	
TK6501	1-537-770-21	TERMINAL BOARD, GROUND			C2305	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	
TK6700	1-537-770-21	TERMINAL BOARD, GROUND			C2306	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	
TK6701	1-537-770-21	TERMINAL BOARD, GROUND			C2309	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	
FB1						C2310	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
🔒	A-1362-640-A		FB1 BOARD, COMPLETE.			C2313	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
	(SN 8,000,001 to 8,099,999 and SN 8,500,001 to 8,599,999 Only)					C2315	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
🔒	A-1418-997-A		FB1 BOARD, COMPLETE			C2316	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
	(SN 8,100,001 to 8,499,999 and SN 8,600,001 and up Only)					C2317	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
CAPACITOR						C2318	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2100	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2319	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2101	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2320	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2102	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2321	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2103	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C2322	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2104	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2323	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2105	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2324	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2106	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C2325	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2107	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C2326	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2108	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C2327	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2109	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C2328	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2111	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C2329	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2113	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C2330	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2114	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C2331	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2115	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C2332	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2116	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C2333	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2117	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C2334	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2120	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C2335	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2121	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C2336	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2122	1-164-849-11	CERAMIC CHIP	9pF	0.50pF	50V	C2337	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2123	1-164-850-11	CERAMIC CHIP	10pF	0.50pF	50V	C2338	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2124	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C2339	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2125	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C2340	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2126	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C2341	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2127	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C2342	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2128	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C2343	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
						C2344	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C2345	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
						C2346	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C2347	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C2348	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C2531	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C2349	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C2532	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C2350	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C2533	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C2351	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C2536	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C2352	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C2537	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C2353	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C2538	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2354	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C2539	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2355	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C2540	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2356	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C2541	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2357	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C2542	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2358	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C2543	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2359	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C2544	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2360	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C2545	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2361	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C2546	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2362	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C2547	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2364	1-112-046-11	CERAMIC CHIP	4.7μF	10%	6.3V	C2548	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2365	1-112-046-11	CERAMIC CHIP	4.7μF	10%	6.3V	C2549	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2500	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2550	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2501	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2551	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2502	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C2552	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2503	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C2553	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2504	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2554	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2505	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2555	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2506	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2556	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2507	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2557	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2508	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2558	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2509	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2559	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2510	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2560	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2511	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2561	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2512	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2562	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C2513	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2563	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C2514	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2564	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C2515	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2565	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C2516	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2566	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C2518	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2567	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C2519	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2570	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2521	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C2571	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C2523	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2574	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2524	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2575	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2525	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2576	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2526	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2577	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2527	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C2700	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2528	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C2701	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2529	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C2702	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2530	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C2703	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C2704	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C2935	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2705	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C2938	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2706	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C2939	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2707	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C2940	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2710	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C2941	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2711	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C3300	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2712	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C3301	1-162-963-11	CERAMIC CHIP	680pF	10%	50V
C2713	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C3302	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C2714	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C3303	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V
C2715	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C3306	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2716	1-112-046-11	CERAMIC CHIP	4.7μF	10%	6.3V	C3307	1-112-786-11	ELECT CHIP	330μF	20%	4V
C2719	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C3310	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C2720	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C3311	1-100-769-21	ELECT CHIP	470μF	20%	16V
C2721	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C3312	1-114-343-11	ELECT CHIP	100μF	20%	6.3V
C2724	1-112-046-11	CERAMIC CHIP	4.7μF	10%	6.3V	C3317	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C2731	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C3319	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V
C2732	1-112-781-11	CERAMIC CHIP	1μF	10%	10V	C3321	1-114-331-11	CERAMIC CHIP	4.7μF	10%	10V
C2733	1-112-781-11	CERAMIC CHIP	1μF	10%	10V	C3323	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2734	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C3327	1-112-064-11	CERAMIC CHIP	2.2μF	10%	10V
C2736	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C3330	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C2737	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C3332	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2738	1-114-343-11	ELECT CHIP	100μF	20%	6.3V	C3334	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V
C2739	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C3337	1-112-786-11	ELECT CHIP	330μF	20%	4V
C2740	1-112-064-11	CERAMIC CHIP	2.2μF	10%	10V	C3338	1-112-781-11	CERAMIC CHIP	1μF	10%	10V
C2900	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C3339	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2902	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C3343	1-100-912-11	CERAMIC CHIP	1μF	10%	25V
C2904	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C3345	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C2907	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C3347	1-100-912-11	CERAMIC CHIP	1μF	10%	25V
C2908	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C3348	1-114-331-11	CERAMIC CHIP	4.7μF	10%	10V
C2909	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C3349	1-114-331-11	CERAMIC CHIP	4.7μF	10%	10V
C2910	1-164-852-11	CERAMIC CHIP	12pF	5%	50V	C3350	1-112-064-11	CERAMIC CHIP	2.2μF	10%	10V
C2912	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4000	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2913	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4001	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2915	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4002	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C2916	1-164-852-11	CERAMIC CHIP	12pF	5%	50V	C4003	1-112-066-11	CERAMIC CHIP	10μF	10%	10V
C2918	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4005	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2919	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4006	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C2922	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4011	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2923	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4013	1-112-066-11	CERAMIC CHIP	10μF	10%	10V
C2924	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4100	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V
C2925	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4101	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V
C2927	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4103	1-164-868-11	CERAMIC CHIP	56pF	5%	50V
C2929	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4105	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V
C2931	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4108	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V
C2933	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4110	1-112-775-11	CERAMIC CHIP	0.0022μF	10%	50V

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C4112	1-164-245-11	CERAMIC CHIP	0.015μF	10%	25V	C4175	1-112-774-11	CERAMIC CHIP	470pF	10%	50V
C4114	1-100-912-11	CERAMIC CHIP	1μF	10%	25V	C4176	1-112-774-11	CERAMIC CHIP	470pF	10%	50V
C4116	1-100-912-11	CERAMIC CHIP	1μF	10%	25V	C4177	1-112-774-11	CERAMIC CHIP	470pF	10%	50V
C4118	1-100-912-11	CERAMIC CHIP	1μF	10%	25V	C4178	1-112-774-11	CERAMIC CHIP	470pF	10%	50V
C4120	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C4195	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4121	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C4196	1-112-066-11	CERAMIC CHIP	10μF	10%	10V
C4122	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C4197	1-112-066-11	CERAMIC CHIP	10μF	10%	10V
C4123	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C4302	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4128	1-164-245-11	CERAMIC CHIP	0.015μF	10%	25V	C4303	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4129	1-112-066-11	CERAMIC CHIP	10μF	10%	10V	C4304	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4130	1-112-775-11	CERAMIC CHIP	0.0022μF	10%	50V	C4306	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4131	1-112-066-11	CERAMIC CHIP	10μF	10%	10V	C4309	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4136	1-164-868-11	CERAMIC CHIP	56pF	5%	50V	C4310	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4138	1-112-774-11	CERAMIC CHIP	470pF	10%	50V	C4311	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4139	1-112-774-11	CERAMIC CHIP	470pF	10%	50V	C4313	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4142	1-112-774-11	CERAMIC CHIP	470pF	10%	50V	C4314	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4143	1-112-774-11	CERAMIC CHIP	470pF	10%	50V	C4315	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4146	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4316	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4147	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4317	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C4149	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V	C4341	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4150	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4342	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4151	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4343	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4152	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V	C4344	1-112-066-11	CERAMIC CHIP	10μF	10%	10V
C4153	1-164-868-11	CERAMIC CHIP	56pF	5%	50V	C4353	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4154	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V	C4354	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4155	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4355	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4156	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V	C4356	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4157	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4357	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4158	1-112-775-11	CERAMIC CHIP	0.0022μF	10%	50V	C4358	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4159	1-164-245-11	CERAMIC CHIP	0.015μF	10%	25V	C4359	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4160	1-100-912-11	CERAMIC CHIP	1μF	10%	25V	C4360	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4161	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C4500	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4162	1-100-912-11	CERAMIC CHIP	1μF	10%	25V	C4501	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4163	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4502	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4164	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4503	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4165	1-100-912-11	CERAMIC CHIP	1μF	10%	25V	C4504	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4166	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C4505	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4167	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C4506	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4168	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C4507	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4169	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C4508	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4170	1-164-245-11	CERAMIC CHIP	0.015μF	10%	25V	C4509	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4171	1-112-066-11	CERAMIC CHIP	10μF	10%	10V	C4510	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4172	1-112-775-11	CERAMIC CHIP	0.0022μF	10%	50V	C4511	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4173	1-112-066-11	CERAMIC CHIP	10μF	10%	10V	C4512	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4174	1-164-868-11	CERAMIC CHIP	56pF	5%	50V	C4513	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C4514	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4561	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4515	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4562	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4516	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4563	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4517	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4564	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4518	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4565	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4519	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4566	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4520	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4567	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4521	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C4569	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4522	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4576	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4523	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4603	1-135-366-11	ELECT CHIP	100μF	20%	16V
C4524	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4604	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4525	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4607	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4526	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4608	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4527	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4609	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4528	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4610	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4529	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4611	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C4530	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4612	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4531	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4613	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C4532	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4614	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4533	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4615	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4534	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4617	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4535	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4618	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C4536	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4619	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4537	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4620	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4538	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4621	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4539	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4622	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4540	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4623	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4541	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4624	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4542	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4626	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4543	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4627	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4544	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4628	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4545	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4629	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C4546	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4631	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4547	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4632	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4548	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4633	1-164-172-11	CERAMIC CHIP	0.0056μF	10%	25V
C4549	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4634	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4550	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4636	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4551	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4639	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4552	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4640	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4553	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4641	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4554	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4642	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4555	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4643	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4556	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4644	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4559	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4645	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4560	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4646	1-100-756-91	CERAMIC CHIP	0.047μF		50V

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C4647	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4744	1-112-781-11	CERAMIC CHIP	1μF	10%	10V
C4649	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4745	1-112-066-11	CERAMIC CHIP	10μF	10%	10V
C4650	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4746	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4702	1-135-366-11	ELECT CHIP	100μF	20%	16V	C4747	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4703	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C4748	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4704	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C4750	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4705	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C4751	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4706	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4752	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4707	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4753	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4708	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4759	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4709	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4760	1-135-366-11	ELECT CHIP	100μF	20%	16V
C4710	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4763	1-135-366-11	ELECT CHIP	100μF	20%	16V
C4711	1-135-366-11	ELECT CHIP	100μF	20%	16V	C4764	1-135-366-11	ELECT CHIP	100μF	20%	16V
C4712	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4765	1-135-366-11	ELECT CHIP	100μF	20%	16V
C4713	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4770	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4714	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4771	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4715	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4772	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4716	1-135-366-11	ELECT CHIP	100μF	20%	16V	C4801	1-112-786-11	ELECT CHIP	330μF	20%	4V
C4717	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4803	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4718	1-135-366-11	ELECT CHIP	100μF	20%	16V	C4805	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4719	1-135-366-11	ELECT CHIP	100μF	20%	16V	C4806	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4720	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4808	1-164-874-11	CERAMIC CHIP	100pF	5%	50V
C4721	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4809	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4722	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4810	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4723	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4811	1-164-874-11	CERAMIC CHIP	100pF	5%	50V
C4724	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4812	1-164-874-11	CERAMIC CHIP	100pF	5%	50V
C4725	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4813	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4726	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4814	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4727	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4815	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4728	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4816	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4729	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4817	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4730	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4819	1-164-874-11	CERAMIC CHIP	100pF	5%	50V
C4731	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4820	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4732	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4821	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4733	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4822	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4734	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4823	1-164-874-11	CERAMIC CHIP	100pF	5%	50V
C4735	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4824	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4736	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4825	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4737	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4826	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4738	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4827	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4739	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4828	1-164-874-11	CERAMIC CHIP	100pF	5%	50V
C4740	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4829	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4741	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4830	1-164-874-11	CERAMIC CHIP	100pF	5%	50V
C4742	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4831	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4743	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4832	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C4833	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4890	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4834	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4891	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4835	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4896	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4836	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C4900	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4838	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C4901	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4839	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4902	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4840	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C4903	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4841	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4904	1-135-366-11	ELECT CHIP	100μF	20%	16V
C4842	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C4905	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4843	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4906	1-135-366-11	ELECT CHIP	100μF	20%	16V
C4844	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4907	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4845	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4908	1-135-366-11	ELECT CHIP	100μF	20%	16V
C4846	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4909	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4847	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4910	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4848	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4911	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4849	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4912	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C4850	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4913	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4851	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4914	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4855	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C4915	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C4859	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4916	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4860	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4917	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4862	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4918	1-135-366-11	ELECT CHIP	100μF	20%	16V
C4863	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4919	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4864	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4920	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4865	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4921	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4870	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4922	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4871	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4923	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4872	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4924	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4873	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4925	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4874	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4926	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4875	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4927	1-135-366-11	ELECT CHIP	100μF	20%	16V
C4876	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4928	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4877	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4929	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4878	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4930	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4879	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4931	1-135-366-11	ELECT CHIP	100μF	20%	16V
C4880	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4932	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4881	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4933	1-135-366-11	ELECT CHIP	100μF	20%	16V
C4882	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4934	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4883	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4935	1-135-366-11	ELECT CHIP	100μF	20%	16V
C4884	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4937	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4885	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4938	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4886	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4939	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4887	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4940	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4888	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4941	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4889	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4942	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C4943	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C5003	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4944	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5004	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4945	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5005	1-112-066-11	CERAMIC CHIP	10μF	10%	10V
C4946	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C5006	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4947	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5010	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4948	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5011	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4949	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5012	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4950	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5013	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4951	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5014	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4952	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5015	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4953	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5016	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C4954	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5017	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C4955	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5018	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C4956	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5019	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C4957	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5020	1-135-366-11	ELECT CHIP	100μF	20%	16V
C4958	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5021	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C4959	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5024	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4960	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5025	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4961	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5026	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4962	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5105	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4963	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5106	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4964	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5107	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4966	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5108	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4967	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5200	1-112-779-11	CERAMIC CHIP	0.047μF	10%	25V
C4969	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5201	1-164-882-11	CERAMIC CHIP	220pF	5%	16V
C4970	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5202	1-115-412-11	CERAMIC CHIP	680pF	5%	25V
C4971	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5203	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V
C4972	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5204	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V
C4973	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5206	1-112-781-11	CERAMIC CHIP	1μF	10%	10V
C4974	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C5208	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4976	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5209	1-112-786-11	ELECT CHIP	330μF	20%	4V
C4977	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5212	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C4978	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C5213	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C4979	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C5214	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C4980	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C5215	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C4981	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C5216	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C4982	1-164-850-11	CERAMIC CHIP	10pF	0.50pF	50V	C5217	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C4983	1-164-852-11	CERAMIC CHIP	12pF	5%	50V	C5218	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C4984	1-112-781-11	CERAMIC CHIP	1μF	10%	10V	C5219	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C4985	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5220	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C4986	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C5221	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C4988	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5222	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C4989	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C5223	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C5001	1-135-366-11	ELECT CHIP	100μF	20%	16V	C5224	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C5002	1-135-366-11	ELECT CHIP	100μF	20%	16V	C5225	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C5226	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5271	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C5227	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5272	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C5228	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5273	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C5229	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5274	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C5230	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5275	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C5231	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5276	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C5232	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5277	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C5233	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C5278	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C5234	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5279	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C5235	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5280	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C5236	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5281	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C5237	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5282	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C5238	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5283	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C5239	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C5284	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C5240	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5285	1-114-130-11	CERAMIC CHIP	1μF		6.3V
C5241	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C5286	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C5242	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C5287	1-112-066-11	CERAMIC CHIP	10μF	10%	10V
C5243	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5288	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C5244	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5289	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V
C5245	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C5290	1-114-343-11	ELECT CHIP	100μF	20%	6.3V
C5246	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5291	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C5247	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5400	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C5248	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C5401	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C5249	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5402	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C5250	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5403	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C5251	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C5404	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C5252	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5409	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C5253	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5410	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C5254	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C5414	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C5255	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5415	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C5256	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5416	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C5257	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C5417	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C5258	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C5418	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C5259	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5419	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C5260	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5420	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C5261	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5421	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C5262	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C5422	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C5263	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5423	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C5264	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5424	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C5265	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5425	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C5266	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C5426	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C5267	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5427	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C5268	1-114-130-11	CERAMIC CHIP	1μF		6.3V	C5428	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C5269	1-114-367-11	CERAMIC CHIP	0.1μF	20%	6.3V	C5429	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C5270	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C5430	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C5431	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C5608	1-164-874-11	CERAMIC CHIP	100pF	5%	50V
C5432	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C5609	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C5433	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C5613	1-164-874-11	CERAMIC CHIP	100pF	5%	50V
C5434	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C5614	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C5435	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C5619	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C5436	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C5900	1-135-366-11	ELECT CHIP	100μF	20%	16V
C5437	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C5902	1-112-781-11	CERAMIC CHIP	1μF	10%	10V
C5438	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C5903	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C5439	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	CONNECTOR					
C5440	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V						
C5441	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V						
C5442	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V						
C5443	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V						
C5444	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	* CN2101	1-819-474-11	HEADER ASSEMBLY FOR PWB			
C5445	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	CN2701	1-819-390-51	FFC/FPC CONNECTOR (ZIF) 49P			
						CN2702	1-821-180-11	MEMORY STICK CONNECTOR			
						* CN2900	1-820-581-11	HEADER ASSEMBLY FOR PWB			
						CN4001	1-821-378-11	BOARD TO BOARD CONNECTOR			
C5446	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	CN4002	1-821-377-11	BOARD TO BOARD CONNECTOR			
C5447	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	CN4300	1-818-737-11	HDMI CONNECTOR			
C5448	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	CN4301	1-818-737-11	HDMI CONNECTOR			
C5449	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	* CN4302	1-821-186-11	HEADER ASSEMBLY FOR PWB			
C5450	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	CN4600	1-821-013-11	D SUB CONNECTOR			
C5451	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	* CN5600	1-819-797-11	HEADER ASSEMBLY FOR PWB			
C5454	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	* CN5601	1-821-034-11	HEADER ASSEMBLY FOR PWB			
C5455	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	DIODE					
C5458	1-112-779-11	CERAMIC CHIP	0.047μF	10%	25V						
C5460	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V						
C5464	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V						
C5468	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V						
C5470	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	D2300	8-719-053-08	DIODE	SML-310DTT86		
C5478	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	D2700	6-500-019-01	DIODE	MM3Z3V9ST1		
C5479	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	D3300	6-501-657-01	DIODE	MA24D5000BS0		
C5480	1-112-046-11	CERAMIC CHIP	4.7μF	10%	6.3V	D4100	8-719-081-67	DIODE	M1FM3		
C5481	1-112-776-11	CERAMIC CHIP	0.0047μF	10%	50V	D4101	8-719-081-67	DIODE	M1FM3		
C5482	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	D4104	6-501-528-01	DIODE	1SMA5915BT3G		
C5483	1-112-064-11	CERAMIC CHIP	2.2μF	10%	10V	D4105	6-501-528-01	DIODE	1SMA5915BT3G		
C5484	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	D4108	8-719-081-67	DIODE	M1FM3		
C5485	1-114-331-11	CERAMIC CHIP	4.7μF	10%	10V	D4109	8-719-081-67	DIODE	M1FM3		
C5486	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	D4110	6-501-528-01	DIODE	1SMA5915BT3G		
C5487	1-112-046-11	CERAMIC CHIP	4.7μF	10%	6.3V	D4111	6-501-528-01	DIODE	1SMA5915BT3G		
C5489	1-114-343-11	ELECT CHIP	100μF	20%	6.3V	* D4300	6-501-732-01	DIODE	MAZ8056G0LS0		
C5600	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	* D4301	6-501-732-01	DIODE	MAZ8056G0LS0		
C5601	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	D4302	1-802-245-11	ESD SUPPRESSOR			
C5604	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	D4303	1-802-245-11	ESD SUPPRESSOR			
C5605	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	D4304	1-802-245-11	ESD SUPPRESSOR			
C5606	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	D4305	1-802-245-11	ESD SUPPRESSOR			
C5607	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	D4306	1-802-245-11	ESD SUPPRESSOR			
						D4307	1-802-245-11	ESD SUPPRESSOR			
						D4308	1-802-245-11	ESD SUPPRESSOR			

108

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
FB4507	1-400-499-21	FERRITE	0μH	FB5604	1-400-580-21	FERRITE	0μH
FB4508	1-400-499-21	FERRITE	0μH	FB5605	1-400-580-21	FERRITE	0μH
FB4509	1-400-499-21	FERRITE	0μH	FB5606	1-400-580-21	FERRITE	0μH
FB4600	1-400-382-11	FERRITE	0μH	FB5607	1-400-580-21	FERRITE	0μH
FB4601	1-400-382-11	FERRITE	0μH	FB5608	1-400-499-21	FERRITE	0μH
FB4603	1-400-382-11	FERRITE	0μH	FB5609	1-400-499-21	FERRITE	0μH
FB4604	1-400-382-11	FERRITE	0μH	FB5613	1-400-499-21	FERRITE	0μH
FB4605	1-400-382-11	FERRITE	0μH	FB5614	1-400-499-21	FERRITE	0μH
FB4606	1-469-100-21	FERRITE	0μH	FB5622	1-400-499-21	FERRITE	0μH
FB4607	1-469-100-21	FERRITE	0μH	FB5623	1-400-499-21	FERRITE	0μH
FB4608	1-469-100-21	FERRITE	0μH	FB5626	1-400-499-21	FERRITE	0μH
FB4700	1-400-382-11	FERRITE	0μH	FB5901	1-400-499-21	FERRITE	0μH
FB4702	1-400-461-21	FERRITE	0μH				
FB4804	1-400-382-11	FERRITE	0μH				
FB4805	1-400-382-11	FERRITE	0μH				
FB4806	1-400-382-11	FERRITE	0μH				
FB4808	1-400-461-21	FERRITE	0μH				
FB4809	1-400-461-21	FERRITE	0μH				
FB4900	1-400-499-21	FERRITE	0μH				
FB4901	1-400-499-21	FERRITE	0μH				
FB4902	1-400-499-21	FERRITE	0μH				
FB4903	1-400-580-21	FERRITE	0μH				
FB4904	1-400-499-21	FERRITE	0μH				
FB4905	1-400-499-21	FERRITE	0μH				
FB4906	1-400-499-21	FERRITE	0μH				
FB4907	1-400-499-21	FERRITE	0μH				
FB4908	1-400-499-21	FERRITE	0μH				
FB4909	1-400-499-21	FERRITE	0μH				
FB4910	1-400-499-21	FERRITE	0μH				
FB4911	1-400-499-21	FERRITE	0μH				
FB4912	1-400-499-21	FERRITE	0μH				
FB4913	1-400-499-21	FERRITE	0μH				
FB4914	1-400-499-21	FERRITE	0μH				
FB4915	1-400-499-21	FERRITE	0μH				
FB4916	1-400-499-21	FERRITE	0μH				
FB4917	1-400-580-21	FERRITE	0μH				
FB5130	1-400-461-21	FERRITE	0μH				
FB5131	1-400-461-21	FERRITE	0μH				
FB5132	1-400-461-21	FERRITE	0μH				
FB5400	1-400-461-21	FERRITE	0μH				
FB5401	1-400-461-21	FERRITE	0μH				
FB5402	1-400-461-21	FERRITE	0μH				
FB5404	1-400-461-21	FERRITE	0μH				
FB5602	1-400-580-21	FERRITE	0μH				
FB5603	1-400-580-21	FERRITE	0μH				

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
IC4103	6-710-080-01	IC	MM3292FNRE	COIL			
IC4104	6-708-603-01	IC	PQ070XNA1ZPH	L2900	1-457-223-11	INDUCTOR	0μH
IC4105	8-753-272-40	IC	CXA3738N-T4	L3300	1-481-246-11	INDUCTOR	2.2μH
IC4300	6-704-600-01	IC	M24C02-WMN6T(B)	L3301	1-481-257-11	INDUCTOR	4.7μH
IC4301	6-704-600-01	IC	M24C02-WMN6T(B)	L3304	1-481-246-11	INDUCTOR	2.2μH
				L4100	1-424-918-21	INDUCTOR	10μH
IC4305	8-759-680-47	IC	TC7MB3253FK(EL)				
IC4313	8-753-282-08	IC	CXB1444R-T6	L4101	1-457-247-21	INDUCTOR	4.7μH
IC4315	6-711-332-01	IC	TC7SG17FU(TE87R,F)	L4104	1-424-922-21	INDUCTOR	10μH
IC4601	6-707-739-01	IC	MM1661JTRE	L4105	1-456-787-21	INDUCTOR	10μH
IC4602	6-711-220-01	IC	THC7981-17	L4600	1-469-555-21	INDUCTOR	10μH
				L4700	1-469-549-21	INDUCTOR	1μH
IC4603	6-709-703-01	IC	MM3141JNRE				
IC4604	6-704-600-01	IC	M24C02-WMN6T(B)	L4701	1-469-549-21	INDUCTOR	1μH
IC4700	8-753-252-69	IC	CXD3815Q	L4702	1-469-549-21	INDUCTOR	1μH
IC4701	6-702-436-01	IC	AD8061ARTZ-REEL7	L4703	1-469-549-21	INDUCTOR	1μH
IC4800	8-753-271-21	IC	CXD3816GB	L4704	1-469-555-21	INDUCTOR	10μH
				L4900	1-469-555-21	INDUCTOR	10μH
IC4803	6-700-441-01	IC	SN74ALVCH374PWR				
IC4804	6-702-982-01	IC	TC7SA00FU(TE85R)	L4901	1-469-555-21	INDUCTOR	10μH
IC4805	8-759-592-48	IC	TC7SZ32FU(TE85R)	L4902	1-469-555-21	INDUCTOR	10μH
IC4806	8-759-592-43	IC	TC7SZ02FU(TE85R)	L4906	1-469-549-21	INDUCTOR	1μH
IC4807	6-709-435-01	IC	IS42S32200C1-6TL-TR	L4907	1-469-555-21	INDUCTOR	10μH
				L5200	1-481-246-11	INDUCTOR	2.2μH
IC4808	6-709-435-01	IC	IS42S32200C1-6TL-TR				
IC4809	8-759-651-59	IC	SN74CBTLV3245APWR	L5600	1-456-583-11	INDUCTOR	0μH
IC4901	6-711-289-01	IC	IDT6V40006APGGI	L5601	1-456-583-11	INDUCTOR	0μH
IC4903	6-702-436-01	IC	AD8061ARTZ-REEL7	L5602	1-456-583-11	INDUCTOR	0μH
IC5101	6-705-032-01	IC	TC74VCX162827FT	L5603	1-456-583-11	INDUCTOR	0μH
				L5604	1-456-583-11	INDUCTOR	0μH
IC5102	6-703-181-01	IC	TC74VCX74FT(EL)				
IC5103	6-703-238-01	IC	TC7WZ34FK(TE85R)	L5605	1-456-583-11	INDUCTOR	0μH
IC5104	8-759-829-30	IC	CY2305SXC-1HT	L5606	1-456-583-11	INDUCTOR	0μH
IC5200	6-710-949-01	IC	SN0608006PWR	L5607	1-456-583-11	INDUCTOR	0μH
IC5201	6-711-261-01	IC	HYB18TC256160AF-3S	L5608	1-456-583-11	INDUCTOR	0μH
				L5609	1-456-583-11	INDUCTOR	0μH
IC5203	6-711-261-01	IC	HYB18TC256160AF-3S				
IC5204	6-706-478-01	IC	TC7SET08FU(T5RSQJF)	L5610	1-456-583-11	INDUCTOR	0μH
IC5400	6-707-897-01	IC	EDS6416AHTA-75-E	L5611	1-456-583-11	INDUCTOR	0μH
IC5401	6-708-219-01	IC	MB91305PMC-G-BNDE1	L5900	1-469-549-21	INDUCTOR	1μH
IC5402	6-807-833-01	IC	S29JL032H70TFI010-FIX2-U101				
				IC LINK			
IC5403	6-704-566-01	IC	R3112N291A-TR-FA	PS3300	1-576-925-11	IC LINK	3.15A 0V
IC5405	6-701-185-01	IC	MC74VHC1G125DFT1	PS3302	1-576-925-11	IC LINK	3.15A 0V
IC5408	6-707-864-01	IC	TC74VHC123AFT(EKJ)				
IC5409	6-708-360-01	IC	NJU7040F				
IC5411	8-759-680-48	IC	TC7WH157FK(TE85R)	TRANSISTOR			
				Q2100	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF
IC5600	8-759-596-29	IC	SN74LV4066APWR	Q2101	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF
IC5603	6-706-487-01	IC	TC7SH08FU(T5RSOYJF)	Q2102	8-729-015-76	TRANSISTOR	UN5211
				Q2103	8-729-015-76	TRANSISTOR	UN5211
				Q2104	8-729-015-76	TRANSISTOR	UN5211

111

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R2230	1-218-977-11	RES-CHIP	100K	5%	1/16W	R2735	1-218-990-81	SHORT CHIP			
R2231	1-208-687-11	METAL CHIP	1.5K	0.50%	1/16W	R2761	1-218-949-11	RES-CHIP	470	5%	1/16W
R2232	1-208-687-11	METAL CHIP	1.5K	0.50%	1/16W						
R2233	1-218-933-11	RES-CHIP	22	5%	1/16W	R2769	1-218-933-11	RES-CHIP	22	5%	1/16W
R2300	1-218-947-11	RES-CHIP	330	5%	1/16W	R2786	1-218-937-11	RES-CHIP	47	5%	1/16W
						R2793	1-218-937-11	RES-CHIP	47	5%	1/16W
R2305	1-218-977-11	RES-CHIP	100K	5%	1/16W	R2805	1-218-933-11	RES-CHIP	22	5%	1/16W
R2307	1-218-977-11	RES-CHIP	100K	5%	1/16W	R2819	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2308	1-218-965-11	RES-CHIP	10K	5%	1/16W						
R2311	1-218-977-11	RES-CHIP	100K	5%	1/16W	R2821	1-218-937-11	RES-CHIP	47	5%	1/16W
R2315	1-218-977-11	RES-CHIP	100K	5%	1/16W	R2823	1-218-937-11	RES-CHIP	47	5%	1/16W
						R2824	1-218-937-11	RES-CHIP	47	5%	1/16W
R2316	1-218-977-11	RES-CHIP	100K	5%	1/16W	R2825	1-218-937-11	RES-CHIP	47	5%	1/16W
R2349	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2829	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2350	1-218-989-11	RES-CHIP	1M	5%	1/16W						
R2352	1-218-953-11	RES-CHIP	1K	5%	1/16W	R2831	1-218-989-11	RES-CHIP	1M	5%	1/16W
R2367	1-218-990-81	SHORT CHIP				R2832	1-211-989-11	METAL CHIP	68	0.50%	1/10W
						R2833	1-211-989-11	METAL CHIP	68	0.50%	1/10W
R2369	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2834	1-211-992-11	METAL CHIP	91	0.50%	1/10W
R2371	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2835	1-211-992-11	METAL CHIP	91	0.50%	1/10W
R2372	1-218-961-11	RES-CHIP	4.7K	5%	1/16W						
R2373	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2836	1-208-635-11	METAL CHIP	10	0.50%	1/16W
R2374	1-218-990-81	SHORT CHIP				R2847	1-208-635-11	METAL CHIP	10	0.50%	1/16W
						R2850	1-218-933-11	RES-CHIP	22	5%	1/16W
R2503	1-218-935-11	RES-CHIP	33	5%	1/16W	R2852	1-216-864-11	SHORT CHIP			
R2504	1-208-663-11	METAL CHIP	150	0.50%	1/16W	R2900	1-218-945-11	RES-CHIP	220	5%	1/16W
R2505	1-208-663-11	METAL CHIP	150	0.50%	1/16W						
R2508	1-218-933-11	RES-CHIP	22	5%	1/16W	R2914	1-218-937-11	RES-CHIP	47	5%	1/16W
R2509	1-218-933-11	RES-CHIP	22	5%	1/16W	R2915	1-218-937-11	RES-CHIP	47	5%	1/16W
						R2916	1-218-937-11	RES-CHIP	47	5%	1/16W
R2510	1-218-933-11	RES-CHIP	22	5%	1/16W	R2930	1-218-941-81	RES-CHIP	100	5%	1/16W
R2511	1-218-933-11	RES-CHIP	22	5%	1/16W	R2941	1-208-911-11	METAL CHIP	10K	0.50%	1/16W
R2512	1-218-933-11	RES-CHIP	22	5%	1/16W						
R2513	1-218-933-11	RES-CHIP	22	5%	1/16W	R2942	1-208-935-11	METAL CHIP	100K	0.50%	1/16W
R2514	1-218-933-11	RES-CHIP	22	5%	1/16W	R2952	1-220-884-81	METAL CHIP	39	0.50%	1/16W
						R2953	1-208-675-11	METAL CHIP	470	0.50%	1/16W
R2519	1-218-943-11	RES-CHIP	150	5%	1/16W	R2954	1-208-675-11	METAL CHIP	470	0.50%	1/16W
R2520	1-218-943-11	RES-CHIP	150	5%	1/16W	R2955	1-220-884-81	METAL CHIP	39	0.50%	1/16W
R2704	1-218-935-11	RES-CHIP	33	5%	1/16W						
R2705	1-218-990-81	SHORT CHIP				R2956	1-208-711-11	METAL CHIP	15K	0.50%	1/16W
R2706	1-218-990-81	SHORT CHIP				R2957	1-208-711-11	METAL CHIP	15K	0.50%	1/16W
						R2961	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2707	1-218-990-81	SHORT CHIP				R2966	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2708	1-218-990-81	SHORT CHIP				R3304	1-218-953-11	RES-CHIP	1K	5%	1/16W
R2721	1-218-990-81	SHORT CHIP									
R2722	1-218-990-81	SHORT CHIP				R3305	1-208-711-11	METAL CHIP	15K	0.50%	1/16W
R2723	1-218-990-81	SHORT CHIP				R3309	1-218-965-11	RES-CHIP	10K	5%	1/16W
						R3310	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2729	1-208-883-81	METAL CHIP	680	0.50%	1/16W	R3311	1-216-864-11	SHORT CHIP			
R2731	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R3323	1-218-990-81	SHORT CHIP			
R2732	1-208-687-11	METAL CHIP	1.5K	0.50%	1/16W						



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R3324	1-218-990-81	SHORT CHIP				R4041	1-218-990-81	SHORT CHIP			
R3325	1-208-677-11	METAL CHIP	560	0.50%	1/16W	R4042	1-218-990-81	SHORT CHIP			
R3326	1-208-923-11	METAL CHIP	33K	0.50%	1/16W						
R3331	1-208-911-11	METAL CHIP	10K	0.50%	1/16W	R4043	1-218-990-81	SHORT CHIP			
R3333	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4044	1-218-990-81	SHORT CHIP			
						R4045	1-218-990-81	SHORT CHIP			
R3334	1-216-791-11	METAL CHIP	3.3	5%	1/10W	R4046	1-218-990-81	SHORT CHIP			
R3335	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W	R4047	1-218-990-81	SHORT CHIP			
R3337	1-208-911-11	METAL CHIP	10K	0.50%	1/16W						
R3338	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4048	1-218-990-81	SHORT CHIP			
R3339	1-208-677-11	METAL CHIP	560	0.50%	1/16W	R4049	1-218-990-81	SHORT CHIP			
						R4050	1-218-990-81	SHORT CHIP			
R3341	1-218-990-81	SHORT CHIP				R4051	1-218-990-81	SHORT CHIP			
R3342	1-218-990-81	SHORT CHIP				R4052	1-218-990-81	SHORT CHIP			
R3343	1-208-695-11	METAL CHIP	3.3K	0.50%	1/16W						
R3344	1-218-953-11	RES-CHIP	1K	5%	1/16W	R4053	1-218-990-81	SHORT CHIP			
R3346	1-218-941-11	RES-CHIP	100	5%	1/16W	R4054	1-218-990-81	SHORT CHIP			
						R4055	1-218-990-81	SHORT CHIP			
R3351	1-218-990-81	SHORT CHIP				R4056	1-218-990-81	SHORT CHIP			
R3354	1-208-643-11	METAL CHIP	22	0.50%	1/16W	R4057	1-218-990-81	SHORT CHIP			
R3355	1-208-675-11	METAL CHIP	470	0.50%	1/16W						
R3356	1-208-894-81	METAL CHIP	2K	0.50%	1/16W	R4058	1-218-990-81	SHORT CHIP			
R3359	1-218-990-81	SHORT CHIP				R4059	1-218-990-81	SHORT CHIP			
						R4060	1-218-990-81	SHORT CHIP			
R3360	1-208-893-11	METAL CHIP	1.8K	0.50%	1/16W	R4064	1-218-990-81	SHORT CHIP			
R3361	1-208-894-81	METAL CHIP	2K	0.50%	1/16W	R4065	1-218-990-81	SHORT CHIP			
R3365	1-218-990-81	SHORT CHIP									
R4000	1-218-990-81	SHORT CHIP				R4068	1-218-990-81	SHORT CHIP			
R4001	1-218-990-81	SHORT CHIP				R4069	1-218-990-81	SHORT CHIP			
						R4070	1-218-990-81	SHORT CHIP			
R4004	1-218-990-81	SHORT CHIP				R4071	1-218-990-81	SHORT CHIP			
R4005	1-218-990-81	SHORT CHIP				R4072	1-218-990-81	SHORT CHIP			
R4014	1-216-864-11	SHORT CHIP									
R4021	1-218-990-81	SHORT CHIP				R4073	1-218-990-81	SHORT CHIP			
R4024	1-218-990-81	SHORT CHIP				R4074	1-218-990-81	SHORT CHIP			
						R4075	1-218-990-81	SHORT CHIP			
R4025	1-218-990-81	SHORT CHIP				R4076	1-218-990-81	SHORT CHIP			
R4026	1-218-990-81	SHORT CHIP				R4078	1-218-990-81	SHORT CHIP			
R4028	1-218-990-81	SHORT CHIP									
R4030	1-218-990-81	SHORT CHIP				R4079	1-218-990-81	SHORT CHIP			
R4031	1-218-990-81	SHORT CHIP				R4080	1-218-990-81	SHORT CHIP			
						R4081	1-218-990-81	SHORT CHIP			
R4032	1-218-990-81	SHORT CHIP				R4083	1-218-990-81	SHORT CHIP			
R4033	1-218-990-81	SHORT CHIP				R4090	1-218-990-81	SHORT CHIP			
R4034	1-218-990-81	SHORT CHIP									
R4035	1-218-990-81	SHORT CHIP				R4091	1-218-990-81	SHORT CHIP			
R4037	1-218-990-81	SHORT CHIP				R4092	1-218-990-81	SHORT CHIP			
						R4093	1-218-990-81	SHORT CHIP			
R4038	1-218-990-81	SHORT CHIP				R4094	1-218-990-81	SHORT CHIP			
R4039	1-218-990-81	SHORT CHIP				R4095	1-218-990-81	SHORT CHIP			
R4040	1-218-990-81	SHORT CHIP									

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R4096	1-218-990-81	SHORT CHIP				R4177	1-218-929-11	RES-CHIP	10	5%	1/16W
R4097	1-218-990-81	SHORT CHIP				R4178	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4098	1-218-990-81	SHORT CHIP				R4179	1-218-929-11	RES-CHIP	10	5%	1/16W
R4099	1-218-990-81	SHORT CHIP				R4184	1-208-715-11	METAL CHIP	22K	0.50%	1/16W
R4100	1-208-711-11	METAL CHIP	15K	0.50%	1/16W	R4185	1-218-990-81	SHORT CHIP			
R4102	1-218-990-81	SHORT CHIP				R4186	1-218-990-81	SHORT CHIP			
R4103	1-218-990-81	SHORT CHIP				R4187	1-208-943-11	METAL CHIP	220K	0.50%	1/16W
R4104	1-208-943-11	METAL CHIP	220K	0.50%	1/16W	R4188	1-208-943-11	METAL CHIP	220K	0.50%	1/16W
R4105	1-208-943-11	METAL CHIP	220K	0.50%	1/16W	R4189	1-208-711-11	METAL CHIP	15K	0.50%	1/16W
R4106	1-218-990-81	SHORT CHIP				R4201	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4111	1-218-929-11	RES-CHIP	10	5%	1/16W	R4202	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4112	1-208-703-11	METAL CHIP	6.8K	0.50%	1/16W	R4206	1-216-864-11	SHORT CHIP			
R4115	1-218-929-11	RES-CHIP	10	5%	1/16W	R4207	1-216-864-11	SHORT CHIP			
R4116	1-218-990-81	SHORT CHIP				R4208	1-216-864-11	SHORT CHIP			
R4117	1-218-990-81	SHORT CHIP				R4300	1-218-990-81	SHORT CHIP			
R4119	1-218-929-11	RES-CHIP	10	5%	1/16W	R4301	1-218-990-81	SHORT CHIP			
R4120	1-218-990-81	SHORT CHIP				R4302	1-218-990-81	SHORT CHIP			
R4121	1-218-990-81	SHORT CHIP				R4303	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W
R4122	1-208-909-11	METAL CHIP	8.2K	0.50%	1/16W	R4304	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W
R4124	1-218-929-11	RES-CHIP	10	5%	1/16W	R4306	1-218-990-81	SHORT CHIP			
R4127	1-218-990-81	SHORT CHIP				R4307	1-218-990-81	SHORT CHIP			
R4128	1-218-929-11	RES-CHIP	10	5%	1/16W	R4308	1-218-990-81	SHORT CHIP			
R4129	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4309	1-218-990-81	SHORT CHIP			
R4130	1-218-929-11	RES-CHIP	10	5%	1/16W	R4310	1-218-990-81	SHORT CHIP			
R4131	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4311	1-218-990-81	SHORT CHIP			
R4138	1-218-990-81	SHORT CHIP				R4312	1-218-990-81	SHORT CHIP			
R4141	1-208-715-11	METAL CHIP	22K	0.50%	1/16W	R4313	1-218-990-81	SHORT CHIP			
R4144	1-218-990-81	SHORT CHIP				R4315	1-218-990-81	SHORT CHIP			
R4146	1-218-978-11	RES-CHIP	120K	5%	1/16W	R4316	1-218-929-11	RES-CHIP	10	5%	1/16W
R4147	1-218-978-11	RES-CHIP	120K	5%	1/16W	R4317	1-218-929-11	RES-CHIP	10	5%	1/16W
R4148	1-218-978-11	RES-CHIP	120K	5%	1/16W	R4318	1-208-683-11	METAL CHIP	1K	0.50%	1/16W
R4152	1-208-711-11	METAL CHIP	15K	0.50%	1/16W	R4319	1-208-683-11	METAL CHIP	1K	0.50%	1/16W
R4160	1-208-711-11	METAL CHIP	15K	0.50%	1/16W	R4320	1-218-990-81	SHORT CHIP			
R4161	1-218-990-81	SHORT CHIP				R4324	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4162	1-218-978-11	RES-CHIP	120K	5%	1/16W	R4329	1-218-990-81	SHORT CHIP			
R4163	1-208-929-81	METAL CHIP	56K	0.50%	1/16W	R4331	1-218-990-81	SHORT CHIP			
R4164	1-208-721-11	METAL CHIP	39K	0.50%	1/16W	R4332	1-208-889-11	METAL CHIP	1.2K	0.50%	1/16W
R4165	1-218-990-81	SHORT CHIP				R4333	1-208-869-11	METAL CHIP	180	0.50%	1/16W
R4166	1-208-715-11	METAL CHIP	22K	0.50%	1/16W	R4334	1-208-683-11	METAL CHIP	1K	0.50%	1/16W
R4169	1-218-990-81	SHORT CHIP				R4336	1-208-889-11	METAL CHIP	1.2K	0.50%	1/16W
R4171	1-218-990-81	SHORT CHIP				R4337	1-208-675-11	METAL CHIP	470	0.50%	1/16W
R4172	1-208-911-11	METAL CHIP	10K	0.50%	1/16W	R4338	1-208-675-11	METAL CHIP	470	0.50%	1/16W
R4173	1-208-675-11	METAL CHIP	470	0.50%	1/16W	R4339	1-218-990-81	SHORT CHIP			
R4174	1-218-990-81	SHORT CHIP				R4341	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W
R4175	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R4343	1-218-990-81	SHORT CHIP			

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R4345	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R4458	1-218-990-81	SHORT CHIP			
R4346	1-218-990-81	SHORT CHIP				R4462	1-218-941-81	RES-CHIP	100	5%	1/16W
R4347	1-218-990-81	SHORT CHIP				R4463	1-218-941-81	RES-CHIP	100	5%	1/16W
R4348	1-218-990-81	SHORT CHIP				R4467	1-218-990-81	SHORT CHIP			
R4349	1-218-990-81	SHORT CHIP				R4471	1-218-990-81	SHORT CHIP			
R4350	1-218-990-81	SHORT CHIP				R4498	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W
R4351	1-218-990-81	SHORT CHIP				R4499	1-218-989-11	RES-CHIP	1M	5%	1/16W
R4352	1-218-990-81	SHORT CHIP				R4500	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4353	1-218-990-81	SHORT CHIP				R4502	1-218-990-81	SHORT CHIP			
R4354	1-218-990-81	SHORT CHIP				R4503	1-218-939-11	RES-CHIP	68	5%	1/16W
R4355	1-218-990-81	SHORT CHIP				R4505	1-218-937-11	RES-CHIP	47	5%	1/16W
R4356	1-218-990-81	SHORT CHIP				R4506	1-218-937-11	RES-CHIP	47	5%	1/16W
R4357	1-218-990-81	SHORT CHIP				R4508	1-218-937-11	RES-CHIP	47	5%	1/16W
R4358	1-218-990-81	SHORT CHIP				R4509	1-218-937-11	RES-CHIP	47	5%	1/16W
R4359	1-218-990-81	SHORT CHIP				R4511	1-218-937-11	RES-CHIP	47	5%	1/16W
R4360	1-218-990-81	SHORT CHIP				R4512	1-218-937-11	RES-CHIP	47	5%	1/16W
R4361	1-218-990-81	SHORT CHIP				R4513	1-218-937-11	RES-CHIP	47	5%	1/16W
R4362	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W	R4514	1-218-937-11	RES-CHIP	47	5%	1/16W
R4363	1-218-990-81	SHORT CHIP				R4515	1-218-933-11	RES-CHIP	22	5%	1/16W
R4364	1-218-990-81	SHORT CHIP				R4520	1-218-933-11	RES-CHIP	22	5%	1/16W
R4365	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W	R4523	1-218-990-81	SHORT CHIP			
R4366	1-218-953-11	RES-CHIP	1K	5%	1/16W	R4524	1-218-990-81	SHORT CHIP			
R4367	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4525	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4368	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4527	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4369	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4534	1-216-864-11	SHORT CHIP			
R4370	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4535	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4371	1-218-990-81	SHORT CHIP				R4536	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4372	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W	R4538	1-216-864-11	SHORT CHIP			
R4373	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R4539	1-218-990-81	SHORT CHIP			
R4374	1-218-990-81	SHORT CHIP				R4542	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4410	1-218-990-81	SHORT CHIP				R4545	1-218-939-11	RES-CHIP	68	5%	1/16W
R4411	1-218-990-81	SHORT CHIP				R4546	1-218-939-11	RES-CHIP	68	5%	1/16W
R4412	1-218-990-81	SHORT CHIP				R4547	1-218-935-11	RES-CHIP	33	5%	1/16W
R4413	1-218-990-81	SHORT CHIP				R4600	1-208-675-11	METAL CHIP	470	0.50%	1/16W
R4414	1-218-990-81	SHORT CHIP				R4601	1-208-675-11	METAL CHIP	470	0.50%	1/16W
R4415	1-218-990-81	SHORT CHIP				R4602	1-208-675-11	METAL CHIP	470	0.50%	1/16W
R4416	1-218-990-81	SHORT CHIP				R4606	1-208-677-11	METAL CHIP	560	0.50%	1/16W
R4417	1-218-990-81	SHORT CHIP				R4607	1-208-677-11	METAL CHIP	560	0.50%	1/16W
R4418	1-218-990-81	SHORT CHIP				R4608	1-208-677-11	METAL CHIP	560	0.50%	1/16W
R4419	1-218-990-81	SHORT CHIP				R4609	1-208-861-81	METAL CHIP	82	0.50%	1/16W
R4424	1-218-990-81	SHORT CHIP				R4610	1-208-861-81	METAL CHIP	82	0.50%	1/16W
R4428	1-208-923-11	METAL CHIP	33K	0.50%	1/16W	R4611	1-208-861-81	METAL CHIP	82	0.50%	1/16W
R4432	1-216-864-11	SHORT CHIP				R4618	1-218-835-11	METAL CHIP	330	0.50%	1/10W
R4433	1-208-939-11	METAL CHIP	150K	0.50%	1/16W	R4619	1-218-929-11	RES-CHIP	10	5%	1/16W
R4456	1-218-990-81	SHORT CHIP				R4620	1-218-835-11	METAL CHIP	330	0.50%	1/10W

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R4621	1-218-929-11	RES-CHIP	10	5%	1/16W	R4725	1-208-911-11	METAL CHIP	10K	0.50%	1/16W
R4622	1-218-835-11	METAL CHIP	330	0.50%	1/10W	R4726	1-208-683-11	METAL CHIP	1K	0.50%	1/16W
R4623	1-218-929-11	RES-CHIP	10	5%	1/16W	R4727	1-218-941-11	RES-CHIP	100	5%	1/16W
R4628	1-216-815-11	METAL CHIP	330	5%	1/10W	R4728	1-216-804-11	METAL CHIP	39	5%	1/10W
R4629	1-216-815-11	METAL CHIP	330	5%	1/10W	R4730	1-218-990-81	SHORT CHIP			
R4630	1-216-815-11	METAL CHIP	330	5%	1/10W	R4731	1-208-695-11	METAL CHIP	3.3K	0.50%	1/16W
R4631	1-216-815-11	METAL CHIP	330	5%	1/10W	R4732	1-218-990-81	SHORT CHIP			
R4636	1-218-990-81	SHORT CHIP				R4734	1-208-885-11	METAL CHIP	820	0.50%	1/16W
R4637	1-218-990-81	SHORT CHIP				R4735	1-218-990-81	SHORT CHIP			
R4640	1-218-990-81	SHORT CHIP				R4737	1-208-687-11	METAL CHIP	1.5K	0.50%	1/16W
R4641	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4738	1-208-687-11	METAL CHIP	1.5K	0.50%	1/16W
R4642	1-218-941-81	RES-CHIP	100	5%	1/16W	R4742	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R4644	1-218-990-81	SHORT CHIP				R4743	1-218-941-11	RES-CHIP	100	5%	1/16W
R4646	1-218-937-11	RES-CHIP	47	5%	1/16W	R4745	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R4648	1-218-937-11	RES-CHIP	47	5%	1/16W	R4746	1-218-941-11	RES-CHIP	100	5%	1/16W
R4649	1-218-937-11	RES-CHIP	47	5%	1/16W	R4747	1-218-835-11	METAL CHIP	330	0.50%	1/10W
R4652	1-218-937-11	RES-CHIP	47	5%	1/16W	R4748	1-216-864-11	SHORT CHIP			
R4654	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4749	1-218-835-11	METAL CHIP	330	0.50%	1/10W
R4660	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W	R4750	1-216-864-11	SHORT CHIP			
R4662	1-218-937-11	RES-CHIP	47	5%	1/16W	R4752	1-218-990-81	SHORT CHIP			
R4684	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W	R4753	1-218-990-81	SHORT CHIP			
R4685	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W	R4756	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4692	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W	R4762	1-208-677-11	METAL CHIP	560	0.50%	1/16W
R4693	1-218-941-11	RES-CHIP	100	5%	1/16W	R4763	1-218-990-81	SHORT CHIP			
R4696	1-218-933-11	RES-CHIP	22	5%	1/16W	R4764	1-208-703-11	METAL CHIP	6.8K	0.50%	1/16W
R4700	1-216-864-11	SHORT CHIP				R4766	1-208-643-11	METAL CHIP	22	0.50%	1/16W
R4701	1-208-695-11	METAL CHIP	3.3K	0.50%	1/16W	R4768	1-208-643-11	METAL CHIP	22	0.50%	1/16W
R4702	1-208-893-11	METAL CHIP	1.8K	0.50%	1/16W	R4770	1-208-643-11	METAL CHIP	22	0.50%	1/16W
R4703	1-208-889-11	METAL CHIP	1.2K	0.50%	1/16W	R4772	1-218-935-11	RES-CHIP	33	5%	1/16W
R4704	1-208-675-11	METAL CHIP	470	0.50%	1/16W	R4788	1-218-833-11	METAL CHIP	270	0.50%	1/10W
R4705	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W	R4789	1-211-979-11	METAL CHIP	27	0.50%	1/10W
R4706	1-208-871-81	METAL CHIP	220	0.50%	1/16W	R4790	1-218-833-11	METAL CHIP	270	0.50%	1/10W
R4707	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W	R4791	1-211-979-11	METAL CHIP	27	0.50%	1/10W
R4710	1-218-990-81	SHORT CHIP				R4792	1-218-833-11	METAL CHIP	270	0.50%	1/10W
R4712	1-218-937-11	RES-CHIP	47	5%	1/16W	R4793	1-211-979-11	METAL CHIP	27	0.50%	1/10W
R4714	1-216-815-11	METAL CHIP	330	5%	1/10W	R4798	1-216-815-11	METAL CHIP	330	5%	1/10W
R4716	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4799	1-216-815-11	METAL CHIP	330	5%	1/10W
R4717	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R4810	1-218-937-11	RES-CHIP	47	5%	1/16W
R4718	1-218-943-11	RES-CHIP	150	5%	1/16W	R4812	1-218-937-11	RES-CHIP	47	5%	1/16W
R4719	1-218-951-11	RES-CHIP	680	5%	1/16W	R4815	1-218-937-11	RES-CHIP	47	5%	1/16W
R4720	1-218-941-11	RES-CHIP	100	5%	1/16W	R4823	1-218-939-11	RES-CHIP	68	5%	1/16W
R4721	1-218-941-11	RES-CHIP	100	5%	1/16W	R4824	1-218-939-11	RES-CHIP	68	5%	1/16W
R4722	1-218-941-11	RES-CHIP	100	5%	1/16W	R4829	1-218-929-11	RES-CHIP	10	5%	1/16W
R4723	1-218-941-11	RES-CHIP	100	5%	1/16W	R4830	1-218-937-11	RES-CHIP	47	5%	1/16W
R4724	1-218-953-11	RES-CHIP	1K	5%	1/16W	R4831	1-218-937-11	RES-CHIP	47	5%	1/16W

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R4832	1-218-939-11	RES-CHIP	68	5%	1/16W	R4960	1-208-883-81	METAL CHIP	680	0.50%	1/16W
R4833	1-218-939-11	RES-CHIP	68	5%	1/16W	R4961	1-218-941-11	RES-CHIP	100	5%	1/16W
R4842	1-218-941-81	RES-CHIP	100	5%	1/16W	R4962	1-218-990-81	SHORT CHIP			
R4846	1-218-990-81	SHORT CHIP				R4967	1-218-990-81	SHORT CHIP			
R4848	1-218-935-11	RES-CHIP	33	5%	1/16W	R4968	1-218-990-81	SHORT CHIP			
R4849	1-218-937-11	RES-CHIP	47	5%	1/16W	R4969	1-218-941-11	RES-CHIP	100	5%	1/16W
R4851	1-218-935-11	RES-CHIP	33	5%	1/16W	R4970	1-218-941-11	RES-CHIP	100	5%	1/16W
R4852	1-218-935-11	RES-CHIP	33	5%	1/16W	R4974	1-208-683-11	METAL CHIP	1K	0.50%	1/16W
R4875	1-218-939-11	RES-CHIP	68	5%	1/16W	R4976	1-208-683-11	METAL CHIP	1K	0.50%	1/16W
R4879	1-218-939-11	RES-CHIP	68	5%	1/16W	R4978	1-218-990-81	SHORT CHIP			
R4880	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4990	1-208-911-11	METAL CHIP	10K	0.50%	1/16W
R4881	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4991	1-218-941-11	RES-CHIP	100	5%	1/16W
R4882	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4994	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4883	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4996	1-208-677-11	METAL CHIP	560	0.50%	1/16W
R4884	1-218-929-11	RES-CHIP	10	5%	1/16W	R4997	1-218-990-81	SHORT CHIP			
R4887	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5002	1-208-885-11	METAL CHIP	820	0.50%	1/16W
R4888	1-218-990-81	SHORT CHIP				R5005	1-208-703-11	METAL CHIP	6.8K	0.50%	1/16W
R4889	1-218-990-81	SHORT CHIP				R5006	1-218-935-11	RES-CHIP	33	5%	1/16W
R4890	1-216-864-11	SHORT CHIP				R5012	1-208-695-11	METAL CHIP	3.3K	0.50%	1/16W
R4891	1-216-864-11	SHORT CHIP				R5013	1-218-933-11	RES-CHIP	22	5%	1/16W
R4903	1-218-935-11	RES-CHIP	33	5%	1/16W	R5014	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4905	1-218-935-11	RES-CHIP	33	5%	1/16W	R5015	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4908	1-216-864-11	SHORT CHIP				R5016	1-218-990-81	SHORT CHIP			
R4915	1-208-687-11	METAL CHIP	1.5K	0.50%	1/16W	R5017	1-218-990-81	SHORT CHIP			
R4916	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R5018	1-218-933-11	RES-CHIP	22	5%	1/16W
R4918	1-218-935-11	RES-CHIP	33	5%	1/16W	R5019	1-218-935-11	RES-CHIP	33	5%	1/16W
R4919	1-218-935-11	RES-CHIP	33	5%	1/16W	R5020	1-216-864-11	SHORT CHIP			
R4921	1-208-687-11	METAL CHIP	1.5K	0.50%	1/16W	R5021	1-216-864-11	SHORT CHIP			
R4922	1-218-941-11	RES-CHIP	100	5%	1/16W	R5119	1-218-990-81	SHORT CHIP			
R4924	1-208-687-11	METAL CHIP	1.5K	0.50%	1/16W	R5120	1-218-990-81	SHORT CHIP			
R4925	1-218-941-11	RES-CHIP	100	5%	1/16W	R5121	1-218-990-81	SHORT CHIP			
R4927	1-208-871-81	METAL CHIP	220	0.50%	1/16W	R5122	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4929	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5123	1-218-937-11	RES-CHIP	47	5%	1/16W
R4933	1-208-687-11	METAL CHIP	1.5K	0.50%	1/16W	R5124	1-218-933-11	RES-CHIP	22	5%	1/16W
R4934	1-208-687-11	METAL CHIP	1.5K	0.50%	1/16W	R5125	1-218-933-11	RES-CHIP	22	5%	1/16W
R4935	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R5126	1-218-933-11	RES-CHIP	22	5%	1/16W
R4936	1-218-990-81	SHORT CHIP				R5128	1-218-937-11	RES-CHIP	47	5%	1/16W
R4938	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R5129	1-218-943-11	RES-CHIP	150	5%	1/16W
R4939	1-218-990-81	SHORT CHIP				R5130	1-218-929-11	RES-CHIP	10	5%	1/16W
R4941	1-218-947-11	RES-CHIP	330	5%	1/16W	R5131	1-218-933-11	RES-CHIP	22	5%	1/16W
R4942	1-218-935-11	RES-CHIP	33	5%	1/16W	R5132	1-218-929-11	RES-CHIP	10	5%	1/16W
R4943	1-218-990-81	SHORT CHIP				R5133	1-218-935-11	RES-CHIP	33	5%	1/16W
R4946	1-216-815-11	METAL CHIP	330	5%	1/10W	R5134	1-218-937-11	RES-CHIP	47	5%	1/16W
R4948	1-216-815-11	METAL CHIP	330	5%	1/10W	R5135	1-218-937-11	RES-CHIP	47	5%	1/16W
R4959	1-218-941-11	RES-CHIP	100	5%	1/16W	R5136	1-218-937-11	RES-CHIP	47	5%	1/16W

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R5137	1-218-937-11	RES-CHIP	47	5%	1/16W	R5414	1-218-990-81	SHORT CHIP			
R5138	1-218-937-11	RES-CHIP	47	5%	1/16W	R5417	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5141	1-218-933-11	RES-CHIP	22	5%	1/16W	R5418	1-208-911-11	METAL CHIP	10K	0.50%	1/16W
R5142	1-218-937-11	RES-CHIP	47	5%	1/16W	R5419	1-208-927-11	METAL CHIP	47K	0.50%	1/16W
R5143	1-218-937-11	RES-CHIP	47	5%	1/16W	R5420	1-208-935-11	METAL CHIP	100K	0.50%	1/16W
R5145	1-218-990-81	SHORT CHIP				R5422	1-208-911-11	METAL CHIP	10K	0.50%	1/16W
R5154	1-218-933-11	RES-CHIP	22	5%	1/16W	R5427	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5155	1-218-933-11	RES-CHIP	22	5%	1/16W	R5430	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5164	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5431	1-218-933-11	RES-CHIP	22	5%	1/16W
R5179	1-218-929-11	RES-CHIP	10	5%	1/16W	R5432	1-218-933-11	RES-CHIP	22	5%	1/16W
R5182	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5433	1-218-933-11	RES-CHIP	22	5%	1/16W
R5191	1-218-990-81	SHORT CHIP				R5434	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W
R5193	1-218-933-11	RES-CHIP	22	5%	1/16W	R5435	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W
R5194	1-218-933-11	RES-CHIP	22	5%	1/16W	R5436	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5195	1-218-990-81	SHORT CHIP				R5437	1-218-933-11	RES-CHIP	22	5%	1/16W
R5196	1-218-990-81	SHORT CHIP				R5438	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5197	1-218-933-11	RES-CHIP	22	5%	1/16W	R5440	1-218-941-81	RES-CHIP	100	5%	1/16W
R5198	1-218-937-11	RES-CHIP	47	5%	1/16W	R5441	1-218-937-11	RES-CHIP	47	5%	1/16W
R5199	1-218-937-11	RES-CHIP	47	5%	1/16W	R5444	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W
R5203	1-218-969-11	RES-CHIP	22K	5%	1/16W	R5445	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W
R5204	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5446	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5205	1-218-990-81	SHORT CHIP				R5449	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5207	1-218-990-81	SHORT CHIP				R5450	1-218-990-81	SHORT CHIP			
R5208	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5452	1-218-990-81	SHORT CHIP			
R5209	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R5453	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5210	1-218-990-81	SHORT CHIP				R5456	1-218-933-11	RES-CHIP	22	5%	1/16W
R5216	1-218-990-81	SHORT CHIP				R5466	1-218-939-11	RES-CHIP	68	5%	1/16W
R5217	1-218-943-11	RES-CHIP	150	5%	1/16W	R5467	1-218-933-11	RES-CHIP	22	5%	1/16W
R5218	1-218-990-81	SHORT CHIP				R5468	1-218-933-11	RES-CHIP	22	5%	1/16W
R5219	1-218-929-11	RES-CHIP	10	5%	1/16W	R5471	1-218-933-11	RES-CHIP	22	5%	1/16W
R5220	1-218-929-11	RES-CHIP	10	5%	1/16W	R5472	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5221	1-218-929-11	RES-CHIP	10	5%	1/16W	R5473	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5222	1-218-929-11	RES-CHIP	10	5%	1/16W	R5476	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5223	1-218-990-81	SHORT CHIP				R5478	1-218-990-81	SHORT CHIP			
R5224	1-218-990-81	SHORT CHIP				R5479	1-218-990-81	SHORT CHIP			
R5225	1-242-967-81	RES-CHIP	1	5%	1/16W	R5480	1-218-937-11	RES-CHIP	47	5%	1/16W
R5230	1-218-990-81	SHORT CHIP				R5481	1-218-937-11	RES-CHIP	47	5%	1/16W
R5405	1-218-939-11	RES-CHIP	68	5%	1/16W	R5482	1-218-990-81	SHORT CHIP			
R5406	1-218-939-11	RES-CHIP	68	5%	1/16W	R5483	1-218-933-11	RES-CHIP	22	5%	1/16W
R5407	1-218-937-11	RES-CHIP	47	5%	1/16W	R5484	1-218-933-11	RES-CHIP	22	5%	1/16W
R5408	1-218-937-11	RES-CHIP	47	5%	1/16W	R5485	1-218-933-11	RES-CHIP	22	5%	1/16W
R5409	1-218-939-11	RES-CHIP	68	5%	1/16W	R5487	1-218-933-11	RES-CHIP	22	5%	1/16W
R5410	1-218-937-11	RES-CHIP	47	5%	1/16W	R5492	1-218-990-81	SHORT CHIP			
R5411	1-218-933-11	RES-CHIP	22	5%	1/16W	R5494	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5412	1-218-933-11	RES-CHIP	22	5%	1/16W	R5495	1-218-965-11	RES-CHIP	10K	5%	1/16W

119

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
RB2318	1-234-378-11	RES, NETWORK 10K	(1005X4)	RB2917	1-234-943-21	RES, NETWORK 22	(1005X4)
RB2500	1-234-943-21	RES, NETWORK 22	(1005X4)	RB2918	1-234-880-21	RES, CHIP NETWORK	4.7KX8(3816)
RB2501	1-234-943-21	RES, NETWORK 22	(1005X4)	RB2919	1-234-799-21	RES, CHIP NETWORK	10KX8 (3816)
RB2502	1-234-943-21	RES, NETWORK 22	(1005X4)	RB2920	1-234-799-21	RES, CHIP NETWORK	10KX8 (3816)
RB2503	1-234-943-21	RES, NETWORK 22	(1005X4)	RB2922	1-234-944-21	RES, NETWORK 47	(1005X4)
RB2504	1-234-943-21	RES, NETWORK 22	(1005X4)	RB2923	1-234-943-21	RES, NETWORK 22	(1005X4)
RB2700	1-234-799-21	RES, CHIP NETWORK	10KX8 (3816)	RB2924	1-234-378-11	RES, NETWORK 10K	(1005X4)
RB2701	1-234-378-11	RES, NETWORK 10K	(1005X4)	RB3300	1-234-378-11	RES, NETWORK 10K	(1005X4)
RB2702	1-234-799-21	RES, CHIP NETWORK	10KX8 (3816)	RB3301	1-234-378-11	RES, NETWORK 10K	(1005X4)
RB2703	1-234-799-21	RES, CHIP NETWORK	10KX8 (3816)	RB3302	1-239-698-11	RESISTOR, NETWORK 10K	
RB2705	1-234-381-21	RES, NETWORK 100K	(1005X4)	RB4300	1-234-945-21	RES, NETWORK 100	(1005X4)
RB2706	1-234-883-21	RES, CHIP NETWORK	100KX8(3816)	RB4301	1-234-945-21	RES, NETWORK 100	(1005X4)
RB2707	1-234-883-21	RES, CHIP NETWORK	100KX8(3816)	RB4302	1-234-795-21	RES, NETWORK 0X4	(2010)
RB2708	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB4303	1-234-795-21	RES, NETWORK 0X4	(2010)
RB2709	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB4304	1-234-795-21	RES, NETWORK 0X4	(2010)
RB2712	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)	RB4314	1-234-795-21	RES, NETWORK 0X4	(2010)
RB2713	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)	RB4318	1-234-795-21	RES, NETWORK 0X4	(2010)
RB2714	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)	RB4503	1-234-892-21	RES, CHIP NETWORK	33X8 (3816)
RB2715	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)	RB4505	1-234-892-21	RES, CHIP NETWORK	33X8 (3816)
RB2717	1-234-944-21	RES, NETWORK 47	(1005X4)	RB4507	1-234-892-21	RES, CHIP NETWORK	33X8 (3816)
RB2718	1-234-799-21	RES, CHIP NETWORK	10KX8 (3816)	RB4512	1-234-892-21	RES, CHIP NETWORK	33X8 (3816)
RB2720	1-234-944-21	RES, NETWORK 47	(1005X4)	RB4514	1-234-892-21	RES, CHIP NETWORK	33X8 (3816)
RB2723	1-234-381-21	RES, NETWORK 100K	(1005X4)	RB4515	1-234-380-21	RES, NETWORK 47K	(1005X4)
RB2724	1-239-710-11	RESISTOR, NETWORK 100K		RB4516	1-234-380-21	RES, NETWORK 47K	(1005X4)
RB2727	1-239-670-81	RESISTOR, NETWORK 47		RB4517	1-234-795-21	RES, NETWORK 0X4	(2010)
RB2728	1-234-944-21	RES, NETWORK 47	(1005X4)	RB4518	1-234-377-21	RES, NETWORK 4.7K	(1005X4)
RB2729	1-234-702-11	RES, NETWORK 68	(1005X4)	RB4604	1-234-944-21	RES, NETWORK 47	(1005X4)
RB2730	1-239-670-81	RESISTOR, NETWORK 47		RB4605	1-234-944-21	RES, NETWORK 47	(1005X4)
RB2732	1-239-670-81	RESISTOR, NETWORK 47		RB4608	1-234-944-21	RES, NETWORK 47	(1005X4)
RB2735	1-234-381-21	RES, NETWORK 100K	(1005X4)	RB4609	1-234-795-21	RES, NETWORK 0X4	(2010)
RB2736	1-234-943-21	RES, NETWORK 22	(1005X4)	RB4610	1-234-944-21	RES, NETWORK 47	(1005X4)
RB2737	1-234-381-21	RES, NETWORK 100K	(1005X4)	RB4611	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)
RB2902	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB4612	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)
RB2903	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB4613	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)
RB2904	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB4614	1-246-204-21	RES, CHIP NETWORK	600X8 (3816)
RB2905	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB4615	1-246-204-21	RES, CHIP NETWORK	600X8 (3816)
RB2906	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB4616	1-246-204-21	RES, CHIP NETWORK	600X8 (3816)
RB2907	1-234-944-21	RES, NETWORK 47	(1005X4)	RB4617	1-234-944-21	RES, NETWORK 47	(1005X4)
RB2908	1-234-377-21	RES, NETWORK 4.7K	(1005X4)	RB4618	1-234-378-11	RES, NETWORK 10K	(1005X4)
RB2911	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB4619	1-234-944-21	RES, NETWORK 47	(1005X4)
RB2912	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB4700	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)
RB2913	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB4701	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)
RB2914	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB4709	1-234-892-21	RES, CHIP NETWORK	33X8 (3816)
RB2915	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB4710	1-234-944-21	RES, NETWORK 47	(1005X4)
RB2916	1-234-799-21	RES, CHIP NETWORK	10KX8 (3816)	RB4711	1-234-943-21	RES, NETWORK 22	(1005X4)

FB1

REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
RB4712	1-242-963-21	RES, NETWORK 33	(1005X4)	RB5144	1-234-378-11	RES, NETWORK 10K	(1005X4)
RB4800	1-234-711-21	RES, CHIP NETWORK	22X8 (3816)	RB5145	1-234-378-11	RES, NETWORK 10K	(1005X4)
RB4801	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)	RB5200	1-234-369-21	RES, NETWORK 10	(1005X4)
RB4802	1-234-711-21	RES, CHIP NETWORK	22X8 (3816)	RB5201	1-234-369-21	RES, NETWORK 10	(1005X4)
RB4803	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)	RB5202	1-234-369-21	RES, NETWORK 10	(1005X4)
RB4804	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)	RB5203	1-234-369-21	RES, NETWORK 10	(1005X4)
RB4806	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)	RB5204	1-234-369-21	RES, NETWORK 10	(1005X4)
RB4807	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)	RB5400	1-234-702-11	RES, NETWORK 68	(1005X4)
RB4809	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)	RB5409	1-234-944-21	RES, NETWORK 47	(1005X4)
RB4810	1-234-785-21	RES, CHIP NETWORK	100X8(3816)	RB5416	1-234-944-21	RES, NETWORK 47	(1005X4)
RB4811	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)	RB5417	1-234-378-11	RES, NETWORK 10K	(1005X4)
RB4813	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)	RB5419	1-234-378-11	RES, NETWORK 10K	(1005X4)
RB4814	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)	RB5420	1-234-944-21	RES, NETWORK 47	(1005X4)
RB4815	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)	RB5421	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)
RB4816	1-234-799-21	RES, CHIP NETWORK	10KX8 (3816)	RB5427	1-234-943-21	RES, NETWORK 22	(1005X4)
RB4817	1-234-799-21	RES, CHIP NETWORK	10KX8 (3816)	RB5432	1-234-378-11	RES, NETWORK 10K	(1005X4)
RB4818	1-234-785-21	RES, CHIP NETWORK	100X8(3816)	RB5433	1-234-378-11	RES, NETWORK 10K	(1005X4)
RB4819	1-234-785-21	RES, CHIP NETWORK	100X8(3816)	RB5434	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)
RB4820	1-234-785-21	RES, CHIP NETWORK	100X8(3816)	RB5435	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)
RB4821	1-234-378-11	RES, NETWORK 10K	(1005X4)	RB5436	1-234-711-21	RES, CHIP NETWORK	22X8 (3816)
RB4822	1-234-795-21	RES, NETWORK 0X4	(2010)	RB5437	1-234-711-21	RES, CHIP NETWORK	22X8 (3816)
RB4823	1-234-943-21	RES, NETWORK 22	(1005X4)	RB5438	1-234-943-21	RES, NETWORK 22	(1005X4)
RB4824	1-234-943-21	RES, NETWORK 22	(1005X4)	RB5439	1-234-943-21	RES, NETWORK 22	(1005X4)
RB4825	1-234-945-21	RES, NETWORK 100	(1005X4)	RB5441	1-234-943-21	RES, NETWORK 22	(1005X4)
RB4826	1-234-945-21	RES, NETWORK 100	(1005X4)	RB5443	1-234-943-21	RES, NETWORK 22	(1005X4)
RB4827	1-234-785-21	RES, CHIP NETWORK	100X8(3816)	RB5444	1-234-887-21	RES, CHIP NETWORK	0X8 (3816)
RB5108	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB5445	1-234-799-21	RES, CHIP NETWORK	10KX8 (3816)
RB5109	1-234-795-21	RES, NETWORK 0X4	(2010)	RB5446	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)
RB5110	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB5447	1-234-785-21	RES, CHIP NETWORK	100X8(3816)
RB5111	1-234-944-21	RES, NETWORK 47	(1005X4)	RB5448	1-234-785-21	RES, CHIP NETWORK	100X8(3816)
RB5112	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB5449	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)
RB5113	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB5450	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)
RB5115	1-234-944-21	RES, NETWORK 47	(1005X4)	RB5451	1-234-785-21	RES, CHIP NETWORK	100X8(3816)
RB5120	1-234-711-21	RES, CHIP NETWORK	22X8 (3816)	RB5452	1-234-785-21	RES, CHIP NETWORK	100X8(3816)
RB5121	1-234-711-21	RES, CHIP NETWORK	22X8 (3816)	RB5453	1-234-711-21	RES, CHIP NETWORK	22X8 (3816)
RB5122	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB5454	1-234-711-21	RES, CHIP NETWORK	22X8 (3816)
RB5123	1-234-710-21	RES, CHIP NETWORK	47X8 (3816)	RB5455	1-234-892-21	RES, CHIP NETWORK	33X8 (3816)
RB5126	1-234-887-21	RES, CHIP NETWORK	0X8 (3816)	RB5456	1-234-892-21	RES, CHIP NETWORK	33X8 (3816)
RB5127	1-234-799-21	RES, CHIP NETWORK	10KX8 (3816)	RB5502	1-245-943-21	RES, CHIP NETWORK	68X8 (3816)
RB5128	1-234-378-11	RES, NETWORK 10K	(1005X4)	RB5503	1-234-943-21	RES, NETWORK 22	(1005X4)
RB5132	1-234-369-21	RES, NETWORK 10	(1005X4)	RB5504	1-234-943-21	RES, NETWORK 22	(1005X4)
RB5133	1-234-943-21	RES, NETWORK 22	(1005X4)	RB5505	1-234-943-21	RES, NETWORK 22	(1005X4)
RB5141	1-234-795-21	RES, NETWORK 0X4	(2010)	RB5600	1-234-943-21	RES, NETWORK 22	(1005X4)
RB5142	1-234-799-21	RES, CHIP NETWORK	10KX8 (3816)				
RB5143	1-234-799-21	RES, CHIP NETWORK	10KX8 (3816)				

NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

FB1 GF2


REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
VARISTOR				C6111	1-100-731-11	FILM	22000pF 3% 1KV
VD4300	1-805-774-21	VARISTOR, CHIP		C6112	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V
VD4301	1-805-774-21	VARISTOR, CHIP		C6150	1-104-760-11	CERAMIC CHIP	0.047μF 10% 50V
VD4600	1-804-988-21	VARISTOR, CHIP	(1608)	C6152	1-112-229-21	ELECT	1500μF 20% 16V
VD4601	1-804-988-21	VARISTOR, CHIP	(1608)	C6153	1-112-229-21	ELECT	1500μF 20% 16V
VD4602	1-804-988-21	VARISTOR, CHIP	(1608)				
				C6155	1-162-970-11	CERAMIC CHIP	0.01μF 10% 25V
VD4603	1-804-988-21	VARISTOR, CHIP	(1608)	C6160	1-112-231-21	ELECT	2200μF 20% 16V
VD4604	1-804-988-21	VARISTOR, CHIP	(1608)	C6162	1-162-970-11	CERAMIC CHIP	0.01μF 10% 25V
CRYSTAL				C6165	1-112-835-11	ELECT	3300μF 20% 25V
X2100	1-781-646-21	VIBRATOR, CERAMIC		C6167	1-115-339-11	CERAMIC CHIP	0.1μF 10% 50V
X2101	1-813-462-11	VIBRATOR, CRYSTAL	24.576MHZ	C6200	1-107-826-11	CERAMIC CHIP	0.1μF 10% 16V
X2900	1-813-990-11	QUARTS CRYSTAL	30MHZ	C6201	1-162-927-11	CERAMIC CHIP	100pF 5% 50V
X4900	1-813-985-11	QUARTZ CRYSTAL OSCILLATOR		C6202	1-107-902-11	ELECT	1μF 20% 50V
X4901	1-814-023-11	QUARTS CRYSTAL UNIT		C6203	1-100-139-31	FILM	0.001μF 5% 630V
				C6204	1-107-903-11	ELECT	2.2μF 20% 50V
X4902	1-813-984-11	OSCILLATOR, CRYSTAL		C6205	1-107-910-11	ELECT	100μF 20% 50V
				C6206	1-162-964-11	CERAMIC CHIP	0.001μF 10% 50V
				C6209	1-162-970-11	CERAMIC CHIP	0.01μF 10% 25V
				C6250	1-128-949-31	ELECT	470μF 20% 16V
				C6251	1-107-826-11	CERAMIC CHIP	0.1μF 10% 16V
A-1256-162-A	GF2 BOARD, COMPLETE			C6302	1-162-964-11	CERAMIC CHIP	0.001μF 10% 50V
2-580-592-01	SCREW, +PSW M3X8			C6303	1-165-908-11	CERAMIC CHIP	1μF 10% 10V
CAPACITOR				C6304	1-100-566-91	CERAMIC CHIP	0.1μF 10% 25V
⚠ C6006	1-114-153-51	CERAMIC	680pF 10% 250V	C6305	1-162-964-11	CERAMIC CHIP	0.001μF 10% 50V
⚠ C6007	1-119-892-51	CERAMIC	470pF 10% 250V	C6306	1-162-970-11	CERAMIC CHIP	0.01μF 10% 25V
⚠ C6010	1-114-153-51	CERAMIC	680pF 10% 250V				
⚠ C6011	1-119-892-51	CERAMIC	470pF 10% 250V	C6307	1-162-964-11	CERAMIC CHIP	0.001μF 10% 50V
⚠ C6012	1-165-533-11	MYLAR	0.68μF 10 275V	C6310	1-162-964-11	CERAMIC CHIP	0.001μF 10% 50V
				C6402	1-162-970-11	CERAMIC CHIP	0.01μF 10% 25V
C6014	1-161-964-91	CERAMIC	0.0047μF 250V	C6405	1-107-826-11	CERAMIC CHIP	0.1μF 10% 16V
C6015	1-161-964-91	CERAMIC	0.0047μF 250V	C6407	1-107-877-11	ELECT	1000μF 20% 10V
C6016	1-135-361-11	ELECT(BLOCK)	180μF 20% 450V				
C6017	1-135-361-11	ELECT(BLOCK)	180μF 20% 450V	C6408	1-165-908-11	CERAMIC CHIP	1μF 10% 10V
C6019	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	C6410	1-107-826-11	CERAMIC CHIP	0.1μF 10% 16V
				⚠ C6500	1-165-825-11	MYLAR	2.2μF 5% 450V
C6020	1-163-021-91	CERAMIC CHIP	0.01μF 10% 50V	⚠ C6501	1-165-825-11	MYLAR	2.2μF 5% 450V
C6021	1-119-887-51	CERAMIC	1000pF 20% 250V	⚠ C6503	1-165-825-11	MYLAR	2.2μF 5% 450V
C6100	1-162-970-11	CERAMIC CHIP	0.01μF 10% 25V				
C6101	1-100-831-91	CERAMIC CHIP	0.001μF 2% 50V	C6505	1-162-968-11	CERAMIC CHIP	0.0047μF 10% 50V
C6102	1-107-906-11	ELECT	10μF 20% 50V	C6506	1-162-964-11	CERAMIC CHIP	0.001μF 10% 50V
				C6507	1-162-966-11	CERAMIC CHIP	0.0022μF 10% 50V
C6103	1-107-905-11	ELECT	4.7μF 20% 50V	C6508	1-100-566-91	CERAMIC CHIP	0.1μF 10% 25V
C6104	1-107-910-11	ELECT	100μF 20% 50V	C6510	1-107-902-11	ELECT	1μF 20% 50V
C6106	1-162-970-11	CERAMIC CHIP	0.01μF 10% 25V				
C6107	1-107-888-11	ELECT	47μF 20% 25V	C6511	1-164-315-11	CERAMIC CHIP	470pF 5% 50V
C6108	1-115-340-11	CERAMIC CHIP	0.22μF 10% 25V	C6512	1-162-959-11	CERAMIC CHIP	330pF 5% 50V
				C6517	1-100-566-91	CERAMIC CHIP	0.1μF 10% 25V
				C6518	1-107-906-11	ELECT	10uF 20% 50V


NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

GF2

REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
C6521	1-107-906-11	ELECT	10 μ F 20% 50V	EARTH TERMINAL			
C6522	1-162-970-11	CERAMIC CHIP	0.01 μ F 10% 25V	ET6000	1-537-770-21	TERMINAL BOARD, GROUND	
CONNECTOR				ET6001	1-537-770-21	TERMINAL BOARD, GROUND	
\triangle * CN6000	1-793-660-11	PIN, CONNECTOR (PC BOARD)		ET6002	1-537-770-21	TERMINAL BOARD, GROUND	
* CN6150	1-793-235-11	PIN, CONNECTOR (PC BOARD)	13P	ET6003	1-537-770-21	TERMINAL BOARD, GROUND	
* CN6151	1-785-703-21	PIN, CONNECTOR (PC BOARD)	6P	FUSE			
* CN6152	1-778-853-11	PIN, CONNECTOR (PC BOARD)	8P	\triangle F6000	1-576-233-51	FUSE	6.3A 250V
* CN6154	1-785-708-11	PIN, CONNECTOR (PC BOARD)	12P	FERRITE BEAD			
\triangle * CN6501	1-793-660-11	PIN, CONNECTOR (PC BOARD)		FB6001	1-410-396-41	FERRITE	0.45 μ H
\triangle * CN6502	1-793-660-11	PIN, CONNECTOR (PC BOARD)		FB6002	1-410-396-41	FERRITE	0.45 μ H
DIODE				FB6100	1-412-911-11	FERRITE	0 μ H
D6000	8-719-054-89	DIODE	D15XB60	FB6101	1-412-911-11	FERRITE	0 μ H
D6100	8-719-081-67	DIODE	M1FM3	FB6150	1-412-911-11	FERRITE	0 μ H
D6101	6-500-137-01	DIODE	BAT54HT1	FB6151	1-412-911-11	FERRITE	0 μ H
D6102	6-501-774-01	DIODE	MAZ8150G0LS0	FB6152	1-412-911-11	FERRITE	0 μ H
D6104	8-719-979-64	DIODE	μ F4005/23	FB6153	1-412-911-11	FERRITE	0 μ H
D6105	8-719-081-67	DIODE	M1FM3	FB6501	1-412-911-11	FERRITE	0 μ H
D6150	6-501-545-01	DIODE	SG10SC6-F5	FB6502	1-412-911-11	FERRITE	0 μ H
D6151	6-501-545-01	DIODE	SG10SC6-F5	FUSE HOLDER			
D6153	6-501-545-01	DIODE	SG10SC6-F5	\triangle FH6000	1-533-223-11	FUSE HOLDER	0A 0V
D6201	8-719-058-74	DIODE	05NU42-TPA2	\triangle FH6001	1-533-223-11	FUSE HOLDER	0A 0V
D6202	6-501-817-01	DIODE	MA2J1110GLS0	IC			
D6203	6-500-567-31	DIODE	10ERB20-TB3	IC6100	6-707-749-01	IC	CXD9841P
D6204	6-500-567-31	DIODE	10ERB20-TB3	IC6150	6-709-368-01	IC	MM1431ATT (CN)
D6250	6-501-526-01	DIODE	D1NS6-TR2	IC6200	6-708-801-01	IC	MIP2H2
D6305	6-501-817-01	DIODE	MA2J1110GLS0	IC6250	6-709-368-01	IC	MM1431ATT (CN)
D6306	6-501-817-01	DIODE	MA2J1110GLS0	IC6300	6-709-368-01	IC	MM1431ATT (CN)
D6307	6-501-817-01	DIODE	MA2J1110GLS0	IC6301	6-709-368-01	IC	MM1431ATT (CN)
D6308	6-501-818-01	DIODE	MA2J1130GLS0	IC6500	6-709-791-01	IC	L6562N
D6400	6-501-774-01	DIODE	MAZ8150G0LS0	CHIP CONDUCTOR			
D6401	6-500-335-01	DIODE	MC2838-T112-1	JR6001	1-216-864-11	SHORT CHIP	
D6402	6-501-817-01	DIODE	MA2J1110GLS0	JR6002	1-216-295-91	SHORT CHIP	
D6405	6-500-335-01	DIODE	MC2838-T112-1	JR6003	1-216-296-11	SHORT CHIP	
D6406	6-501-758-01	DIODE	MAZ8100G0LS0	JR6004	1-216-296-11	SHORT CHIP	
D6500	6-500-335-01	DIODE	MC2838-T112-1	JR6005	1-216-296-11	SHORT CHIP	
D6502	6-500-137-01	DIODE	BAT54HT1	JR6006	1-216-296-11	SHORT CHIP	
D6503	6-501-817-01	DIODE	MA2J1110GLS0	JR6007	1-216-295-91	SHORT CHIP	
* D6506	8-719-055-38	DIODE	SF5L60	JR6008	1-216-864-11	SHORT CHIP	
D6507	6-501-818-01	DIODE	MA2J1130GLS0	JR6009	1-216-296-11	SHORT CHIP	
D6508	6-501-818-01	DIODE	MA2J1130GLS0	JR6010	1-216-296-11	SHORT CHIP	
D6509	6-500-108-01	DIODE	EP05FA20				
D6512	6-501-817-01	DIODE	MA2J1110GLS0				

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

GF2

[illegible]

NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

GF2

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R6203	1-249-385-11	CARBON	2.2	5%	1/4W	R6433	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6250	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6434	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R6251	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R6436	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6252	1-216-805-11	METAL CHIP	47	5%	1/10W	R6437	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6254	1-218-871-11	METAL CHIP	10K	0.50%	1/10W	R6438	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6255	1-218-871-11	METAL CHIP	10K	0.50%	1/10W	R6439	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6302	1-218-903-11	METAL CHIP	220K	0.50%	1/10W	R6440	1-216-839-11	METAL CHIP	33K	5%	1/10W
R6303	1-218-885-11	METAL CHIP	39K	0.50%	1/10W	R6441	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6304	1-218-863-11	METAL CHIP	4.7K	0.50%	1/10W	R6442	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6305	1-216-845-11	METAL CHIP	100K	5%	1/10W	\triangle R6500	1-218-760-11	METAL CHIP	220K	0.50%	1/10W
R6307	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	\triangle R6501	1-218-760-11	METAL CHIP	220K	0.50%	1/10W
R6308	1-216-849-11	METAL CHIP	220K	5%	1/10W	\triangle R6502	1-208-830-11	METAL CHIP	100K	0.50%	1/10W
R6309	1-218-865-11	METAL CHIP	5.6K	0.50%	1/10W	\triangle R6503	1-208-830-11	METAL CHIP	100K	0.50%	1/10W
R6310	1-216-833-11	METAL CHIP	10K	5%	1/10W	\triangle R6504	1-218-760-11	METAL CHIP	220K	0.50%	1/10W
R6311	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	\triangle R6505	1-218-760-11	METAL CHIP	220K	0.50%	1/10W
R6312	1-216-841-11	METAL CHIP	47K	5%	1/10W	\triangle R6506	1-208-830-11	METAL CHIP	100K	0.50%	1/10W
R6315	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6510	1-216-841-11	METAL CHIP	47K	5%	1/10W
R6317	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R6511	1-216-826-11	METAL CHIP	2.7K	5%	1/10W
R6318	1-216-864-11	SHORT CHIP				R6512	1-215-882-00	METAL OXIDE	22	5%	2W
R6319	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6514	1-216-845-11	METAL CHIP	100K	5%	1/10W
R6320	1-216-837-11	METAL CHIP	22K	5%	1/10W	R6515	1-216-817-11	METAL CHIP	470	5%	1/10W
R6321	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6516	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6323	1-243-596-71	METAL OXIDE	47K	5%	2W	R6517	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R6324	1-216-839-11	METAL CHIP	33K	5%	1/10W	R6518	1-216-841-11	METAL CHIP	47K	5%	1/10W
R6328	1-216-864-11	SHORT CHIP				R6520	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6332	1-249-385-11	CARBON	2.2	5%	1/4W	R6521	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6402	1-216-864-11	SHORT CHIP				R6522	1-216-797-11	METAL CHIP	10	5%	1/10W
R6404	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6523	1-216-797-11	METAL CHIP	10	5%	1/10W
R6405	1-216-845-11	METAL CHIP	100K	5%	1/10W	R6524	1-243-550-71	METAL OXIDE	6.8	5%	2W
R6406	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6525	1-249-417-11	CARBON	1K	5%	1/4W
R6407	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6526	1-249-401-11	CARBON	47	5%	1/4W
R6408	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6527	1-249-401-11	CARBON	47	5%	1/4W
R6410	1-216-864-11	SHORT CHIP				R6530	1-208-840-11	METAL CHIP	270K	0.50%	1/10W
R6411	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6531	1-218-760-11	METAL CHIP	220K	0.50%	1/10W
R6412	1-216-864-11	SHORT CHIP				R6532	1-218-760-11	METAL CHIP	220K	0.50%	1/10W
R6413	1-216-839-11	METAL CHIP	33K	5%	1/10W	R6533	1-218-760-11	METAL CHIP	220K	0.50%	1/10W
R6414	1-216-817-11	METAL CHIP	470	5%	1/10W	R6534	1-208-834-11	METAL CHIP	150K	0.50%	1/10W
R6415	1-216-839-11	METAL CHIP	33K	5%	1/10W	R6535	1-218-867-11	METAL CHIP	6.8K	0.50%	1/10W
R6416	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6536	1-218-823-11	METAL CHIP	100	0.50%	1/10W
R6418	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6538	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6419	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6539	1-216-851-11	METAL CHIP	330K	5%	1/10W
R6420	1-216-845-11	METAL CHIP	100K	5%	1/10W	R6540	1-216-849-11	METAL CHIP	220K	5%	1/10W
R6428	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6541	1-216-809-11	METAL CHIP	100	5%	1/10W
R6429	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6542	1-208-846-11	METAL CHIP	470K	0.50%	1/10W
R6430	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6543	1-208-840-11	METAL CHIP	270K	0.50%	1/10W

NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

GF2 **H1** **H3**

REF. NO.	PART NO.	DESCRIPTION	VALUES		
R6544	1-208-840-11	METAL CHIP	270K	0.50%	1/10W
R6545	1-218-861-11	METAL CHIP	3.9K	0.50%	1/10W
R6546	1-218-877-11	METAL CHIP	18K	0.50%	1/10W
R6547	1-216-864-11	SHORT CHIP			
R6550	1-216-864-11	SHORT CHIP			
R6551	1-216-864-11	SHORT CHIP			
R6571	1-216-829-11	METAL CHIP	4.7K	5%	1/10W

RELAY

\triangle RY6000	1-755-516-11	RELAY (AC POWER)
--------------------	--------------	------------------

TRANSFORMER

\triangle T6100	1-445-275-11	CONVERTER TRANSFORMER (PIT)
\triangle T6200	1-445-279-11	CONVERTER TRANSFORMER (SBT)

THERMISTOR

TH6301	1-809-789-71	THERMISTOR, POSITIVE
--------	--------------	----------------------

VARISTOR

\triangle VD6000	1-804-996-21	VARISTOR
\triangle VD6001	1-804-996-21	VARISTOR

H1

* **A-1171-665-A H1 BOARD, MOUNTED**

CAPACITOR

C3000	1-162-970-11	CERAMIC CHIP	0.01 μ F	10%	25V
C3001	1-162-970-11	CERAMIC CHIP	0.01 μ F	10%	25V

CONNECTOR

* CN3000	1-819-472-11	HEADER ASSEMBLY FOR PWB
* CN3001	1-819-476-11	HEADER ASSEMBLY FOR PWB

DIODE

D3001	8-719-914-44	DIODE	DAP202K
-------	--------------	-------	---------

RESISTOR

R3000	1-218-670-11	METAL CHIP	120	0.50%	1/10W
R3001	1-218-672-11	METAL CHIP	150	0.50%	1/10W
R3002	1-218-678-11	METAL CHIP	270	0.50%	1/10W
R3003	1-218-686-11	METAL CHIP	560	0.50%	1/10W
R3004	1-218-696-11	METAL CHIP	1.5K	0.50%	1/10W

REF. NO.	PART NO.	DESCRIPTION	VALUES		
----------	----------	-------------	--------	--	--

SWITCH

S3000	1-572-595-11	SWITCH, TACTILE
S3001	1-572-595-11	SWITCH, TACTILE
S3002	1-572-595-11	SWITCH, TACTILE
S3003	1-572-595-11	SWITCH, TACTILE
S3004	1-572-595-11	SWITCH, TACTILE

S3005	1-572-595-11	SWITCH, TACTILE
S3006	1-572-595-11	SWITCH, TACTILE

VARISTOR

VD3000	1-803-974-21	VARISTOR, CHIP	(1608)
VD3001	1-803-974-21	VARISTOR, CHIP	(1608)

H3

A-1171-667-A H3 BOARD, MOUNTED

LED HOLDER

A3001	2-686-289-03	LED HOLDER	
A3002	3-097-837-01	LED HOLDER	(C)
A3003	2-686-289-03	LED HOLDER	

CAPACITOR

C3202	1-126-391-11	ELECT CHIP	47 μ F	20%	6.3V
C3203	1-100-566-91	CERAMIC CHIP	0.1 μ F	10%	25V
C3205	1-100-566-91	CERAMIC CHIP	0.1 μ F	10%	25V
C3209	1-126-205-11	ELECT CHIP	47 μ F	20%	6.3V
C3210	1-100-566-91	CERAMIC CHIP	0.1 μ F	10%	25V
C3211	1-126-205-11	ELECT CHIP	47 μ F	20%	6.3V
C3212	1-100-566-91	CERAMIC CHIP	0.1 μ F	10%	25V
C3213	1-164-230-11	CERAMIC CHIP	220pF	5%	50V

CONNECTOR

CN3200	1-819-464-11	HEADER ASSEMBLY FOR PWB
* CN3201	1-819-470-11	HEADER ASSEMBLY FOR PWB

DIODE

D3200	6-501-502-01	DIODE	FR5366X
D3201	6-500-672-11	DIODE	TLRMHGH48M (SONY)
D3202	6-500-672-11	DIODE	TLRMHGH48M (SONY)
D3203	6-500-028-01	DIODE	MM3Z9V1ST1
D3204	6-500-028-01	DIODE	MM3Z9V1ST1

H3

H4

H5

REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES	
D3205	6-500-028-01	DIODE	MM3Z9V1ST1	<div>H4</div>	A-1171-668-A	H4 BOARD, MOUNTED		
D3206	6-500-028-01	DIODE	MM3Z9V1ST1					
D3207	6-500-028-01	DIODE	MM3Z9V1ST1					
D3208	6-500-028-01	DIODE	MM3Z9V1ST1					
D3210	6-500-028-01	DIODE	MM3Z9V1ST1					
IC						LED HOLDER		
IC3200	6-600-447-01	IC	TPS853(SONY)		A005	4-101-331-01	HOLDER (M7), LED	
IC3201	6-600-502-01	HIC	GP1UE26RK0VF			CAPACITOR		
TRANSISTOR						C3300	1-126-395-11	ELECT CHIP 22μF 20% 16V
Q3200	8-729-028-91	TRANSISTOR	DTA144EUA-T106			CONNECTOR		
Q3201	8-729-029-14	TRANSISTOR	DTC144EUA-T106	*	CN3301	1-819-445-11	HEADER ASSEMBLY FOR PWB	
Q3202	8-729-907-00	TRANSISTOR	DTC114EU			DIODE		
Q3203	8-729-907-00	TRANSISTOR	DTC114EU		D3307	6-501-198-01	DIODE	NSPW500BS-A0-M
Q3204	8-729-907-00	TRANSISTOR	DTC114EU		D3310	6-501-198-01	DIODE	NSPW500BS-A0-M
Q3205	8-729-907-00	TRANSISTOR	DTC114EU		D3313	6-501-198-01	DIODE	NSPW500BS-A0-M
Q3206	6-550-586-01	TRANSISTOR	2PA1576R-115			TRANSISTOR		
Q3207	8-729-907-00	TRANSISTOR	DTC114EU		Q3300	8-729-907-00	TRANSISTOR	DTC114EU
Q3208	6-550-586-01	TRANSISTOR	2PA1576R-115		Q3303	8-729-907-00	TRANSISTOR	DTC114EU
Q3209	8-729-028-73	TRANSISTOR	DTA114EUA-T106		Q3306	8-729-907-00	TRANSISTOR	DTC114EU
Q3210	8-729-028-73	TRANSISTOR	DTA114EUA-T106			RESISTOR		
Q3211	8-729-028-73	TRANSISTOR	DTA114EUA-T106	R3300	1-216-809-11	METAL CHIP	100 5% 1/10W	
Q3212	8-729-028-73	TRANSISTOR	DTA114EUA-T106	R3303	1-216-809-11	METAL CHIP	100 5% 1/10W	
RESISTOR				R3306	1-216-809-11	METAL CHIP	100 5% 1/10W	
R3200	1-216-828-11	METAL CHIP	3.9K 5% 1/10W	<div>H5</div>	A-1246-098-A	H5 BOARD, MOUNTED		
R3201	1-216-864-11	SHORT CHIP				(KDL-52XBR5 Only)		
R3202	1-216-815-11	METAL CHIP	330 5% 1/10W		2-580-626-01	SCREW, SP 4-40 UNC		
R3203	1-216-807-11	METAL CHIP	68 5% 1/10W			CAPACITOR		
R3204	1-216-864-11	SHORT CHIP			C001	1-100-597-91	CERAMIC CHIP	0.1μF 10% 25V
R3206	1-216-815-11	METAL CHIP	330 5% 1/10W		C002	1-100-597-91	CERAMIC CHIP	0.1μF 10% 25V
R3207	1-216-807-11	METAL CHIP	68 5% 1/10W		C003	1-100-597-91	CERAMIC CHIP	0.1μF 10% 25V
R3209	1-216-827-11	METAL CHIP	3.3K 5% 1/10W		C004	1-100-597-91	CERAMIC CHIP	0.1μF 10% 25V
R3211	1-216-851-11	METAL CHIP	330K 5% 1/10W		C005	1-100-597-91	CERAMIC CHIP	0.1μF 10% 25V
R3212	1-216-851-11	METAL CHIP	330K 5% 1/10W		C006	1-124-779-00	ELECT CHIP	10μF 20% 16V
R3213	1-216-833-11	METAL CHIP	10K 5% 1/10W		CONNECTOR			
R3214	1-216-839-11	METAL CHIP	33K 5% 1/10W	CN001	1-815-737-11	CONNECTOR, (D) SUB	9P	
R3215	1-216-821-11	METAL CHIP	1K 5% 1/10W	CN002	1-778-227-41	CONNECTOR, BOARD TO BOARD	6P	
R3217	1-216-864-11	SHORT CHIP						
R3218	1-216-805-11	METAL CHIP	47 5% 1/10W					
R3219	1-216-833-11	METAL CHIP	10K 5% 1/10W					
R3220	1-216-817-11	METAL CHIP	470 5% 1/10W					
R3221	1-216-864-11	SHORT CHIP						
R3222	1-216-864-11	SHORT CHIP						

H5

HW2

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
<u>FERRITE BEAD</u>						C7068	1-125-777-11	CERAMIC CHIP	0.1μF	10%	10V
FB001	1-400-089-21	FERRITE	0μH			C7069	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
<u>IC</u>						C7070	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
IC001	6-705-514-01	IC	MAX3222IPWR			C7071	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
<u>TRANSISTOR</u>						C7072	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
Q1201	8-729-027-43	TRANSISTOR	DTC114EKA-T146			C7073	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
<u>RESISTOR</u>						C7074	1-112-774-11	CERAMIC CHIP	470pF	10%	50V
R003	1-216-295-91	SHORT CHIP				C7075	1-100-906-11	CERAMIC CHIP	0.01μF	10%	16V
R004	1-216-295-91	SHORT CHIP				C7076	1-124-779-00	ELECT CHIP	10μF	20%	16V
R005	1-216-025-11	RES-CHIP	100	5%	1/10W	C7077	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
R006	1-216-025-11	RES-CHIP	100	5%	1/10W	C7078	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
R009	1-216-295-91	SHORT CHIP				C7079	1-112-064-11	CERAMIC CHIP	2.2μF	10%	10V
R010	1-216-295-91	SHORT CHIP				C7080	1-125-777-11	CERAMIC CHIP	0.1μF	10%	10V
R1205	1-218-965-11	RES-CHIP	10K	5%	1/16W	C7081	1-124-779-00	ELECT CHIP	10μF	20%	16V
<u>VARISTOR</u>						C7082	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
VDR001	1-802-078-11	VARISTOR (SMD)				<u>CONNECTOR</u>					
VDR002	1-802-078-11	VARISTOR (SMD)				* CN7022	1-820-581-11	HEADER ASSEMBLY FOR PWB			
						* CN7060	1-818-400-11	HDMI CONNECTOR			
						CN7061	1-820-667-11	HEADER ASSEMBLY FOR PWB			
						<u>DIODE</u>					
						D7021	6-501-745-01	DIODE	MAZ8075G0LS0		
						D7060	6-500-701-01	DIODE	PGB1010603NR		
						D7061	6-500-701-01	DIODE	PGB1010603NR		
						D7062	6-500-701-01	DIODE	PGB1010603NR		
						D7063	8-719-081-97	DIODE	MMDL914T1		
						D7064	8-719-081-97	DIODE	MMDL914T1		
						D7065	6-500-701-01	DIODE	PGB1010603NR		
						<u>EARTH TERMINAL</u>					
						ET7020	1-780-482-11	EARTH TERMINAL			
						ET7021	1-780-482-11	EARTH TERMINAL			
						* ET7060	1-780-431-11	ON-BOARD CONTACT			
						* ET7061	1-780-431-11	ON-BOARD CONTACT			
						* ET7062	1-780-431-11	ON-BOARD CONTACT			
						<u>FERRITE BEAD</u>					
						FB7020	1-400-333-21	FERRITE	0μH		
						FB7021	1-400-333-21	FERRITE	0μH		
						FB7022	1-400-461-21	FERRITE	0μH		
						FB7060	1-400-382-11	FERRITE	0μH		
						FB7061	1-469-082-21	FERRITE	0μH		

HW2

A-1361-955-A

HW2 BOARD, COMPLETE

<u>CAPACITOR</u>					
C7029	1-124-779-00	ELECT CHIP	10μF	20%	16V
C7030	1-124-779-00	ELECT CHIP	10μF	20%	16V
C7031	1-164-872-11	CERAMIC CHIP	82pF	5%	50V
C7034	1-114-214-81	CERAMIC CHIP	470pF	5%	50V
C7036	1-114-214-81	CERAMIC CHIP	470pF	5%	50V
C7037	1-164-874-11	CERAMIC CHIP	100pF	5%	50V
C7038	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C7060	1-100-907-11	CERAMIC CHIP	0.1μF	10%	10V
C7061	1-100-906-11	CERAMIC CHIP	0.01μF	10%	16V
C7062	1-100-906-11	CERAMIC CHIP	0.01μF	10%	16V
C7063	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C7064	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C7065	1-124-779-00	ELECT CHIP	10μF	20%	16V
C7066	1-124-779-00	ELECT CHIP	10μF	20%	16V
C7067	1-100-906-11	CERAMIC CHIP	0.01μF	10%	16V

HW2

A-1361-955-A HW2 BOARD, COMPLETE

CAPACITOR

C7029	1-124-779-00	ELECT CHIP	10μF	20%	16V
C7030	1-124-779-00	ELECT CHIP	10μF	20%	16V
C7031	1-164-872-11	CERAMIC CHIP	82pF	5%	50V
C7034	1-114-214-81	CERAMIC CHIP	470pF	5%	50V
C7036	1-114-214-81	CERAMIC CHIP	470pF	5%	50V
C7037	1-164-874-11	CERAMIC CHIP	100pF	5%	50V
C7038	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C7060	1-100-907-11	CERAMIC CHIP	0.1μF	10%	10V
C7061	1-100-906-11	CERAMIC CHIP	0.01μF	10%	16V
C7062	1-100-906-11	CERAMIC CHIP	0.01μF	10%	16V
C7063	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C7064	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C7065	1-124-779-00	ELECT CHIP	10μF	20%	16V
C7066	1-124-779-00	ELECT CHIP	10μF	20%	16V
C7067	1-100-906-11	CERAMIC CHIP	0.01μF	10%	16V

HW2

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
<u>FILTER</u>						R7074	1-218-929-11	RES-CHIP	10	5%	1/16W
						R7075	1-218-929-11	RES-CHIP	10	5%	1/16W
*	FL7062	1-813-880-11	INDUCTOR	0μH		R7076	1-218-929-11	RES-CHIP	10	5%	1/16W
*	FL7063	1-813-880-11	INDUCTOR	0μH		R7077	1-218-929-11	RES-CHIP	10	5%	1/16W
*	FL7064	1-813-880-11	INDUCTOR	0μH		R7078	1-218-929-11	RES-CHIP	10	5%	1/16W
*	FL7065	1-813-880-11	INDUCTOR	0μH							
<u>IC</u>						R7079	1-218-929-11	RES-CHIP	10	5%	1/16W
						R7080	1-218-929-11	RES-CHIP	10	5%	1/16W
IC7060	6-704-600-01	IC	M24C02-WMN6T(B)			R7081	1-218-929-11	RES-CHIP	10	5%	1/16W
IC7061	6-708-758-01	IC	PCA9517DP.118			R7083	1-218-990-81	SHORT CHIP			
IC7062	8-753-278-35	IC	CXB1443R-T4			R7087	1-208-911-11	METAL CHIP	10K	0.50%	1/16W
IC7063	6-702-362-01	IC	MM1563DFBE								
<u>JACK</u>						R7089	1-218-990-81	SHORT CHIP			
						R7090	1-218-990-81	SHORT CHIP			
J7020	1-821-115-11	PHONO JACK (RIGHT ANGLE)				R7091	1-208-911-11	METAL CHIP	10K	0.50%	1/16W
J7021	1-815-325-11	JACK				R7093	1-218-937-11	RES-CHIP	47	5%	1/16W
						R7094	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W
<u>TRANSISTOR</u>						R7097	1-216-864-11	SHORT CHIP			
						R7098	1-218-990-81	SHORT CHIP			
Q7062	8-729-907-00	TRANSISTOR	DTC114EU			R7099	1-218-990-81	SHORT CHIP			
Q7063	8-729-907-00	TRANSISTOR	DTC114EU			R7100	1-218-990-81	SHORT CHIP			
<u>RESISTOR</u>						R7101	1-218-990-81	SHORT CHIP			
R7023	1-216-864-11	SHORT CHIP				R7102	1-218-937-11	RES-CHIP	47	5%	1/16W
R7025	1-216-864-11	SHORT CHIP				R7103	1-218-937-11	RES-CHIP	47	5%	1/16W
R7030	1-216-864-11	SHORT CHIP				R7104	1-218-937-11	RES-CHIP	47	5%	1/16W
R7032	1-216-813-11	METAL CHIP	220	5%	1/10W	R7105	1-218-990-81	SHORT CHIP			
R7035	1-216-813-11	METAL CHIP	220	5%	1/10W	R7106	1-218-990-81	SHORT CHIP			
R7038	1-216-864-11	SHORT CHIP				R7107	1-218-990-81	SHORT CHIP			
R7039	1-216-864-11	SHORT CHIP				R7109	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7041	1-216-813-11	METAL CHIP	220	5%	1/10W	R7110	1-218-990-81	SHORT CHIP			
R7045	1-216-864-11	SHORT CHIP				R7112	1-208-911-11	METAL CHIP	10K	0.50%	1/16W
R7046	1-216-857-11	METAL CHIP	1M	5%	1/10W	R7114	1-218-990-81	SHORT CHIP			
R7047	1-216-857-11	METAL CHIP	1M	5%	1/10W	R7115	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7049	1-216-801-11	METAL CHIP	22	5%	1/10W	R7117	1-218-990-81	SHORT CHIP			
R7053	1-216-809-11	METAL CHIP	100	5%	1/10W	R7150	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R7056	1-216-809-11	METAL CHIP	100	5%	1/10W	R7151	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R7057	1-218-990-81	SHORT CHIP									
<u>VARISTOR</u>											
R7060	1-218-929-11	RES-CHIP	10	5%	1/16W	VD7020	1-803-974-21	VARISTOR, CHIP	(1608)		
R7061	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	VD7021	1-803-974-21	VARISTOR, CHIP	(1608)		
R7064	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	VD7022	1-803-974-21	VARISTOR, CHIP	(1608)		
R7065	1-218-941-81	RES-CHIP	100	5%	1/16W	VD7025	1-803-974-21	VARISTOR, CHIP	(1608)		
R7066	1-218-941-81	RES-CHIP	100	5%	1/16W	VD7026	1-803-974-21	VARISTOR, CHIP	(1608)		
R7067	1-218-941-81	RES-CHIP	100	5%	1/16W	VD7060	1-802-245-11	ESD SUPPRESSOR			
R7068	1-218-973-11	RES-CHIP	47K	5%	1/16W	VD7061	1-802-245-11	ESD SUPPRESSOR			
R7069	1-218-973-11	RES-CHIP	47K	5%	1/16W	VD7062	1-802-245-11	ESD SUPPRESSOR			
R7070	1-218-990-81	SHORT CHIP				VD7063	1-802-245-11	ESD SUPPRESSOR			
R7071	1-218-990-81	SHORT CHIP				VD7064	1-802-245-11	ESD SUPPRESSOR			

HW2 TUU2

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
VD7065	1-802-245-11	ESD SUPPRESSOR				C1037	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
VD7066	1-802-245-11	ESD SUPPRESSOR				C1038	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
VD7067	1-802-245-11	ESD SUPPRESSOR				C1039	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1040	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1041	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1042	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1043	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1044	1-114-148-11	CERAMIC CHIP	1μF		6.3V
						C1045	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1046	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1047	1-114-148-11	CERAMIC CHIP	1μF		6.3V
						C1048	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1049	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1050	1-114-148-11	CERAMIC CHIP	1μF		6.3V
						C1051	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1052	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1053	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1054	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
						C1055	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1056	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1057	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1058	1-164-862-11	CERAMIC CHIP	33pF	5%	50V
						C1059	1-164-864-11	CERAMIC CHIP	39pF	5%	50V
						C1060	1-164-862-11	CERAMIC CHIP	33pF	5%	50V
						C1061	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1062	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1063	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1064	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1065	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1066	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1067	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1068	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1069	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1070	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
						C1071	1-164-868-11	CERAMIC CHIP	56pF	5%	50V
						C1072	1-164-858-11	CERAMIC CHIP	22pF	5%	50V
						C1073	1-164-868-11	CERAMIC CHIP	56pF	5%	50V
						C1074	1-164-858-11	CERAMIC CHIP	22pF	5%	50V
						C1075	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1076	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1077	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1078	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1079	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1080	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
						C1081	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V

A-1269-502-A TUU2 BOARD, MOUNTED
 (The tuner [FSS BTF-CA411Z] is part of the TUU2 Board
 and cannot be ordered separately.)

CAPACITOR

C1000	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C1001	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C1002	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C1003	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C1004	1-128-361-11	ELECT CHIP	470μF	20%	10V
C1005	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C1006	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C1007	1-110-648-11	ELECT CHIP	220μF	20%	25V
C1008	1-112-066-11	CERAMIC CHIP	10μF	10%	10V
C1009	1-164-941-11	CERAMIC CHIP	0.0047μF	10%	16V
C1010	1-112-794-11	ELECT CHIP	470μF	20%	16V
C1012	1-135-366-11	ELECT CHIP	100μF	20%	16V
C1019	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C1020	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C1021	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C1022	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C1023	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C1024	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C1025	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C1026	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C1027	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C1028	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C1029	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C1030	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C1031	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C1032	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C1033	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C1034	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C1035	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C1036	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V

TUU2


REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C1082	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C1136	1-126-204-11	ELECT CHIP	47μF	20%	16V
C1083	1-164-864-11	CERAMIC CHIP	39pF	5%	50V	C1137	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C1084	1-164-858-11	CERAMIC CHIP	22pF	5%	50V	C1139	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V
C1085	1-164-858-11	CERAMIC CHIP	22pF	5%	50V	C1141	1-137-765-21	ELECT CHIP	47μF	20%	16V
C1086	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C1142	1-117-681-11	ELECT CHIP	100μF	20%	16V
C1087	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C1143	1-112-064-11	CERAMIC CHIP	2.2μF	10%	10V
C1088	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C1144	1-165-492-21	ELECT CHIP	100μF	20%	10V
C1089	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C1145	1-165-492-21	ELECT CHIP	100μF	20%	10V
C1091	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C1147	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C1092	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C1149	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C1093	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C1151	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C1094	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C1152	1-114-325-11	CERAMIC CHIP	0.1μF	10%	25V
C1095	1-128-993-21	ELECT CHIP	22μF	20%	10V	C1153	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V
C1096	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C1154	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V
C1097	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C1155	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C1099	1-112-064-11	CERAMIC CHIP	2.2μF	10%	10V	C1156	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V
C1100	1-112-067-11	CERAMIC CHIP	0.22μF	10%	16V	C1159	1-164-874-11	CERAMIC CHIP	100pF	5%	50V
C1102	1-164-862-11	CERAMIC CHIP	33pF	5%	50V	C1200	1-100-912-11	CERAMIC CHIP	1μF	10%	25V
C1103	1-164-862-11	CERAMIC CHIP	33pF	5%	50V	C1201	1-128-536-11	ELECT CHIP	100μF	20%	25V
C1104	1-164-840-11	CERAMIC CHIP	1pF	0.25pF	50V	C1202	1-110-501-11	CERAMIC CHIP	0.33μF	10%	16V
C1105	1-164-840-11	CERAMIC CHIP	1pF	0.25pF	50V	C1203	1-112-774-11	CERAMIC CHIP	470pF	10%	50V
C1106	1-164-858-11	CERAMIC CHIP	22pF	5%	50V	C1204	1-126-392-11	ELECT CHIP	100μF	20%	6.3V
C1107	1-164-858-11	CERAMIC CHIP	22pF	5%	50V	C1205	1-127-573-11	CERAMIC CHIP	1μF	10%	16V
C1108	1-128-536-11	ELECT CHIP	100μF	20%	25V	C1206	1-127-573-11	CERAMIC CHIP	1μF	10%	16V
C1109	1-128-993-21	ELECT CHIP	22μF	20%	10V	C1207	1-110-501-11	CERAMIC CHIP	0.33μF	10%	16V
C1110	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C1208	1-112-774-11	CERAMIC CHIP	470pF	10%	50V
C1113	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C1209	1-124-778-00	ELECT CHIP	22μF	20%	6.3V
C1114	1-112-064-11	CERAMIC CHIP	2.2μF	10%	10V	C1210	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C1115	1-112-775-11	CERAMIC CHIP	0.0022μF	10%	50V	C1211	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C1116	1-112-776-11	CERAMIC CHIP	0.0047μF	10%	50V	C1212	1-164-874-11	CERAMIC CHIP	100pF	5%	50V
C1118	1-128-361-11	ELECT CHIP	470μF	20%	10V	C1214	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C1119	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C1300	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C1120	1-114-332-11	CERAMIC CHIP	22μF	10%	6.3V	C1301	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C1121	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C1302	1-164-882-11	CERAMIC CHIP	220pF	5%	16V
C1123	1-114-183-11	ELECT CHIP	1000μF	20%	6.3V	C1303	1-164-882-11	CERAMIC CHIP	220pF	5%	16V
C1124	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C1305	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C1125	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	CONNECTOR					
C1126	1-126-396-11	ELECT CHIP	47μF	20%	16V	CN1003	1-819-390-51	FFC/FPC CONNECTOR (ZIF)	49P		
C1127	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	DIODE					
C1128	1-112-778-11	CERAMIC CHIP	0.022μF	10%	25V	D1001	6-501-336-01	DIODE	RSX201L-30TE25		
C1130	1-164-866-11	CERAMIC CHIP	47pF	5%	50V	D1002	6-500-019-01	DIODE	MM3Z3V9ST1		
C1131	1-164-866-11	CERAMIC CHIP	47pF	5%	50V	D1006	8-719-058-24	DIODE	RB501V-40TE-17		
C1133	1-164-862-11	CERAMIC CHIP	33pF	5%	50V	D1008	8-719-977-28	DIODE	DTZ10B		
C1134	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V						
C1135	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V						


TUU2

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
<u>EARTH TERMINAL</u>					<u>COIL</u>						
ET1000	1-780-482-11	EARTH TERMINAL				L1000	1-469-555-21	INDUCTOR	10μH		
ET1001	1-780-482-11	EARTH TERMINAL				L1001	1-456-786-21	INDUCTOR	47μH		
ET1002	1-780-482-11	EARTH TERMINAL				L1003	1-412-974-41	INDUCTOR	0.39μH		
ET1003	1-780-482-11	EARTH TERMINAL				L1005	1-412-974-41	INDUCTOR	0.39μH		
ET1004	1-780-482-11	EARTH TERMINAL				L1006	1-412-973-11	INDUCTOR	0.33μH		
ET1005	1-780-482-11	EARTH TERMINAL				L1008	1-412-971-31	INDUCTOR	0.22μH		
ET1006	1-780-482-11	EARTH TERMINAL				L1009	1-412-971-31	INDUCTOR	0.22μH		
ET1007	1-780-482-11	EARTH TERMINAL				L1010	1-412-973-11	INDUCTOR	0.33μH		
<u>FUSE</u>						L1011	1-469-555-21	INDUCTOR	10μH		
F1200	1-576-415-11	FUSE	2A	32V		L1012	1-469-555-21	INDUCTOR	10μH		
<u>FERRITE BEAD</u>						L1013	1-412-975-31	INDUCTOR	0.47μH		
FB1000	1-400-794-21	FERRITE	0μH			L1014	1-412-975-31	INDUCTOR	0.47μH		
FB1001	1-414-226-21	FERRITE	0μH			L1015	1-469-555-21	INDUCTOR	10μH		
FB1002	1-414-226-21	FERRITE	0μH			L1016	1-469-555-21	INDUCTOR	10μH		
FB1003	1-414-229-11	FERRITE	0μH			L1017	1-469-555-21	INDUCTOR	10μH		
FB1004	1-414-229-11	FERRITE	0μH			L1018	1-469-555-21	INDUCTOR	10μH		
FB1005	1-414-226-21	FERRITE	0μH			L1019	1-469-555-21	INDUCTOR	10μH		
FB1006	1-414-229-11	FERRITE	0μH			L1200	1-416-740-11	INDUCTOR	10μH		
FB1007	1-414-229-11	FERRITE	0μH			<u>TRANSISTOR</u>					
FB1008	1-414-229-11	FERRITE	0μH			Q1003	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF		
FB1009	1-500-329-21	FERRITE	0μH			Q1006	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF		
FB1010	1-500-329-21	FERRITE	0μH			Q1007	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF		
FB1011	1-400-089-21	FERRITE	0μH			Q1011	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF		
FB1013	1-400-089-21	FERRITE	0μH			Q1014	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF		
FB1014	1-400-089-21	FERRITE	0μH			Q1019	8-729-620-13	TRANSISTOR	2SC4154TP-1EF		
FB1300	1-500-283-11	FERRITE	0μH			Q1020	6-551-150-01	TRANSISTOR	RT2A00M-TP		
FB1301	1-500-283-11	FERRITE	0μH			Q1200	8-729-046-04	TRANSISTOR	FDS6690A		
<u>IC</u>						Q1201	6-551-272-01	TRANSISTOR	RT3CLLM		
IC1000	8-759-338-95	IC	NJM2903V(Te2)			Q1300	6-551-272-01	TRANSISTOR	RT3CLLM		
IC1001	6-709-441-01	IC	SI8008TM-TL			<u>RESISTOR</u>					
IC1002	6-711-063-01	IC	218T312ZGA21G			R1006	1-218-969-11	RES-CHIP	22K	5%	1/16W
IC1003	8-759-058-43	IC	NJM3404AV			R1007	1-208-928-11	METAL CHIP	51K	0.50%	1/16W
IC1004	6-709-556-01	IC	NJM2846DL3-05(Te2)			R1009	1-218-941-81	RES-CHIP	100	5%	1/16W
IC1006	6-708-171-01	IC	MIC5235YM5TR			R1011	1-208-928-11	METAL CHIP	51K	0.50%	1/16W
IC1007	6-706-838-01	IC	MM1661JHBE			R1012	1-218-969-11	RES-CHIP	22K	5%	1/16W
IC1008	6-709-584-01	IC	MM1663DHBE			R1015	1-218-941-81	RES-CHIP	100	5%	1/16W
IC1009	6-706-087-01	IC	PST3645NR			R1016	1-218-941-81	RES-CHIP	100	5%	1/16W
						R1017	1-218-941-81	RES-CHIP	100	5%	1/16W
						R1018	1-218-965-11	RES-CHIP	10K	5%	1/16W
						R1019	1-218-970-11	RES-CHIP	27K	5%	1/16W



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R1022	1-220-174-11	RES-CHIP	200	5%	1/16W	R1095	1-208-697-11	METAL CHIP	3.9K	0.50%	1/16W
R1023	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R1096	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R1025	1-208-697-11	METAL CHIP	3.9K	0.50%	1/16W	R1097	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W
R1026	1-218-929-11	RES-CHIP	10	5%	1/16W	R1098	1-218-989-11	RES-CHIP	1M	5%	1/16W
R1027	1-218-929-11	RES-CHIP	10	5%	1/16W	R1105	1-218-941-81	RES-CHIP	100	5%	1/16W
R1035	1-220-803-81	RES-CHIP	4.7	5%	1/16W	R1106	1-218-948-11	RES-CHIP	390	5%	1/16W
R1036	1-220-803-81	RES-CHIP	4.7	5%	1/16W	R1107	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W
R1037	1-218-990-81	SHORT CHIP				R1108	1-218-990-81	SHORT CHIP			
R1038	1-218-949-11	RES-CHIP	470	5%	1/16W	R1109	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R1040	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1110	1-218-941-81	RES-CHIP	100	5%	1/16W
R1041	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1112	1-218-941-81	RES-CHIP	100	5%	1/16W
R1042	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1114	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1043	1-218-929-11	RES-CHIP	10	5%	1/16W	R1115	1-218-978-11	RES-CHIP	120K	5%	1/16W
R1044	1-208-711-11	METAL CHIP	15K	0.50%	1/16W	R1116	1-218-990-81	SHORT CHIP			
R1045	1-208-711-11	METAL CHIP	15K	0.50%	1/16W	R1128	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R1046	1-218-941-81	RES-CHIP	100	5%	1/16W	R1129	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R1047	1-218-941-81	RES-CHIP	100	5%	1/16W	R1130	1-218-929-11	RES-CHIP	10	5%	1/16W
R1048	1-218-929-11	RES-CHIP	10	5%	1/16W	R1131	1-218-990-81	SHORT CHIP			
R1050	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1132	1-218-990-81	SHORT CHIP			
R1053	1-218-990-81	SHORT CHIP				R1133	1-218-990-81	SHORT CHIP			
R1054	1-218-990-81	SHORT CHIP				R1134	1-218-969-11	RES-CHIP	22K	5%	1/16W
R1055	1-218-929-11	RES-CHIP	10	5%	1/16W	R1136	1-218-985-11	RES-CHIP	470K	5%	1/16W
R1058	1-218-929-11	RES-CHIP	10	5%	1/16W	R1137	1-208-931-11	METAL CHIP	68K	0.50%	1/16W
R1059	1-218-990-81	SHORT CHIP				R1138	1-218-990-81	SHORT CHIP			
R1060	1-218-929-11	RES-CHIP	10	5%	1/16W	R1139	1-208-703-11	METAL CHIP	6.8K	0.50%	1/16W
R1061	1-218-990-81	SHORT CHIP				R1140	1-218-933-11	RES-CHIP	22	5%	1/16W
R1064	1-218-990-81	SHORT CHIP				R1141	1-218-933-11	RES-CHIP	22	5%	1/16W
R1065	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R1142	1-218-933-11	RES-CHIP	22	5%	1/16W
R1066	1-218-970-11	RES-CHIP	27K	5%	1/16W	R1143	1-218-933-11	RES-CHIP	22	5%	1/16W
R1067	1-218-941-81	RES-CHIP	100	5%	1/16W	R1148	1-218-929-11	RES-CHIP	10	5%	1/16W
R1070	1-208-929-81	METAL CHIP	56K	0.50%	1/16W	R1149	1-218-929-11	RES-CHIP	10	5%	1/16W
R1072	1-218-949-11	RES-CHIP	470	5%	1/16W	R1156	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1073	1-208-939-11	METAL CHIP	150K	0.50%	1/16W	R1159	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1076	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R1160	1-218-990-81	SHORT CHIP			
R1077	1-218-989-11	RES-CHIP	1M	5%	1/16W	R1161	1-208-927-11	METAL CHIP	47K	0.50%	1/16W
R1078	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1162	1-218-990-81	SHORT CHIP			
R1079	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1163	1-208-927-11	METAL CHIP	47K	0.50%	1/16W
R1086	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1165	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1087	1-208-935-11	METAL CHIP	100K	0.50%	1/16W	R1167	1-208-905-11	METAL CHIP	5.6K	0.50%	1/16W
R1088	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1169	1-218-990-81	SHORT CHIP			
R1089	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1175	1-218-990-81	SHORT CHIP			
R1090	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R1200	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1091	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R1201	1-218-947-11	RES-CHIP	330	5%	1/16W
R1093	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W	R1202	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1094	1-218-990-81	SHORT CHIP				R1203	1-218-941-81	RES-CHIP	100	5%	1/16W

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

TUU2 UB1

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES	
R1205	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	ACCESSORIES AND PACKING				
R1207	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	⚠	1-832-937-11	AC POWER-SUPPLY CORD SET		
R1208	1-218-953-11	RES-CHIP	1K	5%	1/16W		*	X-2186-607-1	LOCK ASSEMBLY, RUDDER (Contains the 3 items below)	
R1209	1-218-961-11	RES-CHIP	4.7K	5%	1/16W			X-2186-602-1	BAG ASSEMBLY, RUDDER LOCK (L)	
R1211	1-208-927-11	METAL CHIP	47K	0.50%	1/16W			2-593-320-02	SCREW, CION (M6X18)	
								2-580-663-01	SCREW, WOOD 3.8X20	
R1300	1-218-959-11	RES-CHIP	3.3K	5%	1/16W		2-888-349-01	BAG, PROTECTION		
R1301	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	*	3-270-344-01	CARTON, INDIVIDUAL (KDL-52XBR4 ONLY)		
R1302	1-218-958-11	RES-CHIP	2.7K	5%	1/16W					
R1303	1-208-911-11	METAL CHIP	10K	0.50%	1/16W	*	3-270-346-01	CARTON, INDIVIDUAL (KDL-52XBR5 ONLY)		
R1400	1-218-965-11	RES-CHIP	10K	5%	1/16W		2-595-155-02	CLAMP		
R1401	1-218-965-11	RES-CHIP	10K	5%	1/16W	*	2-890-404-01	CUSHION, FRONT LOWER		
R1402	1-218-965-11	RES-CHIP	10K	5%	1/16W	*	2-699-143-02	CUSHION, LOWER		
<u>CRYSTAL</u>						*	3-273-813-01	CUSHION, UPPER		
X1000	1-813-946-21	VIBRATOR, CRYSTAL					3-214-428-13	MANUAL, INSTRUCTION (ENGLSIH VERSION)		
A2101	1-694-974-21	CONTACT TERMINAL					3-214-428-22	MANUAL, INSTRUCTION (FRENCH VERSION)		
A2102	1-694-974-21	CONTACT TERMINAL					3-214-428-32	MANUAL, INSTRUCTION (SPANISH VERSION)		
A2103	1-694-974-21	CONTACT TERMINAL					3-214-429-11	GUIDE, QUICK SET UP (ENGLSIH VERSION)		
A2104	1-694-974-21	CONTACT TERMINAL					3-214-429-21	GUIDE, QUICK SET UP (FRENCH VERSION)		
A4700	1-694-974-21	CONTACT TERMINAL					3-214-429-31	GUIDE, QUICK SET UP (SPANISH VERSION)		
A4701	1-694-974-21	CONTACT TERMINAL				*	3-276-781-01	SHEET, PROTECTION (KDL-52XBR5 ONLY)		
A4800	1-694-802-21	CONTACT TERMINAL					3-274-931-11	SHEET, PROTECTION (KDL-52XBR5 ONLY)		
A4801	1-694-802-21	CONTACT TERMINAL					2-897-996-01	SHEET, PROTECTION		
A4900	1-694-974-21	CONTACT TERMINAL				*	3-270-345-01	TRAY		
A4901	1-694-974-21	CONTACT TERMINAL				*	2-699-141-01	TRAY, TOP		
A4902	1-694-974-21	CONTACT TERMINAL								
A4903	1-694-974-21	CONTACT TERMINAL								
A4905	1-694-974-21	CONTACT TERMINAL								

UB1

A-1257-224-A UB1 BOARD, COMPLETE




(The UB1 Board contains critical adjustment data, therefore, if service is required, complete board replacement is the repair method.)

REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
COLORED BEZELS				MISCELLANEOUS			
The Optional Colored Bezels listed below are for the KDL-52XBR4 model only.				1-910-038-18 CONNECTOR ASSEMBLY (LUG)			
The Driver, Instruction Manual, and Screw Assembly below are necessary to replace a colored bezel.				2-580-626-01 SCREW, SP 4-40 UNC			
	2-687-996-01	DRIVER (Used to remove screws from Bezel)		7-682-948-01 SCREW +PSW 3X8			
	2-889-150-01	INSTRUCTION MANUAL		2-580-629-01 SCREW, +BVST 3X8			
	X-2149-660-1	SCREW ASSEMBLY		2-580-654-01 SCREW, +PWTP2 4X1			
CHAMPAGNE GOLD				REMOTE COMMANDER			
	X-2179-332-1	BEZEL ASSEMBLY		1-480-301-11 REMOTE COMMANDER (RM-YD017)			
	3-218-763-01	STAND COVER		9-885-114-46 COVER SLIDE (BATTERY COVER RM-YD017)			
METALLIC ROSE							
	X-2179-335-1	BEZEL ASSEMBLY					
	3-218-763-11	STAND COVER					
SILVER							
	X-2109-694-1	BEZEL ASSEMBLY					
	2-682-363-01	STAND COVER					
BLACK							
	X-2186-533-1	BEZEL ASSEMBLY					
	3-218-763-21	STAND COVER					

APPENDIX A: ENCRYPTION KEY COMPONENTS

Encryption key components developed by Sony Corporation contain confidential information, and shall be handled under the non-disclosure obligations provided in the applicable agreement with Sony Corporation (and/or its subsidiary).

As part of this agreement specific instructions must be adhered to whenever a Circuit Board containing encryption key components is repaired and/or replaced pursuant to the following:

- 1) In the service manual the Circuit Board(s) containing encryption key components shall be identified with a red outline and a .
- 2) Only repair boards or components listed in the service manual shall be utilized for replacement and/or repair.
- 3) Disassembly, decryption, or reverse-engineering component(s) is strictly prohibited.
- 4) Any board in which the Servicer replaces an encryption key component must be placed back into the set it originally came from and the replaced defective component **MUST BE DESTROYED**. Boards cannot be swapped.
- 5) If a Circuit Board identified with a red outline and a  in the service manual is deemed to be defective:
 - a) and if a core charge is imposed and is covered under the product warranty, the defective un-repaired or modified board **MUST BE RETURNED** to Sony.
 - b) and if the core charge is **NOT** covered under the product warranty, the defective un-repaired or modified board **MUST BE DESTROYED**.
- 5) If a unit is destroyed (such as field scrap), the Circuit Board identified with a red outline and a  in the service manual **MUST BE DESTROYED**.

In an effort to reduce the size of this pdf file the tiled schematics are not attached to this Service Manual. To receive a complete set of the tiled schematics for this manual please submit a request to the Service Promotion Department at Service_Promotion@am.sony.com.